

[Manuals.plus](#) /

› [SupplySource](#) /

› SupplySource 12V AC/DC Adapter User Manual for Sharper Image SI677 S1677 Sound Soother

SupplySource SI677 S1677

SupplySource 12V AC/DC Adapter User Manual

For Sharper Image Design SI677 S1677 Sound Soother 20 Therapy

1. INTRODUCTION AND OVERVIEW

This manual provides instructions for the safe and effective use of your SupplySource 12V AC/DC Adapter. This adapter is specifically designed to provide power to Sharper Image Design SI677 and S1677 Sound Soother 20 Therapy devices.

The adapter incorporates multiple safety features to protect your device and ensure reliable operation. These include safeguards against incorrect voltage, short circuits, and internal overheating.

BUILT IN WITH SAFETY ELECTRONICS



Over Charge
Protection



Over Voltage
Protection



Short-circuit
Protection



Over Current
Protection



Over Temp
Protection



24 Months
Warranty



Image 1: The SupplySource 12V AC/DC Adapter highlighting its built-in safety electronics, including protection against overcharge, over voltage, short-circuit, over current, and over temperature. It also indicates a 24-month warranty.

2. SETUP

Before connecting the adapter, ensure that the DC output voltage (12V) and the tip size of this adapter match the requirements of your Sharper Image Sound Soother device. Using an adapter with incorrect specifications can damage your device.

1. Locate the power input port on your Sharper Image Design SI677 or S1677 Sound Soother device.
2. Connect the DC output plug of the SupplySource adapter firmly into the device's power input port.
3. Plug the AC input prongs of the adapter into a standard 100-240V wall outlet.
4. Confirm that your device powers on as expected.



Image 2: The SupplySource 12V AC/DC Adapter, illustrating its compact design and a cable length of 4 feet (approximately 1.2 meters), which provides flexibility for placement.

3. OPERATING INSTRUCTIONS

Once connected, the adapter provides continuous 12V DC power to your Sharper Image Sound Soother. No further user interaction is required for the adapter itself during operation.

- Ensure the adapter is placed in a location with adequate ventilation to prevent overheating, especially during prolonged use.
- Avoid placing the adapter on soft surfaces like carpets or bedding that can block ventilation openings.
- Do not cover the adapter with any materials while it is in use.

4. MAINTENANCE

The SupplySource 12V AC/DC Adapter requires minimal maintenance.

- **Cleaning:** Disconnect the adapter from both the wall outlet and your device before cleaning. Use a dry, soft cloth to

wipe the exterior. Do not use liquid cleaners or solvents.

- **Storage:** When not in use for extended periods, store the adapter in a cool, dry place. Avoid wrapping the cable too tightly around the adapter body to prevent damage to the cable.
- **Ventilation:** Always ensure the adapter has suitable ventilation during operation. Do not place it on skin products or other materials that could impede airflow.

5. TROUBLESHOOTING

If your device is not receiving power, consider the following:

- **No Power:**
 - Check that the adapter is securely plugged into both the wall outlet and your Sharper Image Sound Soother device.
 - Verify that the wall outlet is functional by testing it with another device.
 - Ensure the adapter's specifications (12V DC output, correct tip size) match your device's requirements.
- **Intermittent Power:**
 - Inspect the adapter cable for any visible damage, kinks, or frayed wires. A damaged cable should not be used.
 - Ensure the connections are firm and not loose.
- **Adapter Overheating:**
 - Disconnect the adapter immediately.
 - Ensure it is in a well-ventilated area and not covered.
 - If overheating persists after ensuring proper ventilation, discontinue use and contact support.

The adapter is designed with safety features against incorrect voltage, short circuits, and internal overheating. If these protections are triggered, the adapter may cease to function to prevent damage.

6. SPECIFICATIONS

Input Voltage Range	100-240V AC
Output Voltage	12V DC
Frequency Range	60 Hz
Main Power Connector Type	2 Pin (US Standard)
Material	Metal, Plastic
Safety Certifications	CE, FCC
Cable Length	4 Feet (approx. 1.2 meters)
UPC	760207871475

7. WARRANTY AND SUPPORT

This SupplySource 12V AC/DC Adapter comes with a**24-month warranty** from the date of purchase, covering manufacturing defects. Please retain your proof of purchase for warranty claims.

For technical support, troubleshooting assistance, or warranty inquiries, please contact the seller, Power Supply Source, through the platform where the purchase was made. Provide your order details and a clear description of the issue to

facilitate prompt assistance.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question