

[manuals.plus](#) /

› [Prtukyt](#) /

› [Prtukyt 6S Wireless Headphones User Manual](#)

Prtukyt 6S

Prtukyt 6S Wireless Headphones User Manual

Model: 6S | Brand: Prtukyt

INTRODUCTION

Thank you for choosing the Prtukyt 6S Wireless Headphones. This manual provides detailed instructions on how to set up, operate, and maintain your headphones to ensure optimal performance and longevity. Please read this manual thoroughly before using the product.



Image: Prtukyt 6S Wireless Headphones in black and red, showcasing the overall design.

KEY FEATURES

- HI-FI Stereo Sound:** High-definition audio with deep bass and crystal-clear treble, powered by a 57mm driver for precise sound reproduction.
- Advanced Bluetooth 5.0:** Ensures fast, stable connections and low latency for audio/video streaming.
- Long Battery Life:** Up to 40 hours of continuous playtime on a single charge, thanks to a 500mAh lithium-polymer battery.
- Comfortable Design:** Features super soft, skin-texture simulating ear cushions and an adjustable, padded headband for extended wear comfort.
- Foldable and Portable:** Ergonomic, foldable design for easy storage and transport, ideal for travel and daily use.

- **Multi-Mode Playback:** Supports wireless Bluetooth, wired 3.5mm audio connection, Micro SD/TF card playback, and FM radio.
- **Built-in Microphone:** High-quality microphone for clear, hands-free calls.



Image: Overview of the headphones' key features, including Hi-Fi sound, comfortable earmuffs, radio receiver, long battery life, foldable design, and HD call capability.

Powerful Performance

wireless



HI-FI SOUND



57MM DRIVER



EXTRA BASS

Image: Close-up of the headphone earcup highlighting the Bluetooth 5.0 chip, Hi-Fi sound, 57mm driver, and extra bass capabilities.

PACKAGE CONTENTS

Please check the box for the following items:

- Prtukyt 6S Wireless Headphones
- USB Charging Cable
- 3.5mm Audio Cable
- User Manual



Image: Visual representation of the items included in the product packaging: the headphones, a USB charging cable, and a 3.5mm audio cable.

SETUP

1. Charging the Headphones

Before first use, fully charge the headphones. A full charge takes approximately 3 hours and provides up to 40 hours of playtime.

1. Connect the small end of the USB charging cable to the charging port on the headphone earcup.
2. Connect the larger end of the USB charging cable to a USB power adapter (not included) or a computer's USB port.
3. The LED indicator light will show charging status (e.g., red for charging, off when fully charged).



Image: Visual representation of the headphones' long battery life, indicating up to 40 hours of playtime on a single charge.

2. Bluetooth Pairing

Pair your headphones with your Bluetooth-enabled device (smartphone, tablet, PC).

1. Ensure the headphones are charged and turned off.
2. Press and hold the Power/Multi-function button until the LED indicator flashes blue and red alternately, indicating pairing mode.
3. On your device, enable Bluetooth and search for available devices.
4. Select "6S" from the list of found devices.
5. Once paired, the LED indicator will flash blue slowly, and you will hear a confirmation tone.

NEVER POWER OFF

Don't worry about power shortage when traveling long distances.



Image: Demonstrates both wireless Bluetooth connection (up to 10m range) and wired connection options for the headphones.

3. Wired Connection (Aux Mode)

Use the included 3.5mm audio cable for a wired connection, especially when the battery is low or for non-Bluetooth devices.

1. Plug one end of the 3.5mm audio cable into the audio input port on the headphone earcup.
2. Plug the other end into the 3.5mm audio jack of your device.
3. The headphones will automatically switch to wired mode.

4. Micro SD/TF Card Playback

Insert a Micro SD/TF card loaded with MP3 audio files into the designated slot on the headphones.

1. Locate the Micro SD/TF card slot on the headphone earcup.
2. Gently insert the Micro SD/TF card until it clicks into place.
3. The headphones will automatically switch to TF card playback mode. Use the control buttons to navigate tracks.

5. FM Radio Mode

The headphones can receive FM radio signals. For best reception, ensure the 3.5mm audio cable is plugged in, as it acts as an antenna.

1. Turn on the headphones.
2. Press the "M" (Mode) button to switch to FM radio mode.
3. Press the Play/Pause button to auto-scan and save available FM stations.
4. Use the Previous/Next track buttons to switch between saved stations.

OPERATING INSTRUCTIONS

Familiarize yourself with the control buttons located on the earcup for easy operation.



Image: Detailed diagram showing the location and function of each button on the headphone earcup, including power, track control, volume, mode, and call handling.

| Button/Action | Function |
|--|---|
| Power Button (On/Off) | Press and hold to power on/off. |
| Play/Pause / Answer/Hang Up | Press once to play/pause music. Press once to answer/end a call. Press and hold to reject a call. |
| Previous Song / Volume Down (-) | Short press for previous song. Long press to decrease volume. |
| Next Song / Volume Up (+) | Short press for next song. Long press to increase volume. |
| Mode Button (M) | Press to switch between Bluetooth, TF Card, and FM Radio modes. |
| Audio Cable Link Hole | Connect 3.5mm audio cable for wired playback. |

MAINTENANCE

- Cleaning:** Use a soft, dry cloth to clean the headphones. Do not use abrasive cleaners or solvents.
- Storage:** When not in use, store the headphones in a cool, dry place, away from direct sunlight and extreme temperatures. The foldable design allows for compact storage.
- Battery Care:** To prolong battery life, avoid fully discharging the headphones frequently. Charge them regularly, even if not in use for extended periods.

- **Avoid Moisture:** Do not expose the headphones to water or excessive moisture.



Image: The headphones in their folded state, illustrating their compact and portable design for easy carrying and storage.

TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|------------------------------------|---|---|
| Headphones do not power on. | Low battery. | Charge the headphones fully. |
| Cannot pair with Bluetooth device. | Headphones not in pairing mode; device Bluetooth off; too far from device. | Ensure headphones are in pairing mode (flashing blue/red). Turn on Bluetooth on your device. Move headphones closer to the device (within 10m). |
| No sound in Bluetooth mode. | Volume too low; not properly paired; wrong audio output selected on device. | Increase headphone and device volume. Re-pair the headphones. Select "6S" as the audio output on your device. |
| Poor FM radio reception. | No antenna connected; weak signal. | Plug in the 3.5mm audio cable (acts as antenna). Try auto-scanning again. Move to an area with better signal. |
| Micro SD/TF card not recognized. | Card not inserted correctly; unsupported format. | Re-insert the card firmly. Ensure card contains MP3 files. |

SPECIFICATIONS

| Feature | Detail |
|-----------------------------------|--------------------------|
| Model Name | 6S |
| Brand | Prtuky |
| Connectivity Technology | Wireless (Bluetooth 5.0) |
| Wireless Communication Technology | Bluetooth |

| Feature | Detail |
|----------------|-----------------------------|
| Audio Input | 3.5mm Jack |
| Form Factor | Over-Ear (Circum-Auricular) |
| Battery Type | Lithium-polymer (500mAh) |
| Playtime | Up to 40 hours |
| Charging Time | Approx. 3 hours |
| Wireless Range | Up to 10 meters (33 feet) |
| Material | Leather, Plastic |
| Color | Black/Red |



Image: Illustration of a 40mm stereo driver, emphasizing its role in delivering sound purity and precision.

WARRANTY AND SUPPORT

Prtukyt provides a 12-month warranty for this product. If you encounter any issues or have questions regarding your Prtukyt 6S Wireless Headphones, please contact our customer support for assistance. We are committed to ensuring your satisfaction. *Contact information for support is typically found on the product packaging or the brand's official website.*