

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

Artiss FURNI-N-CDR-01-WH-AB

Artiss Chest of Drawers - User Manual

Model: FURNI-N-CDR-01-WH-AB

INTRODUCTION

Thank you for choosing the Artiss Chest of Drawers. This versatile furniture piece is designed to provide ample storage and complement various home décors. Crafted from durable materials, it offers a practical and elegant solution for organizing your clothing and essentials in bedrooms, living rooms, hallways, or entryways. This manual provides essential information for safe assembly, operation, and maintenance of your new chest of drawers.



Image: The Artiss 6-Drawer Chest of Drawers in white, showcasing its clean lines and six spacious drawers.

SAFETY INFORMATION

Please read all safety warnings and instructions carefully before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- Adult Assembly Required:** This product requires adult assembly. Keep small parts and packaging materials away from children.
- Stable Placement:** Always place the chest of drawers on a flat, level, and stable surface.
- Anti-Tip Device:** It is highly recommended to use the included anti-tip device to secure the chest to a wall. This prevents accidental tipping, especially in households with children.
- Weight Distribution:** Distribute weight evenly across drawers. Avoid placing excessively heavy items in upper drawers to maintain stability.
- Do Not Climb:** Do not allow children to climb on or play with the chest of drawers.
- Handle with Care:** When moving the assembled unit, lift it carefully. Do not drag, as this may damage the base or structure.

PARTS LIST

Before beginning assembly, ensure all parts listed below are present and undamaged. If any parts are missing or damaged, do not proceed with assembly. Contact customer support for assistance.

Part	Description	Quantity
A	Top Panel	1
B	Side Panels	2
C	Base Panel	1
D	Back Panel	1
E	Drawer Fronts	6
F	Drawer Sides	12
G	Drawer Backs	6
H	Drawer Bases	6
I	Drawer Runners (Pairs)	6
J	Handles	6
K	Hardware Pack (Screws, Dowels, Cam Locks, Anti-tip kit)	1

Tools Required (Not Included): Phillips head screwdriver, Hammer, Measuring tape (optional).

ASSEMBLY INSTRUCTIONS

Follow these steps carefully. It is recommended to assemble the unit on a soft, clean surface to prevent scratches.

1. Prepare the Main Frame:

Attach the side panels (B) to the base panel (C) and the top panel (A) using the provided dowels and cam locks from the hardware pack (K). Ensure all connections are secure.

2. Install Back Panel:

Slide the back panel (D) into the grooves on the main frame. Secure it with small nails or screws from the hardware pack (K) along the edges.

3. Attach Cabinet Runners:

Identify the cabinet portion of the drawer runners (I). These are typically marked "L" and "R" for left and right. Securely screw these runners to the inside of the main frame, ensuring they are level and aligned. Refer to the diagram for correct orientation.

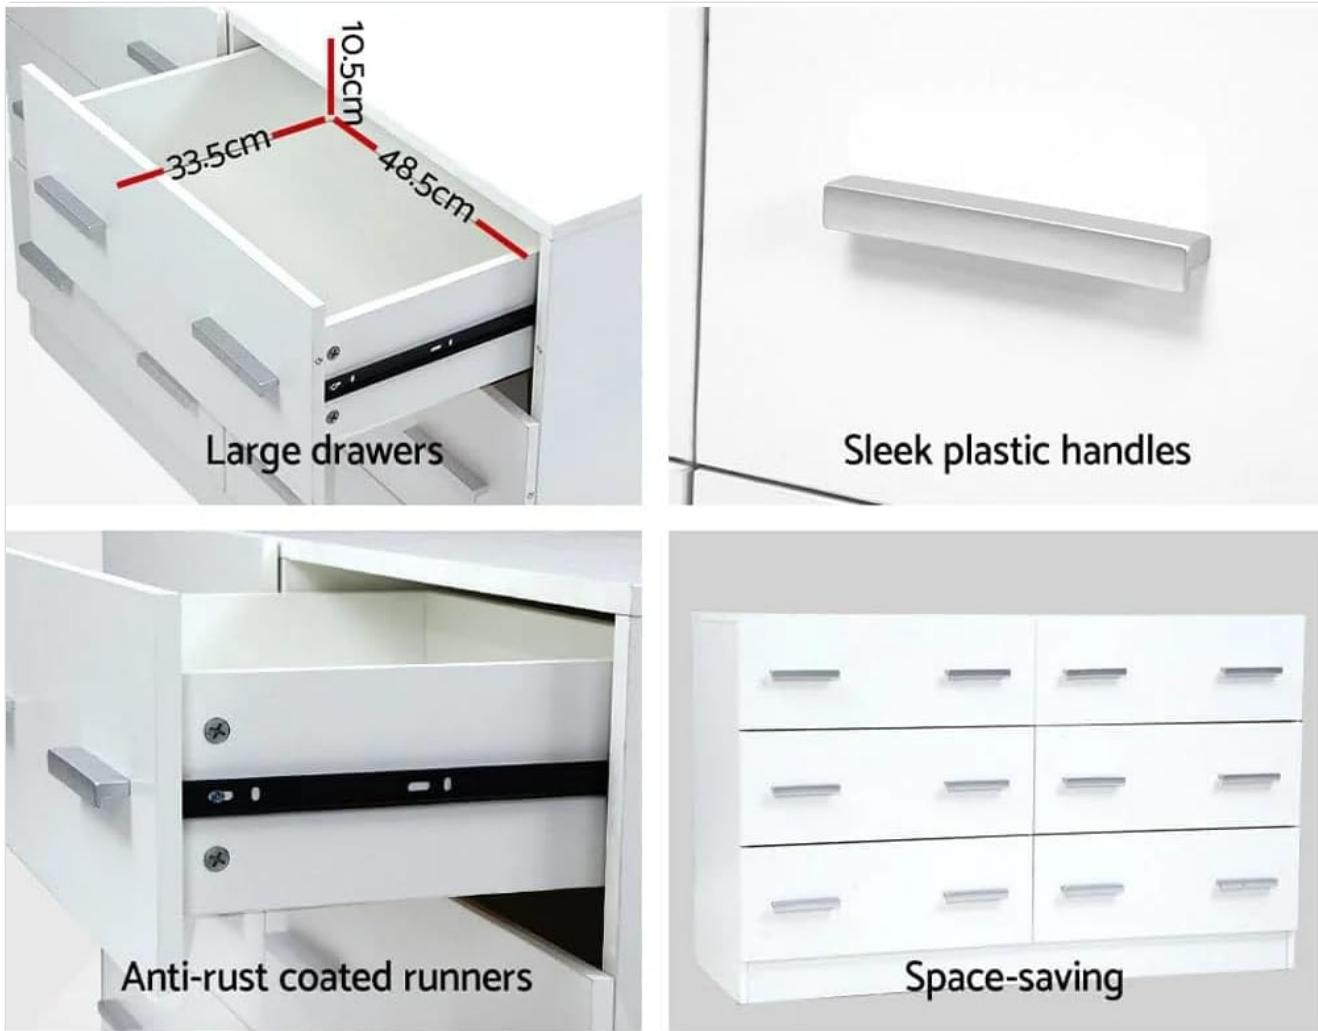


Image: Close-up view showing the sleek plastic handles and anti-rust coated drawer runners, essential for correct assembly.

4. Assemble Drawers (Repeat for all 6):

- Attach drawer sides (F) to the drawer front (E) and drawer back (G) using dowels and cam locks. Ensure the grooves for the drawer base are facing inwards and downwards.
- Slide the drawer base (H) into the grooves.
- Attach the drawer portion of the runners (I) to the sides of the assembled drawer box. Pay close attention to the orientation; the locking mechanism should face the front of the drawer.
- Secure the handles (J) to the drawer fronts (E) using the screws provided.

5. Insert Drawers:

Carefully align the drawer runners with the cabinet runners and push the drawers into place until they click or slide smoothly. If a drawer does not slide smoothly, remove it and re-check the runner alignment and installation.

Ample storage

Six drawers



Image: The chest of drawers with all six drawers extended, demonstrating the ample storage capacity and smooth operation when correctly assembled.

6. Install Anti-Tip Device:

Using the anti-tip kit from the hardware pack (K), secure the chest of drawers to a wall stud. Follow the specific instructions provided with the anti-tip kit. This step is crucial for safety.

OPERATING INSTRUCTIONS

The Artiss Chest of Drawers is designed for straightforward use.

- **Opening Drawers:** Gently pull the handles to open the drawers. Avoid forceful pulling or yanking.
- **Closing Drawers:** Push the drawers firmly but gently until they are fully closed and flush with the cabinet frame.
- **Loading Drawers:** Distribute items evenly within each drawer. Avoid overloading drawers, as this can strain the runners and affect smooth operation. The drawers are designed for clothing, linens, and other light to medium-weight items.

MAINTENANCE

Proper care will extend the life and appearance of your Artiss Chest of Drawers.

- **Cleaning:** Wipe surfaces with a soft, damp cloth. Avoid abrasive cleaners, harsh chemicals, or excessive moisture, which can damage the melamine finish.
- **Spills:** Clean up spills immediately to prevent staining or damage to the material.
- **Hardware Check:** Periodically check all screws and fittings to ensure they remain tight. Re-tighten if necessary, but

do not overtighten.

- **Runner Lubrication:** If drawer runners become stiff over time, a small amount of silicone spray or paraffin wax can be applied to the tracks to restore smooth operation.
- **Sunlight Exposure:** Avoid prolonged direct sunlight exposure, which can cause fading or discoloration of the finish.

TROUBLESHOOTING

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Drawers do not close fully or are misaligned.	Incorrect runner installation; loose screws; uneven assembly.	<ul style="list-style-type: none">◦ Remove the drawer and re-check the orientation of both the cabinet and drawer runners. Ensure they are installed correctly and level.◦ Tighten all screws on the runners and drawer components.◦ Slightly loosen screws on drawer fronts or runners to allow for minor adjustments, then re-tighten once aligned.
Drawers are stiff or difficult to open/close.	Lack of lubrication; debris in runners; overloaded drawer.	<ul style="list-style-type: none">◦ Clean the drawer runners to remove any dust or debris.◦ Apply a small amount of silicone spray or paraffin wax to the runners.◦ Reduce the weight of items in the drawer.
Unit wobbles or feels unstable.	Uneven floor; loose connections; anti-tip device not installed.	<ul style="list-style-type: none">◦ Ensure the unit is on a flat, level surface. Use shims if necessary.◦ Check and tighten all assembly screws and cam locks.◦ Install the anti-tip device securely to a wall stud.

SPECIFICATIONS

- **Model:** FURNI-N-CDR-01-WH-AB
- **Brand:** Artiss
- **Color:** White
- **Material:** Engineered Wood, Melamine
- **Product Dimensions (Overall):** 110.5 cm (W) x 42 cm (D) x 69 cm (H)
- **Drawer Internal Dimensions (Approx.):** 48.5 cm (W) x 33.5 cm (D) x 10.5 cm (H) (based on image PT05)
- **Item Weight:** Approximately 41.3 kg
- **Number of Drawers:** 6
- **Special Features:** Sturdy construction, elegant handles, anti-rust coated runners.



Image: Dimensional overview of the Artiss chest of drawers, showing overall width, depth, and height.

WARRANTY AND SUPPORT

Artiss products come with a standard warranty against manufacturing defects. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Artiss website. If you require assistance with assembly, have missing parts, or encounter any issues not covered in this manual, please contact Artiss customer support through their official channels or the retailer from whom you purchased the product.

For more information, visit the [Artiss Store on Amazon](#).