

Himimi 5353

Himimi Digital Electronic Security Safe Box User Manual

Model: 5353 | Brand: Himimi

1. INTRODUCTION

Thank you for choosing the Himimi Digital Electronic Security Safe Box. This safe is designed to provide secure storage for your valuables, including jewelry, money, cash, and important documents. It features a robust steel construction, a digital keypad for easy access, and an override key system for emergency entry. Please read this manual carefully to ensure proper setup, operation, and maintenance of your safe.

2. PACKAGE CONTENTS

Please check the package to ensure all items are present:

- 1 x Himimi Digital Electronic Security Safe Box
- 2 x Override Keys
- 1 x User Manual (this document)
- Mounting Hardware (bolts for securing the safe)

3. SETUP

3.1 Battery Installation

The safe requires 4 AA batteries (not included) to power the digital keypad. Ensure the batteries are inserted correctly according to polarity markings.

1. Open the safe door using the override key (refer to section 4.2).
2. Locate the battery compartment on the inside of the safe door.
3. Insert 4 new AA batteries, observing the correct polarity (+/-).
4. Close the battery compartment cover.

Led Security Digital Keypad

4 AA Batteries Operated



Figure 1: Location of the battery compartment and code reset button inside the safe door.

3.2 Initial Opening

For the first use, or if the digital code is unknown, use the override key to open the safe.

1. Locate the keyhole, usually hidden behind a small cover on the keypad panel.
2. Insert one of the provided override keys into the keyhole.
3. Turn the key clockwise to unlock the safe.
4. While holding the key turned, rotate the knob on the keypad clockwise to open the door.

2 Ways to Open The Safe



Figure 2: Two methods for opening the safe: digital code and override key.

3.3 Mounting the Safe

The safe can be secured to a wall or floor using the pre-drilled holes and included mounting hardware for added security.

1. Choose a suitable location for mounting.
2. Mark the drilling points through the pre-drilled holes inside the safe.
3. Drill pilot holes into the wall or floor.
4. Align the safe with the drilled holes and secure it using the provided bolts.

4. OPERATING THE SAFE

4.1 Opening with Digital Code

To open the safe using the digital keypad:

1. Enter your personal 3-8 digit code (the default code is typically "1234").
2. Press the "#" button to confirm.
3. Within 5 seconds, rotate the knob on the keypad clockwise to open the safe door.



Figure 3: Entering a code on the digital keypad.

4.2 Setting a New User Code

You can change the default code to a personal code for enhanced security.

1. With the safe door open, locate and press the red reset button hidden behind the door (see Figure 1).
2. The keypad will beep, and the indicator light will flash.
3. Enter your new 3-8 digit code.
4. Press the "#" button to confirm. The safe will beep again, indicating the new code is set.

4.3 Closing and Locking the Safe

To close and lock the safe:

1. Close the safe door.
2. Rotate the knob on the keypad counter-clockwise until the door is securely locked.

4.4 Instructional Video

Your browser does not support the video tag.

Video 1: This video demonstrates the two ways to open the Himimi Digital Electronic Security Safe Box (using a personal code and override keys) and how to reset the code.

5. MAINTENANCE

5.1 Battery Replacement

When the battery low indicator lights up, or if the keypad becomes unresponsive, replace the batteries immediately. Always use 4 new AA batteries.

5.2 Cleaning

To clean the safe, use a soft, damp cloth. Avoid using abrasive cleaners or harsh chemicals, as these can damage the finish or electronic components.

6. TROUBLESHOOTING

- **Safe does not open with digital code:**
Ensure batteries are fresh and correctly installed. Verify that the correct code is being entered. If the code is forgotten, use the override key to open the safe and reset the code.
- **Keypad is unresponsive:**
This usually indicates low or dead batteries. Replace all 4 AA batteries.
- **Override key does not work:**
Ensure the key is fully inserted and turned correctly. Do not force the key. If the lock mechanism feels stiff, a small amount of graphite lubricant can be applied to the keyhole.
- **Safe door does not close properly:**
Check for any obstructions around the door frame or locking bolts. Ensure the safe is on a level surface.

7. SPECIFICATIONS

Feature	Detail
Brand	Himimi
Model Number	5353
Lock Type	Electronic, Key
Color	Black
Capacity	0.57 Cubic Feet
Material	Iron
Special Feature	Portable, Sensor Light
Mounting Type	Freestanding, Tabletop
Item Weight	19.18 Pounds
Product Dimensions	14 x 10 x 10 inches
Alarm	Anti-theft
Water Resistance Level	Not Water Resistant



Figure 4: Product dimensions of the Himimi Digital Electronic Security Safe Box.

Double steel locking bolts

Thickened Solid Wall Construction Design



Figure 5: Detail of the double steel locking bolts and door thickness.

8. WARRANTY AND SUPPORT

For warranty information, technical support, or any questions regarding your Himimi Digital Electronic Security Safe Box, please contact Himimi customer service. Refer to the product packaging or the Himimi official website for contact details.