

FocalTop CT-90325

FocalTop CT-90325 Replacement TV Remote Control User Manual

For Toshiba TV Models: 22SL410U, 24SL410U, 26C10, 26C10U, 26C100, 26C100U, 26C100U1, 6C100UM

INTRODUCTION

This manual provides instructions for the FocalTop CT-90325 replacement remote control. This remote is designed to be compatible with various Toshiba TV models, offering direct functionality without the need for complex programming. Please read this manual carefully to ensure proper use and longevity of your remote control.

SETUP

1. Battery Installation

The remote control requires two AAA batteries (not included). Follow these steps to install them:

1. Locate the battery compartment cover on the back of the remote control.
2. Press down on the tab and slide the cover off.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

2. Initial Use

This replacement remote control is pre-programmed for compatible Toshiba TV models. No additional programming or setup is required. Once batteries are installed, the remote is ready for immediate use.

OPERATING INSTRUCTIONS

Below is an overview of the remote control's buttons and their primary functions. Refer to the image for button identification.



SLEEP FREEZE PIC MODE PIC SIZE



TOSHIBA

© 2013 ShopJimmy.com, LLC

CT-90325

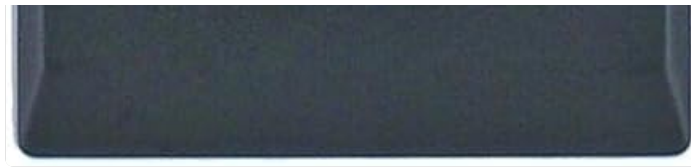


Image 1: Front view of the FocalTop CT-90325 replacement remote control. This image displays the full layout of all buttons, including power, input, number pad, volume, channel, navigation, and media playback controls. The remote is black with white and red button labels.

- **POWER (I/O)**: Turns the TV on or off.
- **INPUT**: Selects the video input source (e.g., HDMI 1, AV, Component).
- **SLEEP**: Sets the TV to turn off automatically after a specified time.
- **FREEZE**: Pauses the current image on the screen.
- **PIC MODE**: Adjusts picture modes (e.g., Standard, Movie, Dynamic).
- **PIC SIZE**: Changes the aspect ratio or picture size.
- **Number Buttons (0-9, 100)**: Directly select channels or input numbers.
- **FAV**: Accesses favorite channels.
- **VOL (+/-)**: Increases or decreases the volume level.
- **CH (Up/Down)**: Changes channels sequentially.
- **RECALL**: Returns to the previously viewed channel.
- **MUTE**: Silences the TV audio.
- **C.CAPTION**: Toggles closed captions on or off.
- **INFO**: Displays information about the current program or input.
- **CH RTN**: Returns to the previous channel.
- **Navigation Buttons (Up, Down, Left, Right, ENTER)**: Navigate through menus and confirm selections.
- **MENU**: Opens the TV's main menu.
- **BACK / CH**: Returns to the previous menu or channel.
- **NEXT / EXIT**: Moves to the next item or exits the current menu.
- **Media Playback Controls (EJECT, PAUSE/STEP, PLAY, STOP, SKIP, REW, FF)**: Control media playback functions for connected devices or TV features.

MAINTENANCE

Battery Replacement

When the remote control's range decreases or buttons become unresponsive, it is likely time to replace the batteries. Follow the battery installation steps outlined in the "Setup" section. Always replace both batteries at the same time with new AAA batteries.

Cleaning

To clean the remote control, use a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals or excessive moisture, as these can damage the remote's electronics.

Storage

Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures. If the remote will not be used for an extended period, it is recommended to remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote not responding:**
 - Check if the batteries are inserted correctly with the correct polarity (+/-).
 - Replace old batteries with new AAA batteries.

- Ensure there are no obstructions between the remote control and the TV's infrared sensor.
- Point the remote directly at the TV's sensor.
- **Specific buttons not working:**
 - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering with button presses.
 - If only certain buttons are affected, and battery replacement does not help, the remote may be damaged.
- **Short operating range:**
 - Replace the batteries. Low battery power can reduce the remote's effective range.
 - Ensure no strong light sources (like direct sunlight or bright fluorescent lights) are interfering with the TV's IR sensor.

SPECIFICATIONS

Brand	FocalTop
Model	CT-90325
Compatible Devices	Toshiba Televisions (Specific models listed in header)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Ergonomic design
Power Source	2 x AAA Batteries (not included)

ADDITIONAL INFORMATION

For further assistance or specific TV model inquiries not covered in this manual, please refer to your Toshiba TV's original user manual or contact FocalTop customer support.



Image 2: Angled view of the FocalTop CT-90325 replacement remote control, showing its ergonomic shape and button layout from a different perspective. This view highlights the slight curvature and texture of the remote.

