

[manuals.plus](#) /

› [xingzhihua](#) /

› [xingzhihua AKB74475480 Remote Control User Manual](#)

## xingzhihua AKB74475480

# xingzhihua AKB74475480 Remote Control User Manual

Model: **AKB74475480**

Brand: **xingzhihua**

## 1. INTRODUCTION

This manual provides comprehensive instructions for the xingzhihua AKB74475480 remote control. This remote is designed as a direct replacement for various LG LED TV models, including those originally using AKB73715603, AKB73715679, and AKB73715622 remote controls. It operates using infrared technology, offering a straightforward and reliable way to control your television.

**Important Note:** While this remote is a replacement for specific LG models, it is not universally compatible with all LG televisions. Please verify that the button layout and model numbers (AKB73715603, AKB73715679, AKB73715622) match your original remote control or TV's requirements before use to ensure full functionality.

## 2. PRODUCT OVERVIEW

The xingzhihua AKB74475480 remote control features a standard layout with clearly labeled buttons for intuitive operation. Below are images illustrating the front and back of the device.



**Figure 1:** Front view of the AKB74475480 remote control. This image displays the full array of buttons, including power, number keys, volume, channel, menu, navigation, and special function buttons, along with the model number AKB74475480 printed at the bottom.



**Figure 2:** Back view of the AKB74475480 remote control. This image highlights the battery compartment cover, which can be slid open to insert or replace batteries.

### 3. SETUP

---

#### 3.1 Installing Batteries

1. Locate the battery compartment on the back of the remote control (refer to Figure 2).
2. Slide the battery compartment cover downwards or in the direction indicated by an arrow to open it.
3. Insert two AAA batteries (not included), ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.

## 3.2 Initial Use

The xingzhihua AKB74475480 remote control operates via infrared (IR) technology. Once batteries are installed, it is generally ready for use with compatible LG LED TVs without any additional pairing steps. Simply point the remote control directly at your television's IR receiver.

## 4. OPERATING INSTRUCTIONS

---

To operate your television, ensure there is a clear line of sight between the remote control and the TV's infrared sensor. Press the desired button firmly. A brief overview of common button functions is provided below:

- **POWER (●)**: Turns the TV on or off.
- **NUMBER BUTTONS (0-9)**: Directly select TV channels.
- **VOL (+/-)**: Adjusts the volume level.
- **CH (▲/▼)**: Changes TV channels up or down.
- **MUTE**: Mutes or unmutes the TV audio.
- **INPUT / AV MODE**: Selects the input source (e.g., HDMI, AV).
- **MENU / SETTINGS**: Accesses the TV's main menu or settings.
- **NAVIGATION BUTTONS (◀ ▲ ▶ ▼)**: Navigate through menus and options.
- **OK**: Confirms a selection in menus.
- **BACK / EXIT**: Returns to the previous screen or exits the current menu.
- **Q.VIEW / LIST**: Accesses quick view or channel list.
- **FAV / GUIDE**: Accesses favorite channels or program guide.
- **P PAGE**: Page up/down in certain menus or teletext.
- **TEXT / T.OPT**: Accesses teletext or teletext options.
- **AD/\***: Audio Description or special function.
- **INDEX**: Accesses index function.
- **Colored Buttons (Red, Green, Yellow, Blue)**: These buttons typically correspond to specific functions within TV menus or interactive services, as indicated on the TV screen.

For detailed functionality of each button, please refer to your LG TV's original user manual, as button functions can vary slightly depending on the specific TV model.

## 5. MAINTENANCE

---

### 5.1 Cleaning

To clean the remote control, gently wipe its surface with a soft, dry cloth. For stubborn dirt, slightly dampen the cloth with water or a mild, non-abrasive cleaner. Avoid using harsh chemicals, solvents, or abrasive materials, as these can damage the remote's finish or internal components.

### 5.2 Battery Replacement

Replace batteries when the remote control becomes unresponsive or its range decreases significantly. Always replace both batteries at the same time with new ones of the same type (AAA). Do not mix old and new batteries, or different types of batteries, as this can lead to leakage or malfunction. Dispose of used batteries according to local regulations.

### 5.3 Storage

When not in use for extended periods, it is recommended to remove the batteries from the remote control to prevent potential leakage and damage. Store the remote in a cool, dry place away from direct sunlight and

extreme temperatures.

## 6. TROUBLESHOOTING

- **Remote not responding:**
  - Ensure the batteries are correctly inserted with the correct polarity (+/-).
  - Replace the batteries with fresh ones.
  - Check for any obstructions between the remote control and the TV's IR sensor.
  - Ensure you are within the effective operating range and pointing the remote directly at the TV.
- **Specific buttons not working:**
  - Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris.
  - Verify that your TV model is indeed compatible with this replacement remote, particularly if only certain advanced functions are not working.

## 7. SPECIFICATIONS

Feature	Detail
Model Number	AKB74475480
Brand	xingzhihua
Compatible Devices	LG LED Televisions (replacement for AKB73715603, AKB73715679, AKB73715622)
Connectivity Technology	Infrared (IR)
Controller Type	Button Control
Special Feature	Replacement Remote
Power Source	2 x AAA Batteries (not included)
Manufacturer	xingzhihua remote
ASIN	B07WS96J4Z
Date First Available	August 19, 2019

## 8. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or contact your retailer. The manufacturer, xingzhihua, typically provides support for product-related inquiries.