

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [TELEFUNKEN](#) /

› [Telefunken T-11-300-W Condenser Dryer User Manual](#)

## TELEFUNKEN T-11-300-W

# Telefunken T-11-300-W Condenser Dryer User Manual

Model: T-11-300-W | Brand: TELEFUNKEN

[Information](#) [Setup](#) [Operation](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#) [Introduction](#) [Safety](#)

## 1. INTRODUCTION

Thank you for choosing the Telefunken T-11-300-W Condenser Dryer. This manual provides essential information for the safe and efficient operation, installation, and maintenance of your appliance. Please read it thoroughly before first use and keep it for future reference.

This condenser dryer is designed for household use, offering a 7 kg capacity and a variety of programs to suit different fabric types and drying needs.

## 2. SAFETY INFORMATION

Always adhere to the following safety precautions to prevent personal injury or damage to the appliance.

### 2.1 General Safety

- Ensure the dryer is connected to a grounded power outlet.
- Do not operate the dryer with a damaged power cord or plug.
- Keep children and pets away from the appliance during operation.
- Do not dry unwashed items in the tumble dryer.
- Items that have been soiled with substances such as cooking oil, acetone, alcohol, petrol, kerosene, spot removers, turpentine, waxes, and wax removers should be washed in hot water with an extra amount of detergent before being dried in the tumble dryer.
- Do not install the dryer in an area exposed to direct sunlight or extreme temperatures.

### 2.2 Electrical Safety

- Before cleaning or maintenance, always unplug the appliance from the power supply.
- Do not pull the power cord to disconnect the appliance. Always grasp the plug firmly.

### 2.3 Installation Safety

- The dryer must be installed on a firm, level surface.
- Ensure adequate ventilation around the appliance. Do not block ventilation openings.
- Do not install the dryer behind a lockable door, a sliding door, or a door with a hinge on the opposite side to that of the tumble dryer, in such a way that a full opening of the tumble dryer door is restricted.

## 3. SETUP AND FIRST USE

### 3.1 Unpacking

Carefully remove the dryer from its packaging. Inspect for any damage during transit. Keep packaging materials out of reach of children.

### 3.2 Positioning the Dryer

Place the dryer on a stable, flat surface. Adjust the leveling feet to ensure the appliance is perfectly balanced. This will minimize vibrations and noise during operation.



Figure 1: Telefunken T-11-300-W Condenser Dryer with indicated dimensions (Height: 84.5cm, Width: 59.6cm, Depth: 56.3cm).

### 3.3 Electrical Connection

Connect the dryer to a suitable grounded electrical outlet. Refer to the specifications section for power requirements.

### 3.4 First Use

Before drying clothes for the first time, it is recommended to run a short cycle with a damp cloth to remove any manufacturing residues from the drum.

## 4. OPERATING THE DRYER

### 4.1 Control Panel Overview

The control panel consists of a program selection knob, an LED display, and function buttons.



Figure 2: Program selection knob with various drying options such as Cotton, Synthetics, Delicates, and special programs.



Figure 3: LED display showing remaining time and indicators for functions like "Empty Water Container", "Clean Filter", "Anti-crease", and "Child Lock".

## 4.2 Loading Laundry

Open the extra-large door ( $\varnothing$  47 cm) and load the laundry into the drum. Do not overload the dryer; ensure there is enough space for clothes to tumble freely.



Figure 4: The dryer's drum with the door open, highlighting the large opening for easy loading and unloading.

### 4.3 Program Selection

Turn the program selection knob to choose one of the 15 available programs:

- **Cotton Extra Dry:** For very thick cotton items.
- **Cotton Cupboard Dry:** For cotton items that can be put directly into the cupboard.
- **Cotton Iron Dry:** For cotton items that require ironing.
- **Synthetics Cupboard Dry:** For synthetic items that can be put directly into the cupboard.

- **Synthetics Iron Dry:** For synthetic items that require ironing.
- **Delicates:** For delicate fabrics requiring gentle drying.
- **Mix:** For mixed loads of cotton and synthetics.
- **Baby Clothes:** Gentle drying for baby garments.
- **Time Program:** Allows setting a specific drying duration.
- **Refresh:** For airing out clothes without heat.
- **Extra Quick 29 Min.:** Fast drying for small loads.
- **Shirts/Blouses 12 Min.:** Quick drying for shirts and blouses.
- **Sport:** For sportswear.
- **Wool Refresh:** For refreshing wool items.
- **Jeans:** Specific program for denim.

## 4.4 Additional Functions

- **Anti-Crease (Knitterschutz):** Reduces creasing by periodically tumbling the load after the cycle ends.
- **Child Lock (Kindersicherung):** Prevents accidental changes to settings during operation. Activate by pressing and holding the designated button (usually indicated on the panel).
- **Delay Start (Startvorwahl):** Allows you to set a delayed start time for the drying cycle.
- **Drum Reversal (Trommelreversierung):** The drum rotates in both directions to prevent tangling and ensure even drying.
- **Drum Lighting (Trommelbeleuchtung):** Illuminates the drum interior for better visibility when loading and unloading.

## 4.5 Starting a Cycle

After selecting the program and any desired additional functions, press the **Start/Pause** button to begin the drying cycle. The LED display will show the remaining time.

# 5. MAINTENANCE AND CARE

Regular maintenance ensures optimal performance and extends the lifespan of your dryer.

## 5.1 Cleaning the Lint Filter

The lint filter should be cleaned after every drying cycle. A clogged filter can reduce drying efficiency and increase energy consumption.

1. Open the dryer door.
2. Pull out the lint filter located inside the door opening.
3. Remove any accumulated lint by hand or with a soft brush.
4. Reinsert the filter firmly into its position.



Figure 5: View inside the dryer drum, indicating the position of the lint filter at the bottom of the door opening.

## 5.2 Emptying the Water Container

As a condenser dryer, water extracted from the laundry collects in a removable container. This container must be emptied after each cycle.

1. Locate the water container, typically at the top left of the control panel.
2. Pull out the container carefully.
3. Empty the collected water into a sink.
4. Push the container back into its slot until it clicks into place.

## 5.3 Cleaning the Condenser

The condenser unit should be cleaned periodically (e.g., monthly or every 20-30 cycles) to maintain drying efficiency. Refer to the full instruction manual for detailed steps on accessing and cleaning the condenser unit, which is usually located behind a lower panel.

## 5.4 Exterior Cleaning

Wipe the exterior of the dryer with a soft, damp cloth. Do not use abrasive cleaners or solvents.

## 6. TROUBLESHOOTING

Before contacting customer service, please check the following common issues and solutions:

Problem	Possible Cause	Solution
Dryer does not start.	Not plugged in; door not closed properly; program not selected; Start/Pause button not pressed.	Check power connection; ensure door is fully closed; select a program; press Start/Pause.
Clothes are not drying properly.	Lint filter clogged; water container full; condenser dirty; overloaded; incorrect program selected.	Clean lint filter; empty water container; clean condenser; reduce load size; select appropriate program.
Dryer is noisy.	Appliance not level; foreign objects in drum; loose components.	Adjust leveling feet; check drum for objects; contact service if noise persists.
"Empty Water Container" indicator is on.	Water container is full.	Empty the water container.
"Clean Filter" indicator is on.	Lint filter is clogged.	Clean the lint filter.

## 7. TECHNICAL SPECIFICATIONS

Feature	Detail
Model	T-11-300-W
Type	Condenser Dryer (Front-loader)
Capacity	7 kg
Dimensions (H x W x D)	84.5 cm x 59.6 cm x 56.3 cm
Weight	37.2 kg
Energy Efficiency Class	B

Feature	Detail
Annual Energy Consumption	504 kWh/year
Noise Level	65 dB(A)
Number of Programs	15
Special Features	LED Display, Drum Lighting, Drum Reversal, Anti-Crease, Remaining Time Display, Child Lock, Extra Large Door (Ø 47 cm)

## 8. WARRANTY AND SUPPORT

### 8.1 Manufacturer's Warranty

This Telefunken T-11-300-W Condenser Dryer is covered by the statutory warranty provided by the manufacturer. Please retain your proof of purchase for any warranty claims. The warranty covers defects in materials and workmanship under normal use.

### 8.2 Customer Support

For technical assistance, spare parts, or service requests, please contact Telefunken customer support. Contact details can typically be found on the official Telefunken website or on your purchase documentation.

When contacting support, please have your model number (T-11-300-W) and serial number (if applicable) ready.

© 2023 TELEFUNKEN. All rights reserved.


This manual is for informational purposes only. Specifications are subject to change without notice.

## Related Documents - T-11-300-W

	<p><a href="#">Miele T300 Series Clothes Dryer (Condenser) Technical Information</a></p> <p>Comprehensive technical information and service manual for the Miele T300 Series Condenser Clothes Dryer, covering construction, design, features, dimensions, electrical specifications, and fault diagnosis.</p>
	<p><a href="#">Haier 7kg 300 Series Sensor Vented Dryer (HDV70AWW1) Quick Reference Guide</a></p> <p>A quick reference guide for the Haier 7kg 300 Series Sensor Vented Dryer (HDV70AWW1), detailing its features, dimensions, specifications, and installation flexibility. This dryer utilizes auto-sensing technology and reverse tumble action for efficient and tangle-free drying.</p>
	<p><a href="#">Haier 7kg 300 Series Sensor Vented Dryer (HDV70AWW1) - Quick Reference Guide</a></p> <p>Quick reference guide for the Haier 7kg 300 Series Sensor Vented Dryer (HDV70AWW1), detailing its features, specifications, dimensions, and benefits like Auto-Sensing Technology and Reverse Tumble Action.</p>

	<p><a href="#">Haier 7kg 300 Series Sensor Vented Dryer - Quick Reference Guide</a></p> <p>Comprehensive overview of the Haier 7kg 300 Series Sensor Vented Dryer (HDV70AWW1), detailing its auto-sensing technology, 15 specialized dry cycles, reverse tumble action, flexible installation, and key specifications. Includes dimensions, warranty, and support information.</p>
	<p><a href="#">Continental Edison CE SL EV7 W Tumble Dryer User Manual</a></p> <p>User manual for the Continental Edison CE SL EV7 W 7kg evacuation tumble dryer, covering safety instructions, appliance description, installation, usage tips, drying programs, maintenance, troubleshooting, and technical specifications.</p>
	<p><a href="#">Haier 7kg 300 Series Heat Pump Dryer HDHPS70LW1 - Energy Efficient Laundry</a></p> <p>Discover the Haier 7kg 300 Series Heat Pump Dryer (HDHPS70LW1). Featuring a 7-star energy rating, auto-sensing technology, slimline design, and 10 specialised dry cycles for efficient and gentle fabric care.</p>

Documents - TELEFUNKEN – T-11-300-W

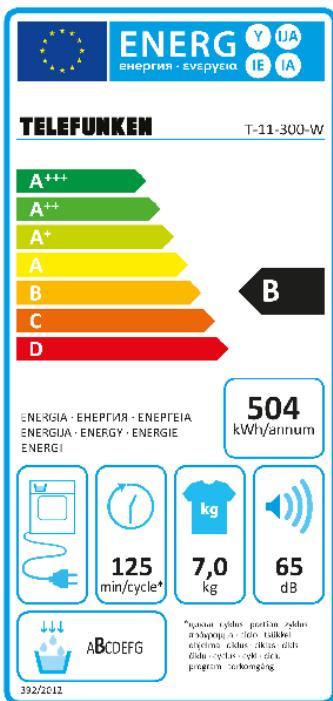

[\[pdf\] Label](#)

1872581 E Energelabel Telefunken T 11 300 W Kondenstrockner ab € 309 00 2023 Preisvergleich  
Geizhals Deutschland a3dfb0543c655be90b1118a331dbf2088d3c.gzhls at blob ldb 6 e b 5 |||

...

lang: score:12 filesize: 506.22 K page\_count: 1 document date: 2022-10-17