

[Manuals.plus](#) /

› [Festnight](#) /

› Festnight Portable Fabric Wardrobe 75x50x160 cm Instruction Manual

Festnight JSD4376388925919ON

Festnight Portable Fabric Wardrobe Instruction Manual

Model: JSD4376388925919ON

INTRODUCTION

Thank you for choosing the Festnight Portable Fabric Wardrobe. This manual provides essential information for the safe and efficient use of your new wardrobe. Please read these instructions carefully before assembly and use, and retain them for future reference.

Important Safety Information

Warning:

- Exercise caution with sharp edges during installation and use.
- Do not overload the organizer.
- To prevent tipping, ensure the wardrobe is firmly supported on the floor.
- Do not move the wardrobe once it is full.

PRODUCT OVERVIEW

The Festnight Portable Fabric Wardrobe is designed for convenient storage of clothes and other items. Its lightweight and minimalist design makes it suitable for various spaces. The wardrobe features a durable fabric cover and a sturdy frame.



Image: Front view of the Festnight Portable Fabric Wardrobe, highlighting key features such as the zipper closure and corner details.

PACKAGE CONTENTS

Upon opening the package, please verify that all components are present and undamaged. The package should contain:

- Fabric cover (1x)
- Metal frame components (various poles and connectors)
- Hanging rod (1x)
- Instruction manual (this document)

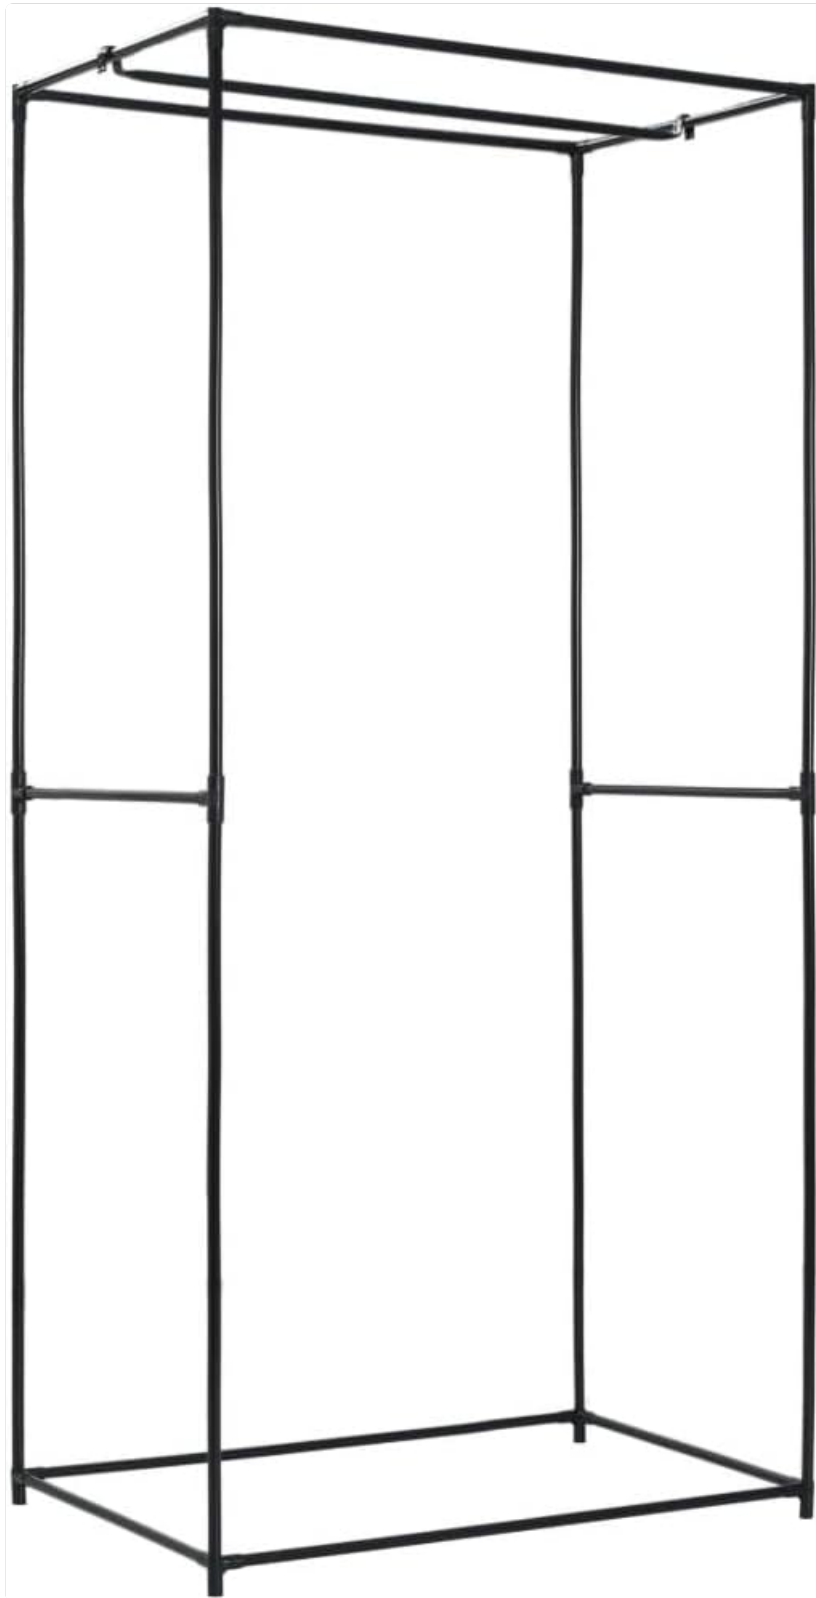


Image: The metal frame structure of the wardrobe before the fabric cover is applied.

SETUP INSTRUCTIONS

This wardrobe is designed for straightforward assembly. No special tools are required.

1. **Unpack Components:** Carefully remove all parts from the packaging and lay them out on a clean, flat surface.
2. **Assemble the Base Frame:** Connect the shortest metal poles to the corner connectors to form the rectangular base. Ensure all connections are secure.
3. **Install Vertical Poles:** Insert the longer vertical poles into the corner connectors of the base frame.
4. **Assemble Top Frame:** Connect the remaining short metal poles to the top corner connectors, then attach

them to the vertical poles to complete the top rectangular frame.

5. **Install Hanging Rod:** Insert the hanging rod into the designated connectors on the upper section of the frame.
6. **Attach Fabric Cover:** Carefully drape the fabric cover over the assembled metal frame. Ensure the zippers are aligned correctly with the front opening.
7. **Secure Fabric:** Fasten the fabric cover to the frame using any integrated ties or loops to ensure a snug fit.



Image: Close-up view of a metal frame joint, illustrating how poles connect.



Image: Detail showing how the fabric cover is secured to the top corner of the metal frame.

OPERATING INSTRUCTIONS

Using your Festnight Portable Fabric Wardrobe is simple:

- **Opening/Closing:** Use the front zippers to open and close the wardrobe cover.
- **Hanging Clothes:** Utilize the integrated hanging rod for garments that require hanging.
- **Storing Folded Items:** The bottom section of the wardrobe can be used for folded clothes, shoes, or storage boxes.
- **Placement:** Position the wardrobe on a flat, stable surface to ensure stability.



Image: Interior view of the wardrobe, demonstrating the hanging rod in use with clothes.

CARE AND MAINTENANCE

- **Cleaning the Fabric Cover:** Wipe the fabric cover with a damp cloth and mild detergent if necessary. Do not machine wash or tumble dry. Allow to air dry completely.
- **Cleaning the Frame:** The metal frame can be wiped clean with a damp cloth.
- **Storage:** If disassembling for storage, ensure all components are clean and dry. Store in a cool, dry place away from direct sunlight.
- **Avoid Overloading:** Do not exceed the weight capacity of the hanging rod or the overall structure to prevent damage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Wardrobe is unstable.	Uneven floor; loose frame connections; overloaded.	Ensure wardrobe is on a flat surface. Check all frame connections are secure. Reduce load.
Zipper not closing smoothly.	Fabric caught in zipper; zipper teeth misaligned.	Gently pull fabric away from zipper path. Apply a small amount of zipper lubricant if needed.
Fabric cover does not fit correctly.	Incorrect frame assembly; fabric not aligned.	Review setup instructions to ensure the frame is assembled correctly. Re-align the fabric cover.

SPECIFICATIONS

Brand	Festnight
Model Number	JSD4376388925919ON
Material	Fabric (Textile)
Color	Grey
Dimensions (L x W x H)	75 cm x 50 cm x 160 cm (approximately 29.5" x 19.7" x 63")
Assembly Required	No (minimal assembly of frame components)
GTIN/UPC	791326989611

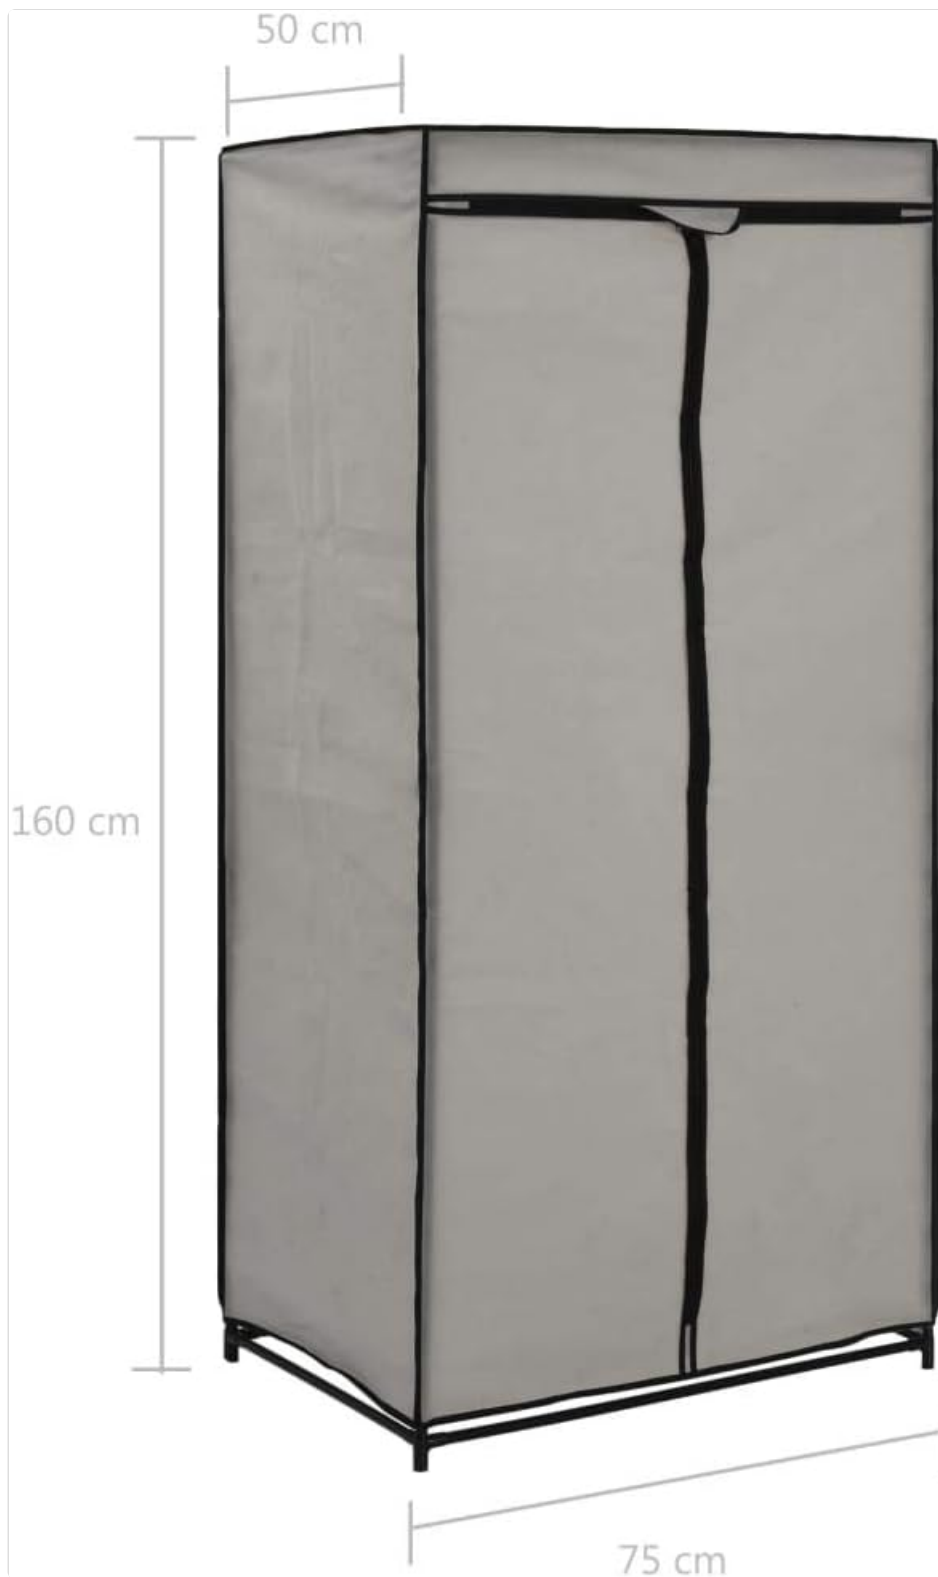


Image: The Festnight Portable Fabric Wardrobe displaying its overall dimensions: 75 cm width, 50 cm depth, and 160 cm height.

WARRANTY AND SUPPORT

Festnight products are manufactured to high-quality standards. For information regarding warranty coverage, please refer to the warranty card included with your purchase or visit the official Festnight website.

If you encounter any issues or have questions not covered in this manual, please contact Festnight customer support. Contact details can typically be found on the product packaging or the official brand website.

Online Support: [Visit the Festnight Store on Amazon](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07WSPDC92>

More documents and user manuals: <https://manuals.plus/>