

## NEWTRY WXX45

# NEWTRY WXX45 Automatic Electric Tobacco Injector User Manual

Model: WXX45

## 1. INTRODUCTION

---

This manual provides essential instructions for the safe and efficient operation, maintenance, and troubleshooting of your NEWTRY WXX45 Automatic Electric Tobacco Injector. Please read this manual thoroughly before using the device to ensure proper function and longevity.

The NEWTRY WXX45 is a compact and portable electric device designed to assist in the preparation of tobacco products. It automates the process of filling empty tubes with tobacco, offering a convenient and efficient method for users.

## 2. SAFETY INFORMATION

---

Always observe the following safety precautions to prevent injury or damage to the device:

- Keep the device away from water or other liquids. Do not operate with wet hands.
- Ensure the power supply voltage matches the device's requirements (110-230V).
- Do not insert fingers or foreign objects into the tobacco chamber or injection mechanism during operation.
- Unplug the device from the power outlet before cleaning or when not in use.
- Use only dry tobacco. Moist tobacco can clog the machine and strain the motor.
- Keep out of reach of children and pets.
- Do not attempt to disassemble or repair the device yourself. Contact qualified service personnel for assistance.

## 3. PACKAGE CONTENTS

---

Verify that all items are present in the package:

- 1 x NEWTRY Automatic Electric Tobacco Injector

- 1 x Stirring Rod
- 1 x Cleaning Brush
- 1 x Power Charger (110-230V)



Image: The package includes the main rolling machine, a stirring rod, a cleaning brush, and a power charger.

#### 4. PRODUCT FEATURES

- **Compact and Portable Design:** The device features a mini size (approximately 15.2 x 7 x 6.5 cm) and lightweight construction (385g), making it easy to transport and use in various locations.
- **Efficient Operation:** Designed for rapid production, capable of filling multiple tubes in a short timeframe.
- **Adjustable Tobacco Tightness:** A control knob allows users to adjust the density of the tobacco fill.
- **Easy to Clean:** Equipped with a removable tray and hopper, and includes a dedicated cleaning brush for straightforward maintenance.

# SMALL SIZE

PORTABLE & CONVENIENT



Portable



Efficient



Image: The compact size of the NEWTRY WXX45, measuring approximately 6.02 inches in length, 2.59 inches in height, and 2.32 inches in width, emphasizing its portability.

## 5. SETUP

Before first use, ensure the device is placed on a stable, flat surface.

1. Unpack all components and remove any protective packaging.
2. Connect the power charger to the device and then plug it into a suitable electrical outlet (110-230V).
3. Ensure the tobacco hopper and tray are clean and free of debris.



Image: The NEWTRY WXX45 device with tobacco in the transparent hopper and an empty tube positioned for injection.

## 6. OPERATING INSTRUCTIONS

Follow these steps for proper operation:

1. **Prepare Tobacco:** Ensure your tobacco is dry and free of large stems or foreign objects. Use the stirring rod if necessary to loosen the tobacco.
2. **Load Tobacco:** Place the prepared tobacco into the transparent hopper at the top of the machine. Do not overfill.
3. **Insert Tube:** Carefully slide an empty tube onto the metal nozzle on the side of the machine. Ensure it is securely seated.
4. **Adjust Tightness (Optional):** If desired, adjust the blue knob located near the injection mechanism to control the tobacco's packing density. Turning it clockwise generally results in a tighter pack, while counter-clockwise results in a looser pack.
5. **Start Injection:** Press and hold the power switch (usually a button or lever) to activate the injection mechanism. The machine will automatically fill the tube. Release the switch once the tube is filled.
6. **Remove Filled Tube:** Once the tube is filled, gently remove it from the nozzle.
7. **Repeat:** Continue steps 3-6 for additional tubes.

# ADJUSTABLE

ADJUST THE TIGHTNESS OF TOBACCO



Tight



Pine



Image: A close-up view of a hand adjusting the blue knob on the device, which is used to regulate the tightness of the tobacco fill.

## 7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the life of your device.

1. **Unplug:** Always unplug the device from the power outlet before cleaning.
2. **Empty Hopper and Tray:** Remove any remaining tobacco from the hopper and the removable collection tray.
3. **Brush Cleaning:** Use the provided cleaning brush to remove tobacco residue from the hopper, injection mechanism, and other accessible parts. Pay special attention to the nozzle and the area around the auger.
4. **Wipe Down:** Use a soft, dry cloth to wipe the exterior of the machine. Do not use abrasive cleaners or immerse the device in water.
5. **Storage:** Store the device in a clean, dry place when not in use.

# EASY TO CLEAN

- REMOVABLE TRAY
- CLEANING BRUSH



Image: The NEWTRY WXX45 device with its removable tray detached and the included cleaning brush, illustrating the components designed for easy maintenance.

## 8. TROUBLESHOOTING

If you encounter issues with your NEWTRY WXX45, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Machine not turning on	Not plugged in; Power outlet issue; Charger cable damage	Check power connection; Try a different outlet; Inspect charger cable for damage.
Tobacco not injecting or getting stuck	Tobacco is too moist or too coarse; Hopper overfilled; Clog in injection mechanism	Ensure tobacco is dry and finely shredded; Do not overfill hopper; Use cleaning brush to clear any clogs. Press the power button intermittently to help clear minor blockages.

Problem	Possible Cause	Solution
Filled tubes are too loose or too tight	Tobacco tightness adjustment needed	Adjust the blue knob to achieve desired packing density. Experiment with small adjustments.
Motor sounds strained	Tobacco is too moist or dense; Overuse	Use drier tobacco; Reduce the amount of tobacco loaded; Allow the machine to cool down if used continuously for extended periods.

## 9. SPECIFICATIONS

---

- **Model:** WXX45
- **Type:** Fully Automatic Electric Tobacco Injector
- **Dimensions:** 15.2 x 7 x 6.5 cm (approximately 6.02 x 2.76 x 2.56 inches)
- **Material:** ABS Plastic
- **Color:** Blue (main body accents)
- **Weight:** 385g (approximately 0.85 lbs)
- **Voltage:** 110-230V
- **Manufacturer:** NEWTRY

## 10. WARRANTY AND SUPPORT

---

For warranty information, technical support, or service inquiries, please refer to the documentation provided with your purchase or contact NEWTRY customer service directly. Keep your purchase receipt as proof of purchase.