

NEWTRY WXX45

NEWTRY WXX45 Electric Automatic Rolling Machine User Manual

1. INTRODUCTION

This manual provides detailed instructions for the safe and efficient operation and maintenance of your NEWTRY WXX45 Electric Automatic Rolling Machine. Please read this manual thoroughly before using the device and retain it for future reference.

Product Features:

- **Compact and Portable Design:** Small size and light weight for easy transport and use anywhere.
- **Durable Construction:** Made from ABS plastic with a stainless steel tobacco injector for longevity.
- **Adjustable Tobacco Tightness:** Features an adjustable switch to control the packing density of tobacco.
- **Simple Operation:** Designed for ease of use.



The NEWTRY WXX45 Electric Automatic Rolling Machine in red and black, with a clear hopper containing tobacco and a cigarette tube inserted into the rolling mechanism. The product packaging is visible in the background.

2. SAFETY INSTRUCTIONS

- Keep the device out of reach of children and pets.
- Do not immerse the machine in water or other liquids.
- Use only the provided power adapter.
- Ensure hands are dry before plugging in or unplugging the device.
- Do not operate the machine if any parts are damaged.
- Unplug the device when not in use or before cleaning.
- Use only dry, shredded tobacco. Wet or overly moist tobacco can damage the machine.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- NEWTRY WXX45 Electric Automatic Rolling Machine
- Power Adapter
- Stirring Rod
- Cleaning Brush



This image displays the NEWTRY WXX45 Electric Automatic Rolling Machine along with its accessories: a stirring rod, a cleaning brush, and a power adapter/charger.

4. PRODUCT OVERVIEW

Familiarize yourself with the components of your rolling machine:

STEP 1



STEP 2



STEP 3



STEP 4



OPERATION STEPS:

- 01 Fill the tobacco hopper with tobacco and insert the pipe.
- 02 Adjust the rotary switch to adjust the tightness of the tobacco.
- 03 Use the stirring rod to ensure the tightness of the cigarette.
- 04 Take out the finished cigarette and collect the remaining tobacco.

This diagram labels the key parts of the rolling machine: 1. Power Switch, 2. Tobacco Hopper, 3. Tobacco Tightness Adjustment, 4. Tobacco Pushing Stainless Steel Tube, 5. Tailing Collection Box, and 6. Tightness Strip.

5. SETUP

1. Place the machine on a stable, flat surface.
2. Connect the power adapter to the machine's power input port.
3. Plug the power adapter into a suitable electrical outlet.

Your browser does not support the video tag.

This video demonstrates the initial setup and basic operation of the NEWTRY electric rolling machine, including connecting the power adapter and inserting a cigarette tube.

6. OPERATING INSTRUCTIONS

Follow these steps to operate your rolling machine:

1. **Fill Tobacco Hopper:** Open the tobacco hopper cover and fill it with your preferred tobacco. Do not overfill.
2. **Insert Cigarette Tube:** Carefully slide an empty cigarette tube onto the metal nozzle.
3. **Adjust Tightness:** Use the rotary switch (3) to adjust the desired tobacco packing tightness. Turn clockwise for tighter packing, counter-clockwise for looser packing.
4. **Start Rolling:** Press the power switch (1) to begin the rolling process. The machine will inject tobacco into the tube.
5. **Remove Cigarette:** Once the tube is filled, release the power switch and carefully remove the finished cigarette.
6. **Collect Excess Tobacco:** Any excess tobacco will fall into the tailing collection box (5).



This image illustrates the four main steps for operating the machine: filling the tobacco hopper, adjusting tightness, using the stirring rod, and removing the finished cigarette.

Tips for Optimal Use:

- **Tobacco Humidity:** Recommended tobacco humidity is between 16% and 28% for best results.
- **Even Packing:** Use the stirring rod to ensure tobacco is evenly distributed in the hopper before rolling.
- **Final Tightness:** After filling, gently push the butt of the cigarette to further compact the tobacco if desired.



This image provides tips on adjusting the tobacco tightness using the rotary switch and stirring rod to achieve desired results.

PROFESSIONAL ADVICE

Pack tobacco in an airtight space and keep it moist.

When putting the packed cigarettes into the box, it is necessary to slap the buttocks of the box to make the cigarettes tighter.

When the pipe is filled with tobacco, the butt of the pipe can be pushed to make the tobacco tighter.



This image offers advice on keeping tobacco moist, packing cigarettes tighter by tapping the box, and pushing the cigarette butt for better packing.

7. MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your machine.

1. **Unplug Device:** Always unplug the machine from the power outlet before cleaning.
2. **Empty Hopper and Tray:** Remove any remaining tobacco from the hopper and the tailing collection box.
3. **Clean with Brush:** Use the provided cleaning brush to remove tobacco residue from the hopper, the injection mechanism, and other accessible areas.
4. **Wipe Exterior:** Wipe the exterior of the machine with a dry or slightly damp cloth. Do not use abrasive cleaners or immerse the machine in water.

EASY TO CLEAN

- REMOVABLE TRAY
- CLEANING BRUSH



This image highlights the removable tray and cleaning brush, indicating how to clean the machine for optimal performance.

8. TROUBLESHOOTING

If you encounter issues with your NEWTRY WXX45, refer to the following common problems and solutions:

- **Problem: Tobacco falls out of the cigarette (“cherry falling”).**
Solution: Ensure tobacco humidity is between 16-28%. You can lightly spray alcohol on tobacco and place it in an airtight container overnight to adjust moisture. Also, adjust the tightness switch for a firmer pack and gently push the cigarette butt while rolling to compact the tobacco.
- **Problem: Machine is not turning on.**
Solution: Check if the power adapter is securely plugged into both the machine and the electrical outlet. Ensure the outlet is functional.
- **Problem: Tobacco is not feeding or jamming.**
Solution: Ensure tobacco is dry and properly shredded. Remove any large stems or foreign objects. Do not overfill the hopper. Use the stirring rod to loosen and guide tobacco into the mechanism.
- **Problem: Cigarettes are too loose or too tight.**

Solution: Adjust the tobacco tightness switch (3) as described in the Operating Instructions. Experiment with different settings to find your preferred density.



This image provides a solution for the 'cherry falling' problem by suggesting to spray alcohol on tobacco, place it in an airtight container overnight, and adjust tightness while rolling.

9. SPECIFICATIONS

Feature	Specification
Product Dimensions	6.02"L x 2.76"W x 2.6"Th (15.29 x 7.01 x 6.6 cm)
Item Model Number	WXX45
Manufacturer	NEWTRY
Brand	NEWTRY
Color	Red
Material	Acrylonitrile Butadiene Styrene, Plastic, Resin, Stainless Steel
Item Weight	385 Grams (13.58 ounces)
Fuel Type	Electric
UPC	887223119852

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation included with your

purchase or contact NEWTRY customer service directly. Keep your purchase receipt as proof of purchase.

© 2025 NEWTRY. All rights reserved.