

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [OREI](#) /

› [OREI Sony UBP-X800M2 Region Free 4K UHD Blu-ray Player Instruction Manual](#)

OREI UBP-X800M2

OREI Sony UBP-X800M2 Region Free 4K UHD Blu-ray Player Instruction Manual

Model: UBP-X800M2

INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your OREI Sony UBP-X800M2 Region Free 4K UHD Blu-ray Player. This player is designed for worldwide use, supporting all Blu-ray disc zones (A/B/C) and DVD regions (0-8), with a built-in NTSC↔PAL 4K HD converter. Enjoy stunning 4K UHD visuals, high-resolution audio including Dolby Atmos and DTS:X, and seamless access to streaming services via Wi-Fi or Ethernet.



Figure 1: Front view of the OREI Sony UBP-X800M2 4K UHD Blu-ray Player.

SETUP

1. Unpacking and Placement

- Carefully remove all components from the packaging.
- Place the player on a stable, level surface with adequate ventilation.
- Ensure no objects block the ventilation openings.

2. Connecting to Your TV

Connect the player to your TV using an HDMI cable for optimal 4K UHD video and audio.

1. Connect one end of an HDMI cable to the **HDMI OUT** port on the rear of the Blu-ray player.
2. Connect the other end of the HDMI cable to an HDMI input on your TV.
3. If using an audio receiver, connect the player's HDMI OUT to the receiver's HDMI IN, then the receiver's HDMI OUT to the TV's HDMI IN.



Figure 2: Rear panel connections, showing HDMI, LAN, and audio outputs.

3. Power Connection

- Connect the AC power cord to the player's power input and then to a suitable electrical outlet.

4. Network Connection (Optional)

For streaming services and firmware updates, connect the player to your home network.

- **Wired Connection:** Connect an Ethernet cable from the player's **LAN (100)** port to your router or modem.
- **Wireless Connection:** Navigate to the network settings in the player's menu to connect to your Wi-Fi network.

5. Region Changing Instructions

This player supports all DVD regions (0-8) automatically. Blu-ray regions (A, B, C) are changed manually using the remote control.

1. Turn the player **ON** and **OPEN THE DISC TRAY**.
2. Once the tray is completely open, press the corresponding colored button on the remote to select the desired Blu-ray region:
 - **Zone A:** Press the **YELLOW BUTTON** on the remote control.
 - **Zone B:** Press the **BLUE BUTTON** on the remote control.
 - **Zone C:** Press the **RED BUTTON** on the remote control.

3. You can now put your disc in the tray and then close the tray.



Figure 3: Remote control with colored buttons for region selection.

OPERATING INSTRUCTIONS

1. Disc Playback

The player supports a wide range of disc formats, including 4K UHD Blu-ray, standard Blu-ray, Blu-ray 3D, DVD, CD, and Super Audio CD (SACD).

1. Press the **OPEN/CLOSE** button on the player or remote to open the disc tray.
2. Place the disc gently onto the tray with the label side facing up.
3. Press the **OPEN/CLOSE** button again to close the tray.
4. The player will automatically begin playback or display a disc menu.



Figure 4: Front view of the player with the disc tray open, ready for disc insertion.

2. Streaming Services

Access popular streaming services like Netflix and YouTube directly from the player's home menu.

- Ensure the player is connected to the internet (Wi-Fi or Ethernet).
- From the home screen, select the desired streaming application.
- Log in with your account credentials to begin streaming.

3. USB Media Playback

Play media files (audio, video, photos) from a USB storage device.

- Insert your USB device into the front USB port.
- Select the USB option from the player's home menu to browse and play your media.

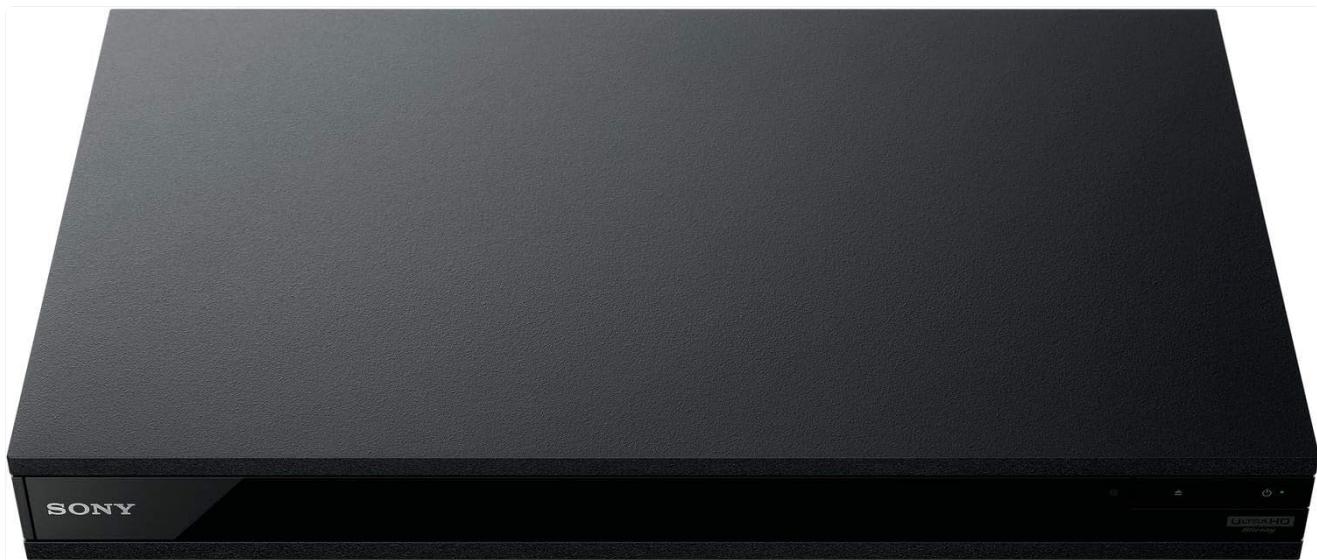


Figure 5: Front view of the player with a USB drive inserted into the front port.

MAINTENANCE

1. Cleaning the Player

- Wipe the exterior of the player with a soft, dry cloth.
- Do not use abrasive cleaners, waxes, or solvents.
- Ensure ventilation openings remain clear of dust and debris.

2. Disc Care

- Handle discs by their edges to avoid fingerprints and scratches.
- Clean discs with a soft, lint-free cloth, wiping from the center outwards.
- Store discs in their cases away from direct sunlight and extreme temperatures.

3. Firmware Updates

Firmware updates can be done via the internet to ensure optimal performance and access to the latest features.

1. Go to the home menu, then setup menu, and then to Software Update.
2. Click on "Update Via Internet". If a new firmware is available, the player will automatically update.
3. **DO NOT** turn off the player while it is updating.
4. **DO NOT** perform firmware updates by USB unless instructed by OREI support.

TROUBLESHOOTING

Common Issues

- **No Picture/Sound:**
 - Check all HDMI and audio cable connections.
 - Ensure the TV input is set to the correct HDMI port.
 - Verify the player is powered on.

- **Disc Does Not Play:**

- Ensure the disc is clean and free of scratches.
- Verify the disc is inserted correctly (label side up).
- For Blu-ray discs, confirm the player's region setting matches the disc's region (refer to "Region Changing Instructions" in the Setup section).
- Open the tray again and leave the disc in the tray. Once fully open, press the color button to select the region. Then close the tray.

- **Region Code Error Message:**

If you put in a disc before changing regions, you may get an error message indicating the wrong region. The player remembers this message. To remove that error, you need to reset the player.

1. Press the **HOME** button on the remote with no disc inside to go to the home screen.
2. Use arrow buttons on the remote to go to the upper right corner where it says **Setup** and press **ENTER**.
3. Scroll down to **Resetting** on the bottom of the menu.
4. Select **Reset to Factory default settings**.
5. Scroll down and select **ALL SETTINGS** and press **ENTER** -> Press **Start Enter** -> Close **ENTER**.
6. Turn the player off and then on again after 30 seconds.
7. Select Language English and then select quick start mode OFF. You may need to activate network settings again.
8. If you prefer not to connect the player to the internet, you may press the **HOME** button and go to the home screen. Now start from step 1 under "Region Changing Instructions" to change regions.

SPECIFICATIONS

Brand	OREI
Model Name	Sony X800M2 (UBP-X800M2)
Product Dimensions	19 x 14.1 x 3.8 inches
Item Weight	8.82 pounds (4000 Grams)
Media Type	Blu-Ray Disc, DVD, 4K UHD Blu-ray, Blu-ray 3D, CD, Super Audio CD
Resolution	3840x2160 (4K UHD)
Connectivity Technology	Ethernet, HDMI, USB, Wi-Fi
Connector Type	HDMI
Audio Output Mode	Surround (Dolby Atmos, DTS:X, High-Resolution Audio)
Color	Black
Batteries	2 AAA batteries required (for remote)
Special Feature	Region Free (Blu-ray Zones A/B/C, DVD Regions 0-8), Built-in NTSC↔PAL 4K HD Converter

WARRANTY AND SUPPORT

Warranty Information

For specific warranty details, please refer to the warranty card included with your product or visit the official OREI website. Keep your purchase receipt as proof of purchase.

Customer Support

If you encounter any issues or have questions regarding your OREI Sony UBP-X800M2 Blu-ray Player, please contact OREI customer support.

- **Online Support:** Visit the [OREI Store on Amazon](#) for FAQs and support resources.
- **Technical Assistance:** Contact OREI directly for technical support. (Specific contact details not provided in source data, please refer to product packaging or official website).

© 2023 OREI. All rights reserved. Specifications are subject to change without notice.