

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Ciglow](#) /

› [Ciglow Portable Stainless Steel Espresso Coffee Maker \(200ml\) User Manual](#)

Ciglow Ciglow5dc7zarhnb-02

Ciglow Portable Stainless Steel Espresso Coffee Maker (200ml) User Manual

Model: Ciglow5dc7zarhnb-02

INTRODUCTION

This manual provides detailed instructions for the safe and efficient use of your Ciglow Portable Stainless Steel Espresso Coffee Maker (200ml). Please read all instructions carefully before first use and retain this manual for future reference.



Figure 1: Assembled Ciglow Portable Stainless Steel Espresso Coffee Maker.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your espresso coffee maker:



Figure 2: Exploded view showing the Handle, Pot Cover, Upper Pot, Thread Mouth, Safety Valve, Lower Pot, and Ground Coffee Box (filter basket).

- **Handle:** For safe handling of the hot coffee maker.
- **Pot Cover:** Hinged lid for the upper pot.
- **Upper Pot:** Collects the brewed espresso.
- **Thread Mouth:** Connects the upper and lower pots securely.
- **Safety Valve:** Releases excess pressure from the lower pot. Do not obstruct.
- **Lower Pot:** Holds water for brewing.
- **Ground Coffee Box (Filter Basket):** Holds ground coffee.

SETUP AND FIRST USE

1. **Unpacking:** Carefully remove all components from the packaging.
2. **Initial Cleaning:** Before first use, wash all parts (upper pot, lower pot, filter basket) with warm soapy water. Rinse thoroughly and dry completely.
3. **Assembly:**
 - a. Unscrew the upper pot from the lower pot.
 - b. Remove the filter basket from the lower pot.
4. **First Brew (Conditioning):** It is recommended to perform a few brewing cycles with water only (or

discard the first few coffee brews) to season the coffee maker and remove any manufacturing residues.

OPERATING INSTRUCTIONS

Follow these steps to brew espresso with your Ciglow coffee maker:

1. **Fill Lower Pot:** Unscrew the upper pot from the lower pot. Fill the lower pot with fresh, cold water. Do not exceed the level of the safety valve.
2. **Add Coffee Grounds:** Insert the filter basket into the lower pot. Fill the filter basket with finely ground coffee. Do not tamp the coffee too tightly.
3. **Assemble:** Place the upper pot onto the lower pot and screw them together tightly to ensure a secure seal.
4. **Heat:** Place the assembled coffee maker on a heat source (gas, ceramic, or electric stove). Use a medium heat setting.
5. **Brewing:** As the water heats, pressure will build, forcing water up through the coffee grounds and into the upper pot.
6. **Serve:** Once the upper pot is full of brewed coffee, remove the coffee maker from the heat source immediately. Pour the fresh espresso into a cup.

Your browser does not support the video tag.

Video 1: Demonstration of the espresso coffee maker in use, showing the brewing process and pouring. This video illustrates the general operation of the device.

No need to go out, you can have good coffee at home.



Figure 3: Pouring freshly brewed espresso from the maker.

MAINTENANCE AND CLEANING

Proper maintenance ensures the longevity and performance of your coffee maker.

- **Daily Cleaning:** After each use, disassemble the coffee maker. Wash all parts with warm water and a mild detergent. Rinse thoroughly to remove all coffee residues and soap.
- **Drying:** Dry all components completely before reassembling or storing to prevent water spots and corrosion.
- **Do Not Use Abrasives:** Avoid using abrasive sponges or harsh cleaning agents, as these can scratch the stainless steel finish.
- **Dishwasher Safety:** This coffee maker is **not** dishwasher safe. Hand washing is recommended.
- **Storage:** Store the coffee maker in a dry place.

TROUBLESHOOTING

If you encounter issues with your coffee maker, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Coffee does not brew or brews slowly.	<ul style="list-style-type: none"> • Insufficient water in the lower pot. • Coffee grounds too fine or tamped too tightly. • Heat source too low. • Clogged filter or spout. 	<ul style="list-style-type: none"> • Ensure water is filled to just below the safety valve. • Use a medium grind; do not tamp. • Increase heat slightly. • Clean all parts thoroughly, especially the filter and spout.
Water leaks from the joint between upper and lower pots.	<ul style="list-style-type: none"> • Upper and lower pots not screwed tightly. • Gasket is worn or improperly seated. 	<ul style="list-style-type: none"> • Ensure pots are screwed together firmly. • Check the rubber gasket for proper placement and wear; replace if necessary.
Coffee tastes burnt or bitter.	<ul style="list-style-type: none"> • Brewed too long (over-extraction). • Heat source too high. • Old or stale coffee grounds. 	<ul style="list-style-type: none"> • Remove from heat immediately after brewing is complete. • Use a lower heat setting. • Use fresh coffee grounds.

SPECIFICATIONS

Feature	Detail
Brand	Ciglow
Model Number	Ciglow5dc7zarhnb-02
Capacity	200ml
Material	Stainless Steel
Color	Silver
Product Dimensions	6.5"D x 3.5"W x 3.54"H (approx. 9cm x 16.5cm for 200ml)
Coffee Maker Type	Espresso Machine (Stovetop Moka Pot)
Operation Mode	Manual
Dishwasher Safe	No
Item Weight	13.7 ounces
UPC	789904503496

16.5cm/6.5in



9cm/3.5in

Figure 4: Approximate dimensions of the 200ml model.

WARRANTY AND SUPPORT

For warranty information or technical support, please contact the manufacturer or your retailer. Keep your purchase receipt as proof of purchase.