

## SKMEI 1389

# SKMEI 1389 Men's Analog-Digital Waterproof Watch Instruction Manual

Model: 1389

## INTRODUCTION

Thank you for choosing the SKMEI 1389 Analog-Digital Watch. This timepiece combines classic analog display with modern digital functions, designed for durability and versatility. This manual provides detailed instructions to help you set up, operate, and maintain your watch, ensuring optimal performance and longevity.



Front view of the SKMEI 1389 Analog-Digital Watch, showcasing its robust design and dual display.

## PRODUCT OVERVIEW

The SKMEI 1389 features a durable stainless steel strap and case, offering both style and resilience. It includes multiple functions accessible via its analog and digital displays.

### Key Features:

- **Dual Display:** Analog and Digital timekeeping.
- **Water Resistance:** 30M (suitable for splashes, rain, hand washing; not for swimming or diving).
- **Multi-Time Zone:** Track multiple times simultaneously.
- **Chronograph:** Stopwatch function for timing events.
- **Alarm:** Daily alarm function.
- **LED Backlight:** For visibility in low-light conditions.
- **Durable Construction:** Stainless steel strap and case.

# Key Features

Display  
**Analog-Digital**

Dial Shape  
**Round**

Features  
**3 Time, Date, EL, Alarm, Week**

Strap Material  
**Stainless Steel**

Water Resistance  
**30 m**



Visual representation of the SKMEI 1389's key features, including its dual display and water resistance.

### Components:

- **A:** Light Button (Top Left)
- **B:** Mode Button (Bottom Left)

- **C:** Start/Stop Button (Top Right)
- **D:** Reset/Adjust Button (Bottom Right)
- **E:** Crown (Right Side, for analog time)
- **Digital Displays:** Three sub-dials and one main digital display for various functions.

Your browser does not support the video tag.

Official product video demonstrating the various features and functions of the SKMEI 1389 watch, including its analog and digital displays, backlight, and overall design.

## SETUP INSTRUCTIONS

---

### 1. Setting Analog Time:

1. Pull out the crown (E) on the right side of the watch.
2. Rotate the crown to adjust the analog hands to the desired time.
3. Push the crown back in to start the analog timekeeping.

### 2. Setting Digital Time and Date:

1. Press the Mode button (B) repeatedly until the digital time display starts flashing, indicating it's in setting mode.
2. Use the Reset/Adjust button (D) to select the item you wish to adjust (e.g., seconds, hour, minute, month, date, day of week).
3. Use the Start/Stop button (C) to increase the selected value.
4. Once all settings are correct, press the Mode button (B) to exit the setting mode.

### 3. Strap Adjustment:

The stainless steel strap can be adjusted to fit your wrist. This typically involves removing or adding links. For precise and safe adjustment, it is recommended to visit a professional jeweler or watch repair shop.

## OPERATING INSTRUCTIONS

---

### 1. Mode Switching:

Press the Mode button (B) to cycle through the different functions: Time Mode, Chronograph (Stopwatch) Mode, Alarm Mode, and Dual Time Mode.

### 2. Using the Chronograph (Stopwatch):

1. Enter Chronograph Mode by pressing the Mode button (B).
2. Press the Start/Stop button (C) to start the stopwatch.
3. Press the Start/Stop button (C) again to pause the stopwatch.
4. Press the Reset/Adjust button (D) to reset the stopwatch to zero.

### 3. Setting the Alarm:

1. Enter Alarm Mode by pressing the Mode button (B).
2. Press the Reset/Adjust button (D) to select the hour or minute to set.
3. Use the Start/Stop button (C) to adjust the selected value.
4. Press the Mode button (B) to confirm and exit alarm setting.
5. To turn the alarm on/off, press the Start/Stop button (C) while in Alarm Mode.

#### 4. Activating the LED Backlight:

Press the Light button (A) to illuminate the digital display for a few seconds, providing visibility in dark environments.



The watch display with the LED backlight activated for enhanced visibility.

#### 5. Dual Time Function:

The watch allows you to set and display a second time zone. Enter Dual Time Mode by pressing the Mode button (B) until 'ALM' or 'T2' appears. Use the Reset/Adjust button (D) and Start/Stop button (C) to set the second time zone.

### MAINTENANCE

---

#### 1. Water Resistance:

Your SKMEI 1389 watch is rated 30M water resistant. This means it is protected against splashes, rain, and brief immersion in water, such as during hand washing. It is **not** suitable for swimming, diving, or showering with hot water, as steam and direct water pressure can compromise the seals.

#### 2. Cleaning:

Wipe the watch case and strap regularly with a soft, dry cloth to remove dirt and sweat. For the stainless steel strap, a slightly damp cloth can be used, followed by immediate drying. Avoid using chemical cleaners or abrasive materials.

#### 3. Battery Replacement:

The watch is powered by a Lithium Ion battery (CR2016/SR626SW). When the display dims or the watch stops functioning, the battery may need replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and water resistance.



The back casing of the watch, indicating model and battery type.

## TROUBLESHOOTING

- **Watch not keeping time:** Check if the crown (E) is fully pushed in. If the digital display is dim or blank, the battery may need replacement.
- **Digital display not responding:** Try pressing all buttons to ensure none are stuck. If unresponsive, a battery replacement might be necessary.
- **Water inside the watch:** If moisture appears inside the watch, stop using it immediately and take it to a professional for inspection and repair to prevent further damage.

## SPECIFICATIONS

Model Number	SKMEI-1389
Display Type	Analog-Digital
Case Material	Zinc Alloy
Strap Material	Stainless Steel

Water Resistance	30M (3ATM)
Movement	Quartz
Battery Type	1 Lithium Ion (CR2016/SR626SW)
Case Width	48mm
Case Height	58mm
Case Thickness	16mm
Strap/Lug Width	22mm
Item Weight	5.78 ounces (approx. 98g)




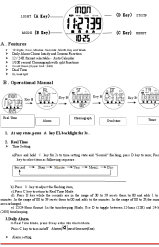
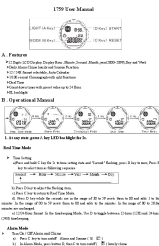

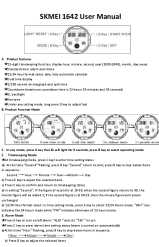

Detailed dimensions of the SKMEI 1389 watch.

## WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation included with your purchase or contact SKMEI customer service through their official channels. Keep your proof of purchase for any warranty claims.



## Related Documents - 1389

	<p><a href="#">SKMEI 1251 Digital Wrist Watch User Manual - Features &amp; Operation</a></p> <p>Comprehensive user manual for the SKMEI 1251 digital wrist watch, detailing features like dual time, chronograph, alarm, countdown timer, and EL backlight. Includes operational instructions and specifications.</p>
	<p><a href="#">SKMEI 1251 Digital Sport Watch - User Manual and Features</a></p> <p>Comprehensive user manual for the SKMEI 1251 digital sport watch, detailing features, operational modes, time setting, alarm, chronograph, dual time, and timer functions.</p>
	<p><a href="#">Skmei 1759 User Manual: Features and Operation</a></p> <p>Comprehensive user manual for the Skmei 1759 digital watch, detailing features like alarm, chronograph, dual time, and countdown timer, along with step-by-step operational instructions.</p>
	<p><a href="#">SKMEI 1025 Digital Watch Operation Manual</a></p> <p>Detailed operation manual for the SKMEI 1025 digital watch, covering functions, modes, chronograph, alarm settings, and time/date configuration.</p>
	<p><a href="#">SKMEI 1642 User Manual - Digital Watch Features and Operation</a></p> <p>Comprehensive user manual for the SKMEI 1642 digital watch, detailing its features, timekeeping, alarm, dual time, countdown, and stopwatch functions. Learn how to set and operate your SKMEI watch.</p>
	<p><a href="#">SKMEI 1429 Watch User Manual and Features</a></p> <p>User manual and features for the SKMEI 1429 watch, covering time setting, stopwatch, alarm, and usage instructions. Includes water resistance information and maintenance advice.</p>



