

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Fisher-Price](#) /
- › [Fisher-Price Deluxe Infant-to-Toddler Rocker User Manual](#)

Fisher-Price GHY58

Fisher-Price Deluxe Infant-to-Toddler Rocker User Manual

Model: GHY58

INTRODUCTION

This manual provides instructions for the Fisher-Price Deluxe Infant-to-Toddler Rocker, a convertible infant seat designed for use from newborn to toddler (up to 40 lbs). It functions as an infant rocker or stationary seat with calming vibrations and includes a removable toy bar. The seat features an adjustable, three-position reclining seatback, a machine-washable seat pad, and a lightweight, foldable frame for storage and travel. Suitable from birth until the child weighs 40 lb (18 kg).



Figure 1: Fisher-Price Deluxe Infant-to-Toddler Rocker, front view.

SAFETY INFORMATION

- **WARNING:** Never leave child unattended.
- **WARNING:** This product is not intended for prolonged periods of sleep.
- **WARNING:** Always use the restraint system. Ensure it is correctly fitted.
- **WARNING:** Do not use this product once your child can sit up unaided or weighs more than 40 lbs (18 kg).
- **WARNING:** Do not move or lift the product with the child in it.
- **WARNING:** Always place the product on a flat, level surface.
- **WARNING:** Keep away from fire and other sources of strong heat.
- Ensure all assembly components are securely fastened before use.
- Regularly inspect the product for damaged or missing parts. Discontinue use if any part is damaged.

ASSEMBLY

Before assembly, ensure all parts are present. A Phillips head screwdriver is required (not included).

1. **Unpack Components:** Carefully remove all parts from the packaging.
2. **Attach Base Rails:** Connect the left and right base rails to the seat frame. Ensure they click securely into place.
3. **Install Kickstand:** Attach the fold-out kickstand to the underside of the base. This allows conversion to a stationary seat.
4. **Secure Seat Pad:** Drape the fabric seat pad over the frame, ensuring all straps and loops align with the frame's attachment points. Secure the seat pad using the provided fasteners.
5. **Insert Vibration Unit:** Open the battery compartment (usually located under the seat) and insert 1 D battery (not included) for the vibration feature. Close the compartment securely.
6. **Attach Toy Bar:** Insert the toy bar into the designated slots on the side of the seat frame. Ensure it is firmly attached. The toy bar is removable.
7. **Final Check:** Verify all connections are secure and the seat pad is properly installed before placing a child in the rocker.



Figure 2: Side view of the rocker, illustrating the assembled frame.

OPERATING INSTRUCTIONS

Adjusting Recline Position

The rocker features an adjustable, three-position reclining seatback. To adjust, locate the recline adjustment buttons on both sides of the seat frame. Press these buttons simultaneously and move the seatback to the desired position. Release the buttons to lock the seatback in place.

Converting to Stationary Seat

To convert the rocker into a stationary seat, pull out the fold-out kickstand located at the front underside of the base. Ensure the kickstand is fully extended and locked into position. To return to rocking mode, fold the kickstand back under the base.



Easily converts to a stationary seat

Figure 3: Detail of the fold-out kickstand for stationary use.

Using Calming Vibrations

The rocker includes a calming vibration feature. To activate, press the vibration button located on the side of the seat frame. Press again to turn off. Requires 1 D battery (not included).



Chill out with calming vibrations

Figure 4: Location of the vibration activation button.

Toy Bar and Toys

The overhead toy bar can be easily removed by pressing the release buttons on each side and lifting it away. The two bat-at toys attached to the bar are designed for sensory engagement and can also be removed for individual play or cleaning.



Figure 5: Baby interacting with the toy bar.

Folding for Storage and Travel

The rocker features a lightweight, foldable frame for convenient storage and travel. To fold, ensure the kickstand is folded in, then locate the folding mechanisms (refer to assembly diagrams for exact location) and collapse the frame. Always ensure the child is removed from the rocker before folding.

MAINTENANCE

- **Cleaning the Seat Pad:** The fabric seat pad is machine-washable. Remove the seat pad from the frame by unfastening all straps and loops. Wash in cold water on a gentle cycle. Do not bleach. Tumble dry on low heat or air dry.
- **Cleaning the Frame:** Wipe the plastic and metal parts of the frame with a damp cloth and mild soap. Rinse thoroughly and dry completely before reassembly or storage.
- **Battery Replacement:** Replace the D battery for the vibration unit when the vibrations weaken or stop. Ensure correct polarity when inserting new batteries.

- **Storage:** When not in use, store the rocker in a clean, dry place, away from direct sunlight and extreme temperatures. The foldable design allows for compact storage.

TROUBLESHOOTING

Problem	Possible Cause	Solution
Vibration unit not working.	Dead or incorrectly installed battery.	Check battery polarity. Replace with a fresh D battery.
Rocker feels unstable.	Improper assembly or uneven surface.	Ensure all connections are secure. Place on a flat, level surface. Check if kickstand is fully engaged/disengaged.
Seat pad does not fit correctly.	Incorrect installation.	Remove and re-install the seat pad, ensuring all straps and loops are correctly aligned and fastened.
Toy bar is loose.	Not fully inserted or locked.	Ensure the toy bar is fully inserted into its slots until it clicks into place.

SPECIFICATIONS

- **Model Number:** GHY58
- **Brand:** Fisher-Price
- **Product Dimensions:** 24 x 5.5 x 17 inches (61 x 14 x 43 cm)
- **Item Weight:** 1.55 pounds (0.7 kg)
- **Maximum Weight Recommendation:** 40 lbs (18 kg)
- **Minimum Weight Recommendation:** From birth
- **Batteries Required:** 1 D battery (for vibration unit, not included)
- **Material:** Plastic, Metal, Fabric
- **Features:** 3-position recline, calming vibrations, removable toy bar, fold-out kickstand for stationary use, machine-washable seat pad, foldable frame.

WARRANTY AND SUPPORT

For warranty information, product registration, or customer support, please visit the official Fisher-Price website or contact their customer service department. Keep your purchase receipt as proof of purchase.

Fisher-Price Official Website: www.fisher-price.com

PRODUCT OVERVIEW VIDEO

Your browser does not support the video tag.

Video: Official product video demonstrating the features and functionality of the Fisher-Price Deluxe Infant-to-Toddler Rocker, including its conversion from infant rocker to toddler seat, calming vibrations, and toy bar.



