Manuals+

Q & A | Deep Search | Upload

manuals.plus /

- HADEN /
- > HADEN Dorset 1.7 Liter Stainless Steel Electric Kettle (Model 75000) Instruction Manual

HADEN 75000

HADEN Dorset 1.7 Liter Stainless Steel Electric Kettle

Model: 75000 | Brand: HADEN

INTRODUCTION

This manual provides essential information for the safe and efficient operation of your HADEN Dorset 1.7 Liter Stainless Steel Electric Kettle. Please read all instructions carefully before first use and retain for future reference.



Figure 1: HADEN Dorset Electric Kettle, Rectory Red

The HADEN Dorset Electric Kettle is designed for rapid water boiling, featuring a 1.7-liter capacity, 360-degree base, and automatic safety shut-off functions. Its durable stainless steel construction ensures longevity and reliable performance.

IMPORTANT SAFETY INSTRUCTIONS

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and injury to persons, do not immerse cord, plugs, or the kettle in water

or other liquids.

- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return appliance to the nearest authorized service facility for examination, repair, or adjustment.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- . Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off," then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- Always ensure the lid is securely closed during operation. Scalding may occur if the lid is removed during boiling.
- This appliance is for household use only.

PRODUCT COMPONENTS

Familiarize yourself with the parts of your HADEN Dorset Electric Kettle:

- Kettle Body: Stainless steel housing with enamel finish.
- Handle: Ergonomically designed for comfortable grip.
- · Lid: Removable lid for easy filling and cleaning.
- Spout: Designed for controlled pouring.
- Removable Filter: Located in the spout to prevent limescale from entering your cup.
- Water Level Indicator: Transparent window to monitor water volume.
- Temperature Gauge: Analog display showing current water temperature.
- On/Off Switch: Lever-style switch with indicator light.
- 360-Degree Power Base: Cordless design for easy placement and lifting.

HADEN



Premium coated stainless steel housing.



Automatic shut off upon reaching boiling point with boil-dry protection.



Removable filter for convenient cleaning and maintenance.



350°

360-Degrees Base ensures stability and prevents tipping.

Figure 2: Key components of the kettle

SETUP AND FIRST USE

- 1. **Unpacking:** Carefully remove the kettle and all accessories from the packaging. Retain packaging for future storage or disposal.
- 2. **Initial Cleaning:** Before first use, fill the kettle with clean water to the MAX level. Boil the water, then discard it. Repeat this process twice to remove any manufacturing residues.
- 3. **Placement:** Place the power base on a dry, flat, stable surface away from the edge of the countertop. Ensure the power cord is not dangling or touching hot surfaces.
- 4. Power Connection: Plug the power base into a grounded electrical outlet.

OPERATING INSTRUCTIONS

- 1. **Filling the Kettle:** Remove the lid and fill the kettle with the desired amount of fresh water. Do not fill below the MIN mark or above the MAX mark on the water level indicator.
- 2. Securing the Lid: Place the lid back onto the kettle and ensure it is securely closed.
- 3. **Placing on Base:** Position the kettle onto the 360-degree power base.
- 4. **Starting Boil:** Push the On/Off switch downwards. The indicator light will illuminate, signifying that the kettle is heating. The temperature gauge will show the water's rising temperature.

- 5. **Automatic Shut-off:** The kettle will automatically switch off once the water reaches a rolling boil (212°F / 100°C), and the indicator light will turn off.
- 6. **Manual Shut-off:** To stop the boiling process before it reaches boiling point, simply push the On/Off switch upwards.
- 7. **Pouring:** Carefully lift the kettle from its base and pour the hot water. Exercise caution as the kettle body and steam can be very hot.



Figure 3: On/Off switch and water level indicator

Your browser does not support the video tag.

Video 1: HADEN Dorset Kettle in operation, demonstrating its features.

MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your kettle.

- Exterior Cleaning: Wipe the exterior of the kettle and the power base with a damp cloth or sponge and dry thoroughly. Do not use abrasive cleaners or scouring pads.
- Interior Cleaning: Wash the inside of the kettle with hot, soapy water and rinse thoroughly.
- Important: Never immerse the kettle in water or other liquids, or place it in a dishwasher.

• Filter Cleaning: The removable filter can be detached for cleaning. Rinse it under running water and gently brush away any deposits. Reinsert the filter securely after cleaning.



Figure 4: Removing the removable filter for cleaning

Descaling

Limescale buildup can affect kettle performance and water taste. Descale your kettle regularly, especially in hard water areas.

- 1. Fill the kettle with a solution of one part white vinegar to two parts water.
- 2. Bring the solution to a boil.
- 3. Allow the solution to soak in the kettle for at least 30 minutes, or longer for heavy buildup.
- 4. Discard the solution and rinse the kettle thoroughly with fresh water several times.
- 5. For stubborn deposits, gently scrub the interior with a non-abrasive brush or sponge.

TROUBLESHOOTING

Problem	Possible Cause	Solution

Problem	Possible Cause	Solution
Kettle does not heat up.	Kettle not properly placed on base; Power cord not plugged in; No power at outlet; On/Off switch not engaged.	Ensure kettle is correctly seated on the base; Check power cord connection; Test outlet with another appliance; Push On/Off switch downwards until indicator light illuminates.
Water has an unusual taste.	First use residue; Limescale buildup.	Perform initial cleaning steps (boil and discard water twice); Descale the kettle as per instructions.
Kettle switches off too quickly.	Limescale buildup.	Descale the kettle.
Steam escaping from lid.	Lid not properly closed.	Ensure the lid is securely closed before boiling.

SPECIFICATIONS

• Brand: HADEN

• Model Name: Dorset Electric Kettle

• Item Model Number: 75000

• Color: Red

• Capacity: 1.7 Liters (7-cup)

• Material: Stainless Steel (enamel finish)

• Special Feature: Cordless, 360-Degree Base, Auto Shutoff, Boil-Dry Protection

• Product Dimensions: 11.75"L x 9.5"W x 7"H

• Item Weight: 3 Pounds

• Included Components: Stainless Steel Kettle, Water Filter

• Country/Region of Origin: China

• UPC: 017342750005

WARRANTY AND SUPPORT

For warranty information or product support, please refer to the documentation included with your purchase or visit the official HADEN website. Keep your proof of purchase for any warranty claims.

Related Documents - 75000

