

Ismart Ismart Multi

Ismart Black Dial Stainless Steel Strap Watch User Manual

Model: Ismart Multi

1. INTRODUCTION

This manual provides essential information for the setup, operation, and maintenance of your Ismart Black Dial Stainless Steel Strap Watch. Please read this manual carefully to ensure proper use and longevity of your timepiece.



Image 1.1: Front view of the Ismart Black Dial Stainless Steel Strap Watch. The watch features a black dial with silver hands and hour markers, encased in a silver-tone stainless steel case, and paired with a matching stainless steel strap.

2. WATCH COMPONENTS

Familiarize yourself with the main components of your Ismart watch:

- **Watch Case:** The main body of the watch that houses the movement and dial.
- **Dial:** The face of the watch displaying the time.
- **Hands:** Hour, minute, and second hands indicating the time.
- **Crown:** The knob on the side of the watch used for setting the time.

- **Stainless Steel Strap:** The band that secures the watch to your wrist.
- **Clasp:** The mechanism that fastens the strap.

3. SETUP

3.1 Setting the Time

1. Gently pull the crown outwards to the first click position.
2. Rotate the crown clockwise or counter-clockwise to set the hour and minute hands to the correct time.
3. Once the time is set, push the crown back into its original position to start the watch movement.

3.2 Adjusting the Strap

The stainless steel strap can be adjusted to fit your wrist. This typically involves removing or adding links. For precise adjustment, it is recommended to visit a professional watch repair service or jeweler. Do not attempt to force links or use improper tools, as this may damage the strap.

4. OPERATION

Your Ismart watch is a quartz timepiece, designed for accurate timekeeping. Once the time is set, the watch will operate continuously until the battery requires replacement.

- Ensure the crown is fully pushed in for the watch to run.
- Avoid exposing the watch to extreme temperatures or strong magnetic fields, as this may affect its accuracy.

5. MAINTENANCE

5.1 Cleaning

To maintain the appearance of your watch:

- Wipe the watch case and strap regularly with a soft, dry cloth.
- For stubborn dirt on the stainless steel strap, a slightly damp cloth can be used, followed by immediate drying.
- Avoid using harsh chemicals, solvents, or abrasive cleaners, as these can damage the watch's finish.

5.2 Water Resistance

While the watch features a stainless steel back, specific water resistance ratings are not provided. It is advisable to avoid direct exposure to water, such as swimming or showering, to prevent internal damage. The watch is generally designed for everyday wear and can withstand minor splashes.

5.3 Battery Replacement

The watch is powered by a quartz movement, which requires a battery. When the watch stops running, it likely indicates the battery needs replacement. It is recommended to have the battery replaced by a qualified watch technician to ensure proper sealing and prevent damage to the movement.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Watch not running	Crown not pushed in; Dead battery	Ensure crown is fully pushed in; Replace battery (professional service recommended)
Time is inaccurate	Time not set correctly; Exposure to strong magnetic fields	Reset the time as per Section 3.1; Keep watch away from strong magnets
Condensation under crystal	Exposure to moisture/water	Seek professional watch repair immediately to prevent damage to movement

7. SPECIFICATIONS

Model Number:	Ismart Multi
Movement Type:	Quartz
Case Material:	Stainless Steel
Case Diameter:	4.2 Millimetres
Case Thickness:	3.5 Millimetres
Band Material:	Stainless Steel
Band Color:	Silver
Dial Color:	Black
Item Weight:	0.1 Grams
Manufacturer:	Ismart
Country of Origin:	India
First Available:	22 August 2019

8. WARRANTY INFORMATION

This Ismart watch comes with a **6 Month Warranty** from the date of purchase. This warranty covers manufacturing defects under normal use. It does not cover damage resulting from misuse, accidents, unauthorized repairs, or normal wear and tear. Please retain your proof of purchase for warranty claims.

For details on extended warranty options, please refer to the product listing or contact your retailer.

9. CUSTOMER SUPPORT

If you encounter any issues not covered in this manual or require further assistance, please contact the seller or manufacturer directly. Provide your product model number (Ismart Multi) and details of the issue for efficient support.

For general inquiries, you may refer to the official Ismart website or contact their customer service department.

