

[Manuals.plus](#) /

- › [Screaming Meanie](#) /
- › Screaming Meanie Forte Alarm Clock - User Manual

Screaming Meanie TZ-600

Screaming Meanie Forte Alarm Clock - Instruction Manual

Brand: Screaming Meanie | Model: TZ-600

1. INTRODUCTION AND OVERVIEW

The Screaming Meanie Forte Alarm Clock is designed to provide reliable and highly effective alarm functions, particularly for heavy sleepers or individuals with impaired vision or hearing. Its large display and customizable settings ensure you stay on schedule for important daily events.

This manual provides comprehensive instructions for setting up, operating, and maintaining your Screaming Meanie Forte Alarm Clock.



Figure 1: The Screaming Meanie Forte Alarm Clock and its product box.

2. KEY FEATURES

- **Extra Large 9" Display:** Provides clear, easy-to-read time and information.
- **6 Programmable Alarms:** Set multiple alarms for different needs throughout the day or week.
- **Adjustable Loudness:** Up to 90 dB, ensuring the alarm is audible from any room.
- **5 Brightness Settings:** Customize display brightness for comfortable viewing, including a night dimmer function.
- **10 Language Options:** Supports English, Chinese, French, German, Italian, Japanese, Korean, Portuguese, Spanish, and Turkish.
- **Front-Facing Buttons:** Designed for easy setup and operation without needing to turn the clock over.
- **14 Reminder Icons:** Visual indicators for various alarm purposes (e.g., medication, appointments).
- **Exclusive Alarm Countdown:** Displays the time remaining until the next alarm.
- **Memory Backup:** Retains essential settings during power interruptions.
- **Adjustable Viewing Stand:** Allows for optimal positioning from various angles.

AWESOME FEATURES



6
Customizable
ALARMS



6
Quick
BUTTONS



10
Reminder
ICONS



10
LANGUAGE
Settings



5
LOUDNESS
Settings



5
BRIGHTNESS
Settings



Memory
BATTERY



Powered by
MICRO USB



Figure 2: Visual summary of the alarm clock's key features, including customizable alarms, quick buttons, reminder icons, language settings, loudness settings, brightness settings, memory battery, and Micro USB power.

3. SETUP

3.1 Powering On

Connect the provided Micro USB cable to the alarm clock and plug the adapter into a standard electrical outlet. The clock will power on automatically. The memory backup feature ensures your settings are retained even if power is temporarily lost.



Figure 3: The alarm clock connected to its Micro USB power cable, illustrating the memory backup feature for essential settings.

3.2 Initial Setup (Language, Date/Time)

Upon first power-on or after a factory reset, you may need to set the language, date, and time. Use the front-facing buttons to navigate the menus.

1. Press the **Menu** button (top-right button with a gear icon) to access settings.
2. Use the **Up/Down** buttons on the left side to scroll through options.
3. Select "Language" and press the **Right** button to choose your preferred language from the 10 available options.
4. Select "Date / Time" and press the **Right** button. Use the **Up/Down** buttons to adjust values (Year, Month, Day, Time) and the **Right** button to move to the next field.
5. Press the **Home** button (top-right button with a house icon) to return to the main display.

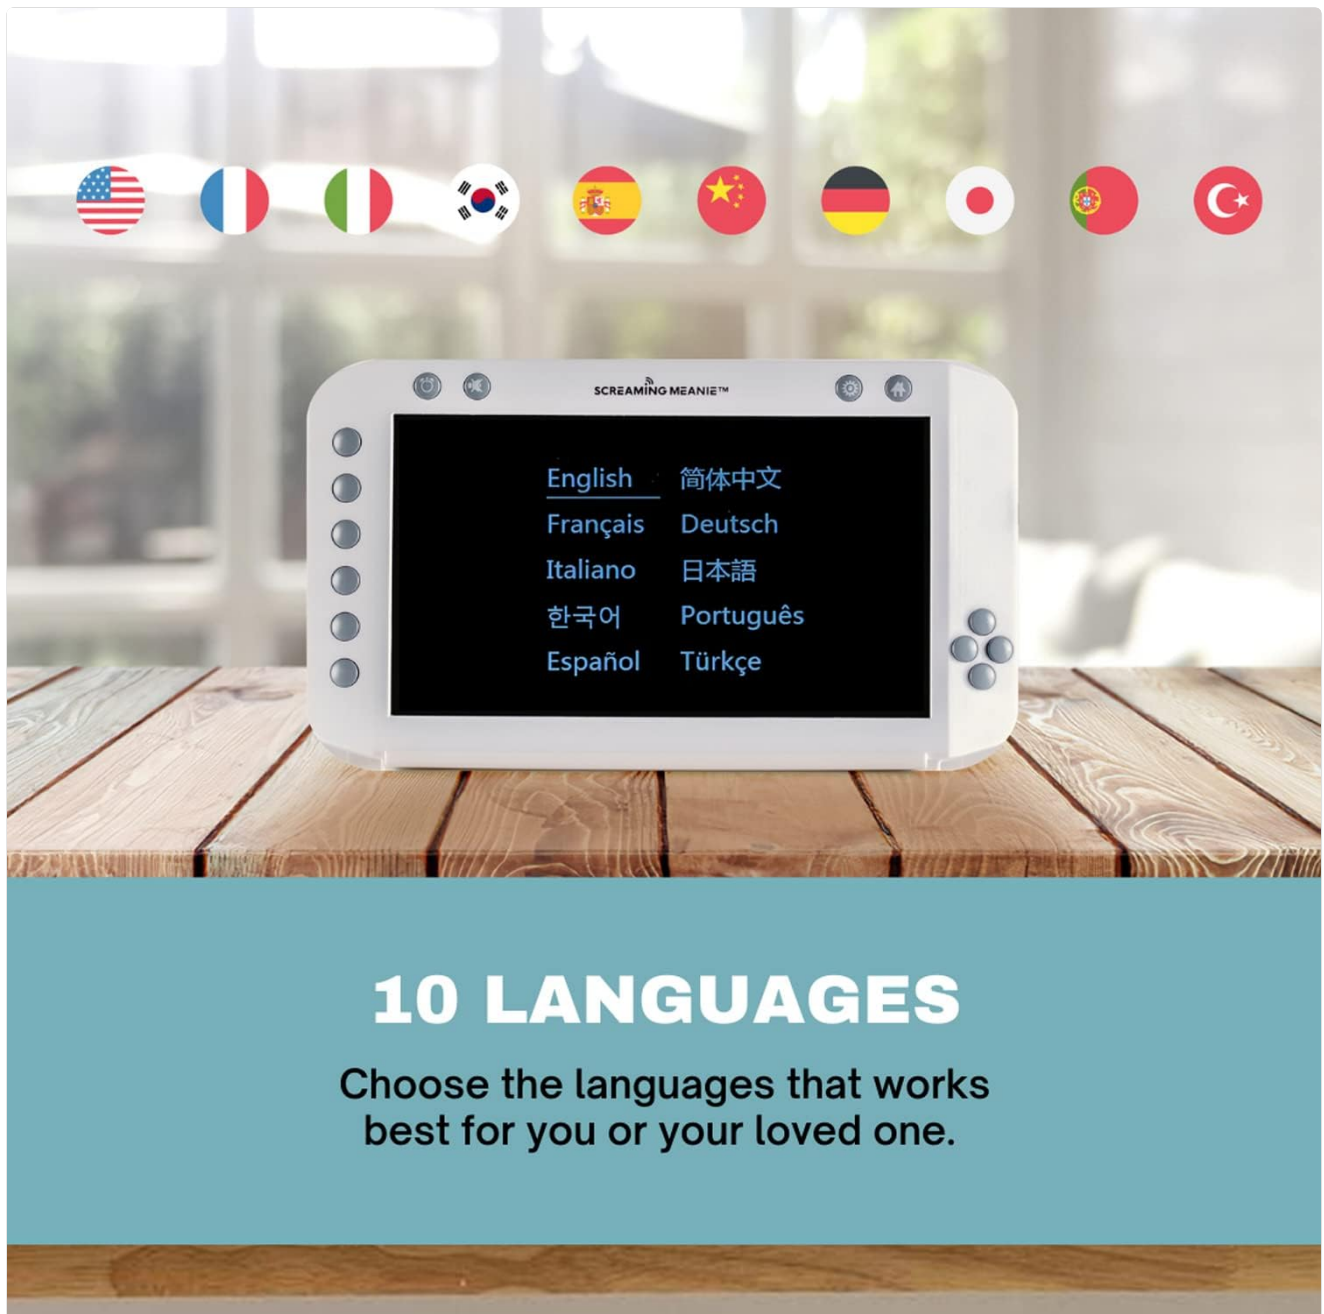


Figure 4: The alarm clock displaying its language selection menu, offering 10 different languages for user convenience.

3.3 Placement and Adjustable Stand

Position the alarm clock on a flat, stable surface. The integrated adjustable stand allows you to tilt the display for optimal viewing angles, from almost vertical to nearly flat.

ADJUSTABLE STAND

From almost 90 degrees to nearly flat.



Figure 5: The alarm clock demonstrating its adjustable stand, allowing the screen to be tilted from nearly 90 degrees to almost flat for versatile placement.

4. OPERATING INSTRUCTIONS

4.1 Setting Alarms

The Screaming Meanie Forte allows you to set up to six independent alarms. Follow these steps:

1. Press the **Menu** button (top-right button with a gear icon).
2. Select "Alarm" using the **Up/Down** buttons and press the **Right** button.
3. You will see a list of 6 alarms. Use the **Up/Down** buttons on the left to select an alarm slot.
4. To activate an alarm, press the **Up** button on the right side. The alarm icon will brighten to indicate it's ON. Press **Down** to turn it OFF.
5. Press the **Right** button to move to the time setting for the selected alarm. Use **Up/Down** to adjust hours and minutes.

6. Press **Right** again to select the days of the week for the alarm. Use **Up/Down** to toggle each day ON/OFF. Active days will appear brighter.
7. Press **Right** once more to select an icon for the alarm (e.g., medication, appointment). Use **Up/Down** to cycle through the 14 available icons.
8. Repeat for other alarms as needed.
9. Press the **Home** button to save settings and return to the main display.

Your browser does not support the video tag.

Video 1: A detailed demonstration on how to set alarms and adjust various settings on the Screaming Meanie Forte Alarm Clock.

4.2 Adjusting Brightness and Night Dimmer

The clock features five brightness settings for the display. You can also set a specific time range for the display to dim automatically for comfortable night-time use.

- Press the **Menu** button.
- Select "Properties" and press the **Right** button.
- Navigate to "Brightness" to manually adjust the display intensity using the **Up/Down** buttons.
- For the Night Dimmer, select "Low Light" and set the start and end times using the **Up/Down** and **Right** buttons. During this period, the display will automatically dim.
- Press the **Home** button to save and exit.

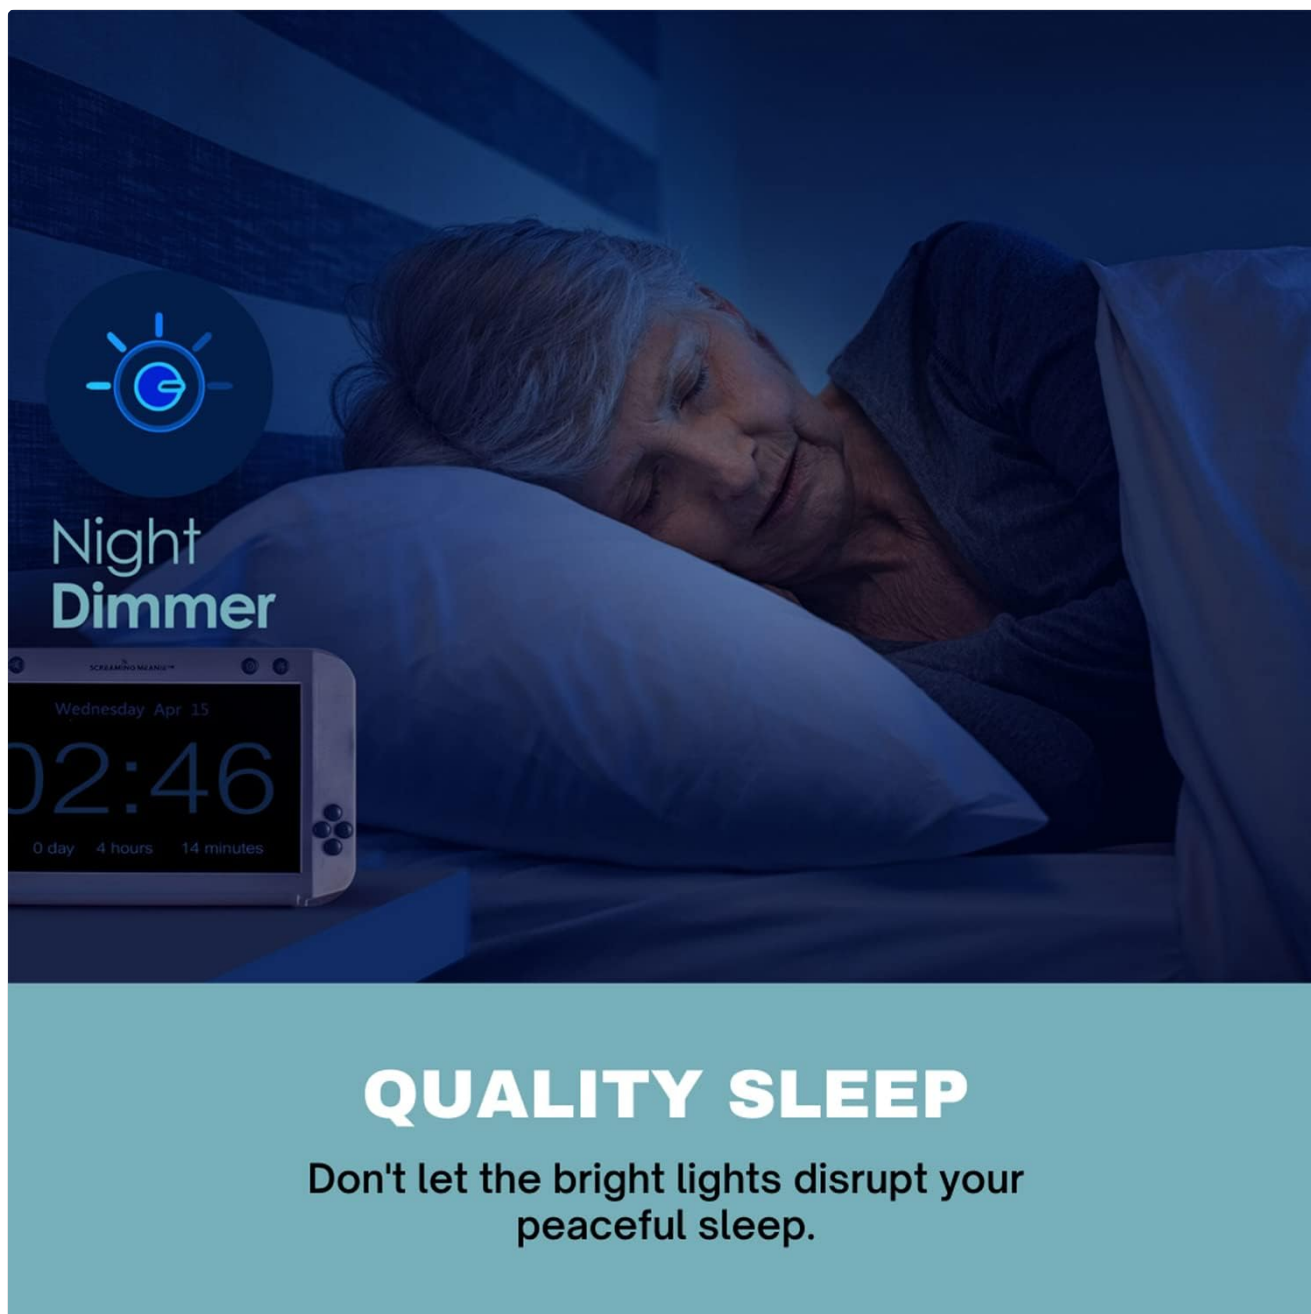


Figure 6: The alarm clock's night dimmer feature, designed to prevent bright lights from disrupting peaceful sleep.

4.3 Alarm Countdown Function

The Screaming Meanie Forte features a patented alarm countdown function. On the main display, below the current time, you will see a countdown indicating the days, hours, and minutes until the next scheduled alarm. This helps you stay informed and on track with your schedule.

5. MAINTENANCE

5.1 Cleaning

To clean the alarm clock, gently wipe the display and casing with a soft, dry cloth. For stubborn marks, a slightly damp cloth can be used, followed by immediate drying. Avoid using abrasive cleaners, solvents, or excessive moisture, as these can damage the device.

5.2 Battery Backup

The Screaming Meanie Forte is designed to retain its settings during power outages thanks to its internal memory backup. No user-replaceable batteries are required for this function. Ensure the device is connected to a reliable power source for continuous operation.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Clock display is blank.	No power supply.	Ensure the Micro USB cable is securely connected to the clock and the power adapter is plugged into a working electrical outlet.
Alarm does not sound.	Alarm is not activated or volume is too low.	Check alarm settings to ensure it is turned ON for the desired time and days. Increase the volume in the "Properties" menu.
Display is too bright/dim.	Brightness settings are not optimal or Low Light feature is active.	Adjust brightness in the "Properties" menu. Check "Low Light" settings to ensure it's not dimming the display unexpectedly.
Time/Date is incorrect.	Incorrect manual setting.	Go to "Date / Time" in the menu and re-enter the correct year, month, day, and time.

7. SPECIFICATIONS

- Brand:** Screaming Meanie
- Model:** TZ-600
- Color:** White
- Display Type:** Digital
- Product Dimensions:** 10.5"W x 6"H
- Item Weight:** 1.9 Pounds
- Power Source:** Electrical (Micro USB) with Memory Backup
- Frame Material:** Acrylonitrile Butadiene Styrene
- Mounting Type:** Stand or Wall Mount
- Manufacturer:** Pacific Cornetta
- UPC:** 722152019715

DIMENSION

Easy to see and looks great in every room.



Figure 7: The physical dimensions of the Screaming Meanie Forte Alarm Clock, highlighting its 9-inch screen size.

8. WARRANTY AND SUPPORT

8.1 Limited Warranty

The Screaming Meanie Forte Alarm Clock comes with a limited warranty provided by the manufacturer, Pacific Cornetta. Please refer to the product packaging or the manufacturer's official website for specific terms and conditions of the warranty.

8.2 Customer Support

For technical assistance, troubleshooting, or warranty claims, please contact Screaming Meanie customer support. Contact information can typically be found on the product packaging or the official Screaming Meanie website.

You can also visit the [Screaming Meanie Store on Amazon](#) for more product information and support resources.

