

[Manuals.plus](#) /

> [Goplus](#) /

> Goplus 6.5FT Prelit Pencil Christmas Tree Instruction Manual, Model CM22074

Goplus CM22074

Goplus 6.5FT Prelit Pencil Christmas Tree Instruction Manual

Model: CM22074

INTRODUCTION

This manual provides instructions for the assembly, operation, and maintenance of your Goplus 6.5FT Prelit Pencil Christmas Tree. Please read all instructions carefully before assembly and use, and retain this manual for future reference.





Image: The Goplus 6.5FT Prelit Pencil Christmas Tree illuminated with multicolor LED lights.

SAFETY INFORMATION

- Ensure all parts are present and undamaged before assembly.
- Do not overload electrical outlets. Connect the tree to a suitable power source.
- Keep the tree away from open flames, heat sources, and flammable materials.
- This product is for indoor use only. Do not expose to rain or moisture.
- Always unplug the tree from the power source before performing any maintenance or when leaving unattended for extended periods.
- Keep small children and pets away from the tree during assembly and operation to prevent accidents.
- The tree is flame retardant, but caution should still be exercised around heat sources.

PACKAGE CONTENTS

Verify that all components are included in your package:

- Tree Sections (3 sections for 6.5FT model)
- Metal Stand
- Assembly Bolt for Stand
- Pre-installed LED Lights (250 lights)
- UL Certificated Adaptor
- Remote Control

SETUP INSTRUCTIONS

Follow these steps to assemble your Goplus Prelit Pencil Christmas Tree:

1. Step 1: Assemble the Metal Stand

Unfold the metal X-shaped base on a flat, stable surface. Insert the assembly bolt to secure the legs in place.



Image: Unfolding the metal X-shaped stand for the Christmas tree.

2. Step 2: Insert the Bottom Tree Section

Locate the bottom section of the tree (usually marked 'C' or the widest section). Insert it into the assembled metal stand and tighten the bolt to secure it.

Simple Installation

A



B



C



Step 1:

Unfold the metal x-shaped base



Step 2:

Insert C and fix with included bolt



Step 3:

Insert other separate sections in order



Step 4:

Manually fluff branch tips

Image: Inserting the bottom section of the tree into the metal stand and securing it with a bolt.

3. Step 3: Assemble Remaining Sections

Insert the other separate sections in order (e.g., 'B' then 'A') into the section below it. The hinged branches will fall into place automatically.

4. Step 4: Connect Electrical Cords

Connect the electrical cords from each tree section to each other, ensuring a secure connection. Plug the main power cord into the UL Certificated Adaptor, then plug the adaptor into a standard electrical outlet.

5. Step 5: Fluff the Branches

Manually fluff each branch tip, working from the bottom to the top, to give the tree a full and natural appearance. Adjust branches to fill any gaps.

Enjoy this leisurely and joyful holiday season with your loved ones



Image: A hand demonstrating how to manually fluff the branch tips to achieve a fuller tree appearance.

OPERATING INSTRUCTIONS (LED LIGHTS)

Your Goplus Prelit Pencil Christmas Tree comes with pre-installed LED lights and a remote control for easy operation.

Using the Remote Control:

- Point the remote control directly at the light receiver on the tree.
- Use the ON/OFF buttons to power the lights.
- Select desired light colors (e.g., white, multicolor, red, green, blue, purple, orange) using the color buttons.
- Choose from various lighting modes such as twinkle, strobe, wave, or party mode using the mode selection buttons.
- Adjust brightness and speed of effects using the dedicated buttons.
- Set a timer for 4, 6, or 8 hours using the timer buttons. The lights will automatically turn off after the set duration and turn on again at the same time the next day.

The ornaments are not included



Image: The remote control for the tree's LED lights, showing various color and mode options.

Video: Demonstration of the Goplus Prelit Pencil Christmas Tree's various light settings and remote control functionality.

MAINTENANCE

Cleaning:

Wipe the tree branches with a soft, dry cloth to remove dust. Do not use harsh chemicals or abrasive cleaners.

Storage:

- Carefully disassemble the tree by reversing the assembly steps.
- Store the tree in its original box or a suitable storage bag in a cool, dry place away from direct sunlight.
- Avoid placing heavy objects on the tree during storage to prevent damage to branches and lights.

TROUBLESHOOTING

Problem	Solution
Lights are not working.	Ensure all sections are properly connected electrically. Check if the power adapter is securely plugged into the outlet and the tree. Verify the remote control batteries are functional. Check for any loose or damaged bulbs.
Tree is unstable.	Ensure the metal stand is fully unfolded and the bolt is tightened. Place the tree on a flat, level surface.
Branches appear sparse.	Manually fluff each branch tip thoroughly, bending and shaping them to fill gaps.

SPECIFICATIONS

- **Brand:** Goplus
- **Model Number:** CM22074
- **Height:** 6.5 feet (78 inches)
- **Product Dimensions:** 26.4"D x 26.4"W x 78"H
- **Material:** Metal, Polyvinyl Chloride (PVC)
- **Tree Type:** Fir
- **Tip Count:** 708
- **Lights:** 250 Pre-Lit LED Lights
- **Light Color:** Multicolor (with various selectable colors and modes)
- **Base Type:** Metal Stand
- **Item Weight:** 11 Pounds
- **Special Feature:** Prelit, Hinged Design, Slim Pencil Design

WARRANTY AND SUPPORT

For warranty information, technical support, or replacement parts, please contact Goplus customer service. Refer to your purchase documentation for specific contact details or visit the official Goplus website.

You can visit the Goplus Store for more products and information: [Goplus Store](#)

