

[Manuals.plus](#) /

› [Runleader](#) /

› Runleader Digital Dual Kitchen Timer User Manual

Runleader RL-KT002

Runleader Digital Dual Kitchen Timer User Manual

Model: RL-KT002

PRODUCT OVERVIEW

The Runleader Digital Dual Kitchen Timer (Model RL-KT002) is a versatile timing device designed for various applications, including cooking, baking, exercise, and study. It features a large, clear LCD display, independent buttons for ease of use, and the ability to function as both a count-down timer and a stopwatch. This timer supports dual independent timing channels and offers adjustable alarm volume and multiple installation options.

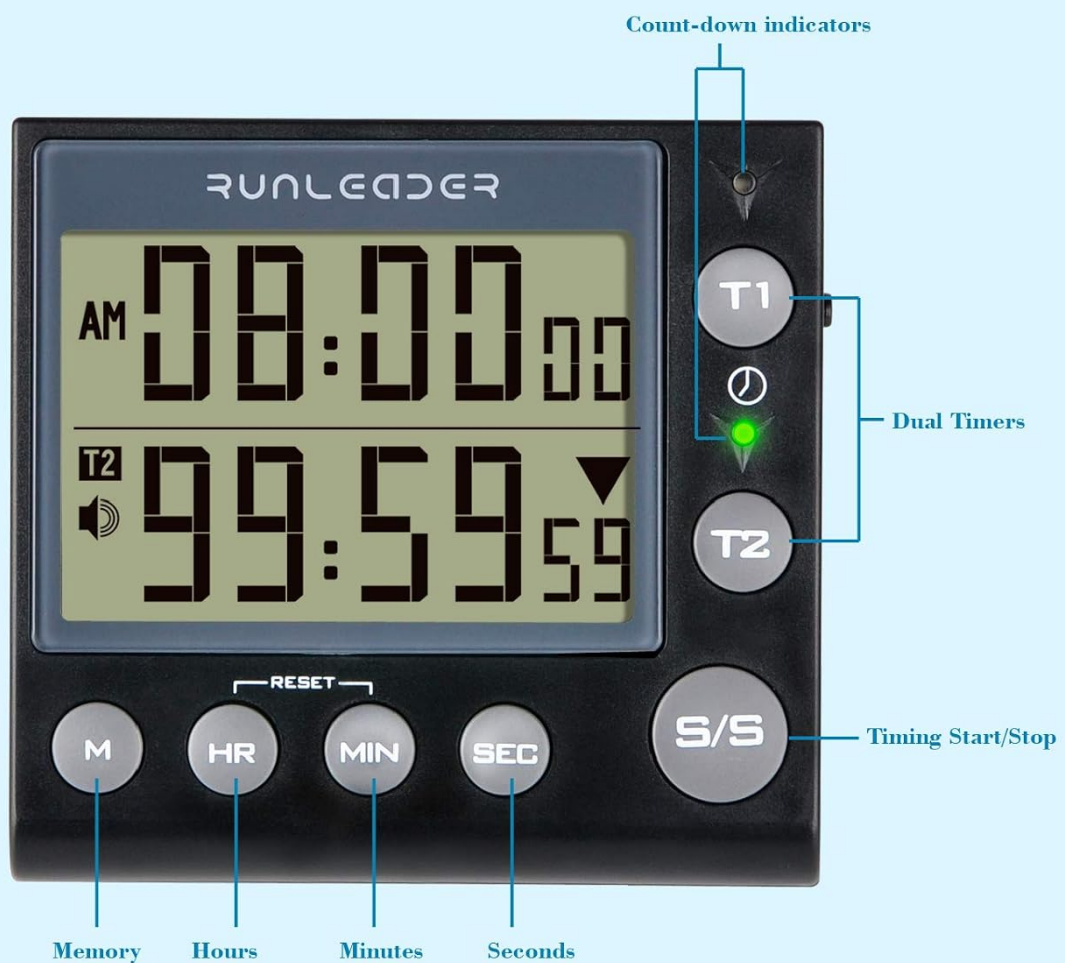


Figure 1: Front view of the Runleader Digital Dual Kitchen Timer with key buttons labeled for easy identification.

Key features include:

- **Dual Timers:** Two independent timing channels (T1 and T2) for simultaneous count-down or count-up operations.
- **Large LCD Display:** High-definition screen with bold numbers for easy readability.
- **Adjustable Alarm:** Three volume settings (High, Mute, Low) to suit different environments.
- **Multiple Installation Options:** Integrated stand for tabletop use, strong magnetic back for metal surfaces, and a hanging hook.
- **Memory Function:** Allows for quick recall of previously set times.

SETUP

Battery Installation

The Runleader Digital Dual Kitchen Timer requires two (2) AAA batteries (not included) for operation. Please follow these steps to install the batteries:

1. Locate the battery compartment cover on the back of the timer.
2. Slide the cover downwards to open the compartment.
3. Insert two AAA batteries, ensuring the correct polarity (+/-) as indicated inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



2*AAA batteries, replaceable.

Figure 2: Rear view of the timer indicating the battery compartment and overall dimensions.

Once batteries are installed, the timer display will activate.

OPERATION

Button Functions

Button	Function
T1	Selects Timer 1 for setting or operation.
T2	Selects Timer 2 for setting or operation.
M	Memory function; recalls last set time or saves current time.
HR	Adjusts hours for selected timer.
MIN	Adjusts minutes for selected timer.
SEC	Adjusts seconds for selected timer.
S/S	Start/Stop button for the selected timer. Also used to save battery when not in use.
RESET (small button)	Resets the selected timer to zero. Requires a small pointed object to press.
Volume Icon (side button)	Adjusts alarm volume (High/Mute/Low).

Setting a Count-Down Timer

The timer can count down from up to 99 hours, 59 minutes, and 59 seconds.

1. Press the **T1** or **T2** button to select the desired timer channel. The corresponding indicator light will illuminate.
2. Press **HR**, **MIN**, and **SEC** buttons to set the desired countdown time. Press and hold to rapidly advance the numbers.
3. Press the **S/S** button to start the countdown. The indicator light will blink.
4. When the time reaches zero, the alarm will sound for 1 minute. Press any button to stop the alarm.
5. To reset the timer, press the **RESET** button using a small pointed object.

Using as a Stopwatch (Count-Up)

The timer can also function as a stopwatch, counting up from zero.

1. Ensure the selected timer (T1 or T2) is reset to 00:00:00. If not, press the **RESET** button.
2. Press the **S/S** button to start the count-up.
3. Press **S/S** again to pause the stopwatch. Press **S/S** once more to resume.
4. To reset the stopwatch, press the **RESET** button while the stopwatch is paused or running.

Adjusting Alarm Volume

The timer offers three alarm volume settings: High, Mute, and Low. To adjust the volume, locate the small button on the side of the timer, next to the volume icon. Press this button repeatedly to cycle through the volume options.



The buzzer alarm is clear and loud to remind for a distance.



Figure 3: The timer's loud alarm is designed to be heard from a distance, ensuring you don't miss important alerts.

Memory Function

The memory function allows you to quickly recall a frequently used time setting. To use this feature:

- **To Save a Time:** After setting a specific time (e.g., 10 minutes), but before starting the timer, press and hold the **M** button until the display indicates the time is saved.
- **To Recall a Time:** Press the **M** button briefly. The saved time will appear on the display. You can then press **S/S** to start the countdown.



Figure 4: The dual timer feature allows for simultaneous tracking of two different tasks, ideal for complex cooking or baking.

INSTALLATION METHODS

The Runleader Digital Dual Kitchen Timer offers three convenient installation methods to suit various environments:

- **Retractable Stand:** Pull out the integrated stand on the back of the timer to place it upright on any flat surface, such as a countertop or desk.
- **Magnetic Back:** The strong magnets on the back allow the timer to be securely attached to metal surfaces, including refrigerators, ovens, or whiteboards.
- **Hanging Hook:** Utilize the built-in hook hole to hang the timer on a wall hook, nail, or pegboard for easy visibility and access.

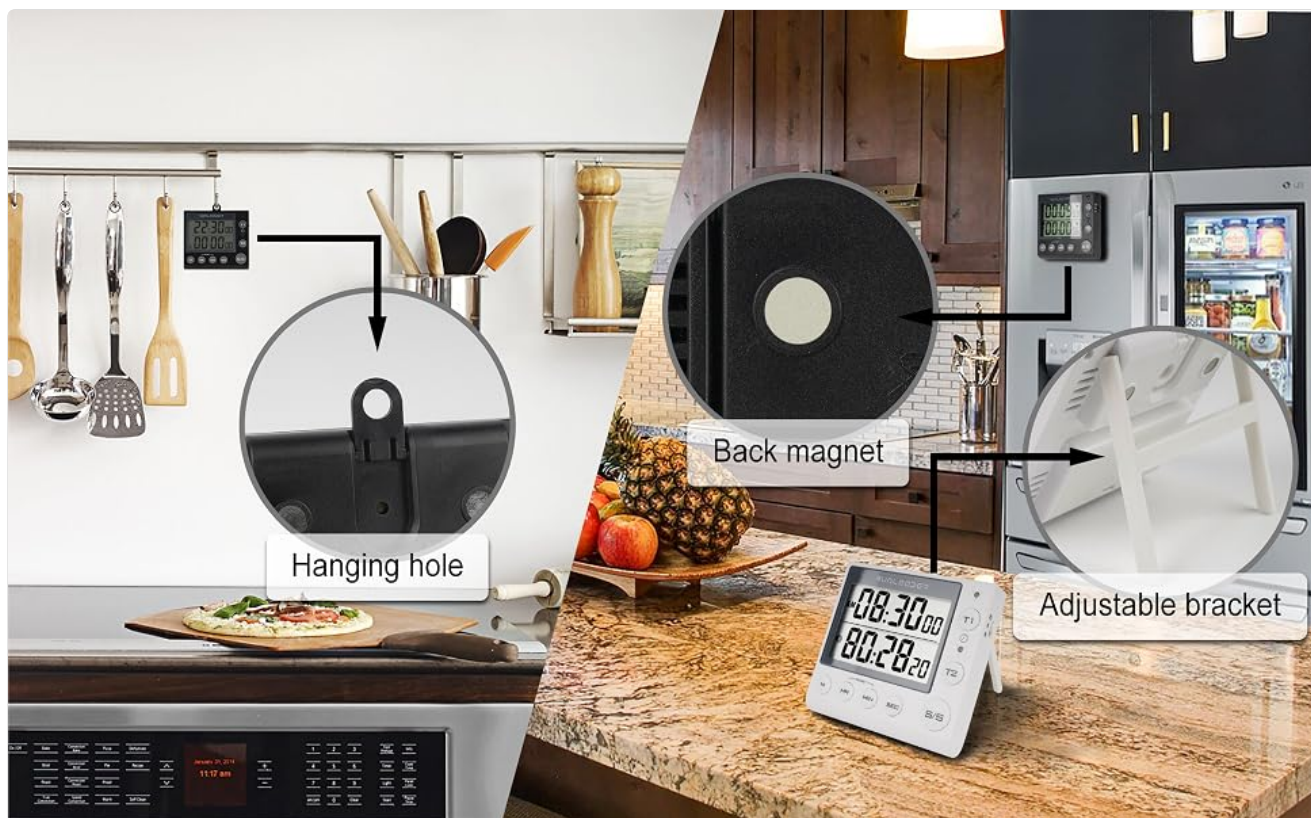


Figure 5: Detailed view of the timer's versatile installation options, including the magnetic back, hanging hole, and adjustable stand.

MAINTENANCE

To ensure the longevity and optimal performance of your Runleader Digital Dual Kitchen Timer, please follow these maintenance guidelines:

- **Cleaning:** Wipe the timer with a soft, damp cloth. Do not use abrasive cleaners or immerse the device in water.
- **Battery Replacement:** Replace batteries when the display becomes dim or the timer functions erratically. Always use new AAA batteries and dispose of old batteries responsibly.
- **Storage:** Store the timer in a cool, dry place when not in use. If storing for extended periods, remove the batteries to prevent leakage.
- **Avoid Extreme Conditions:** Do not expose the timer to extreme temperatures, direct sunlight for prolonged periods, or high humidity.

TROUBLESHOOTING

If you encounter any issues with your Runleader Digital Dual Kitchen Timer, please refer to the following common problems and solutions:

Problem	Possible Cause / Solution
---------	---------------------------

Problem	Possible Cause / Solution
Display is blank or dim.	Batteries are dead or incorrectly installed. Replace with new AAA batteries, ensuring correct polarity.
Timer does not start/stop.	Ensure the correct timer channel (T1 or T2) is selected. Press the S/S button firmly. If still unresponsive, try resetting the timer using the RESET button.
Alarm is too quiet or not sounding.	Check the volume setting using the side volume button. Ensure it is not set to "Mute" or "Low" if a loud alarm is desired.
Numbers are not advancing when setting time.	Ensure a timer channel (T1 or T2) is selected. Press and hold the HR , MIN , or SEC buttons to advance numbers rapidly. Brief presses will increment by one.
Timer is not holding securely with magnet.	Ensure the surface is flat and metallic. The magnetic strength is designed for typical kitchen appliances. Avoid rough or uneven surfaces.

If the problem persists after trying these solutions, please contact customer support.

SPECIFICATIONS

Feature	Detail
Model Number	RL-KT002
Brand	Runleader
Color	Black
Material	Acrylonitrile Butadiene Styrene (ABS)
Product Dimensions (L x W x H)	1.02"D x 4.33"W x 3.35"H (approx. 26mm D x 110mm W x 85mm H)
Item Weight	3.8 ounces (approx. 108 grams)
Timing Range	00:00:00 to 99:59:59 (Hours:Minutes:Seconds)
Power Source	2 x AAA Batteries (not included)
Alarm Volume Settings	High, Mute, Low
Installation Methods	Magnetic back, Retractable stand, Hanging hook
Certifications	CE, ROHS
UPC	791328974103

WARRANTY AND SUPPORT

The Runleader Digital Dual Kitchen Timer (Model RL-KT002) comes with a **2-year warranty** from the date of purchase, covering defects in materials and workmanship under normal use. This warranty does not cover damage caused by misuse, accident, unauthorized modification, or improper battery installation.

For technical support, warranty claims, or any questions regarding your product, please contact Runleader customer service through the retailer's platform where you purchased the item or visit the official Runleader website for contact information.

Please retain your proof of purchase for warranty purposes.