

[manuals.plus](#) /› [LEXON](#) /› [LEXON MINO X Wireless Floating Bluetooth Speaker Instruction Manual](#)

LEXON MINO X

LEXON MINO X Wireless Floating Bluetooth Speaker Instruction Manual

Model: MINO X

1. PRODUCT OVERVIEW

The LEXON MINO X is a compact, portable Bluetooth speaker designed for versatile use. It features a modern rubber finish and IPX7 waterproof rating, making it suitable for various environments, including poolside, showers, and kitchens. This speaker supports True Wireless Stereo (TWS) technology, allowing two MINO X speakers to be paired for enhanced sound. It also includes hands-free calling and a selfie shutter function.



Image: The LEXON MINO X speaker in black, showcasing its compact and minimalist design.

2. PACKAGE CONTENTS

- LEXON MINO X Bluetooth Speaker
- USB Type-C to USB Type-A Charging Cable
- Instruction Manual (this document)

3. SETUP

3.1 Charging the Speaker

1. Connect the supplied USB Type-C cable to the charging port on the MINO X speaker.
2. Connect the other end of the cable (USB Type-A) to a compatible USB power source (e.g., computer USB port, USB wall

adapter).

3. The charging indicator light will illuminate. A full charge takes approximately 1 hour.
4. Once fully charged, the indicator light will change or turn off (refer to specific LED behavior in the quick start guide if available).

3.2 Powering On/Off

- To power on: Press and hold the discreet button located at the bottom of the speaker until you hear an audible cue or see the indicator light.
- To power off: Press and hold the same button until you hear an audible cue or the indicator light turns off.

3.3 Bluetooth Pairing (Single Speaker)

1. Ensure the MINO X speaker is powered on and in pairing mode (indicator light will typically flash).
2. On your smartphone or tablet, navigate to the Bluetooth settings.
3. Search for available devices and select "MINO X" from the list.
4. Once connected, you will hear an audible confirmation, and the indicator light will stabilize.

3.4 True Wireless Stereo (TWS) Pairing (Two Speakers)

To achieve a stereo sound experience, you can pair two MINO X speakers together.

1. Ensure both MINO X speakers are powered on and not connected to any other Bluetooth device.
2. Press the button on one speaker twice rapidly. It will enter TWS pairing mode.
3. The two speakers will automatically search for and connect to each other. You will hear an audible confirmation once connected.
4. Once TWS paired, connect your smartphone or tablet to one of the MINO X speakers via Bluetooth as described in section 3.3. Both speakers will then play audio in stereo.

TWS テクノロジー

本体に内蔵されたTWS(完全なワイヤレスステレオ)技術で、2台のMinoXを接続して、迫力あるサウンドを楽しむことも可能。



Image: Two MINO X speakers shown together, illustrating the True Wireless Stereo (TWS) pairing capability for a combined 6W sound output.

4. OPERATING INSTRUCTIONS

4.1 Playing Audio

- Once paired with your device, simply start playing audio from your smartphone or tablet. The sound will be transmitted to the MINO X speaker(s).
- Volume control is managed directly from your connected device.

4.2 Hands-Free Calling

- When a call comes in while connected to the MINO X, press the discreet button once to answer the call.
- To end a call, press the button once again.
- To reject an incoming call, press and hold the button for approximately 2 seconds.

4.3 Selfie Shutter Function

The MINO X can also function as a remote shutter for your smartphone camera.

1. Ensure the MINO X is paired with your smartphone via Bluetooth.
2. Open your smartphone's camera application.
3. Position your phone for the desired shot.
4. Press the discreet button on the MINO X speaker once to trigger the camera shutter.

ハンズフリー&セルフィー

Mino X には、端末の下にある目立たない
プレスボタンが搭載されており、
リモート自撮りコントロール機能の利用や
ハンズフリー通話が可能です。



Image: A child interacting with a smartphone, with the MINO X speaker visible, highlighting its use for hands-free calls and remote selfie capture.

5. MAINTENANCE

- Cleaning:** Due to its IPX7 waterproof rating, the MINO X can be rinsed with water. For general cleaning, wipe with a soft, damp cloth. Avoid using harsh chemicals or abrasive cleaners.
- Drying:** After exposure to water, ensure the charging port is completely dry before connecting the charging cable.
- Storage:** Store the speaker in a cool, dry place away from direct sunlight and extreme temperatures.
- Battery Care:** To prolong battery life, avoid fully discharging the speaker frequently. Charge it regularly, even if not in use for extended periods.



Images: Demonstrations of the MINO X speaker's IPX7 waterproof capability, showing it being submerged and used in a bath.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Speaker does not power on.	Low battery.	Charge the speaker for at least 1 hour using the supplied USB-C cable.
Cannot pair with Bluetooth device.	Speaker not in pairing mode; device Bluetooth off; too far from device.	Ensure speaker is powered on and indicator light is flashing. Turn Bluetooth off and on on your device. Move speaker closer to your device (within 10 meters).
No sound or low volume.	Volume on speaker or device is too low; speaker not connected.	Increase volume on both your connected device and the speaker. Re-establish Bluetooth connection.
TWS pairing fails.	Speakers already connected to another device; incorrect pairing procedure.	Ensure both speakers are disconnected from other devices. Follow TWS pairing steps precisely (Section 3.4).
Selfie shutter not working.	Speaker not paired; camera app not open.	Ensure speaker is paired with your phone. Open your phone's native camera application.

7. SPECIFICATIONS

Model Name	MINO X
Speaker Type	Portable Speaker
Features	Waterproof (IPX7)
Recommended Use	Smartphones, Tablets, Music Players
Compatible Devices	Smartphones, Tablets
Color	Black (for this specific model)
Included Components	USB Type-C to USB Type-A Cable
Product Dimensions (L x W x H)	43mm x 40mm x 43mm

Product Weight	80 grams
Waterproof Rating	IPX7
Wireless Technology	Bluetooth 4.2
Power Source	Battery
Battery Type	Lithium Ion (230mAh)
Max Continuous Playback Time	Up to 3 hours
Charging Time	Approximately 1 hour
Speaker Max Output	3 Watts (per speaker)
Audio Output Mode	Stereo (with TWS pairing)
Mounting Type	Tabletop Mount

8. WARRANTY INFORMATION

The LEXON MINO X Wireless Floating Bluetooth Speaker comes with a Limited Warranty. Please refer to the warranty card included in your product packaging or visit the official LEXON website for detailed terms and conditions regarding warranty coverage, duration, and claims procedures.

9. SUPPORT

For further assistance, technical support, or inquiries not covered in this manual, please contact LEXON customer support through their official website or the contact information provided in your product documentation. When contacting support, please have your product model (MINO X) and purchase details ready.