

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

- › [Philips Kitchen Appliances](#) /
- › [Philips 2200 Series Fully Automatic Espresso Machine Instruction Manual](#)

Philips Kitchen Appliances EP2230/14

Philips 2200 Series Fully Automatic Espresso Machine

Model: EP2230/14 | Brand: Philips Kitchen Appliances

INTRODUCTION

Thank you for choosing the Philips 2200 Series Fully Automatic Espresso Machine. This manual provides essential information for setting up, operating, and maintaining your new espresso machine to ensure you enjoy delicious coffee for years to come. Please read all instructions carefully before first use.

IMPORTANT SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and/or injury to persons.

- Read all instructions.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against fire, electric shock, and personal injury, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock, or personal injury.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

WHAT'S IN THE BOX

Your Philips 2200 Series Espresso Machine package includes the following components:

- Philips 2200 Series Fully Automatic Espresso Machine
- AquaClean Filter

- LatteGo Milk System Carafe
- Measuring Scoop for pre-ground coffee
- Water Hardness Test Strip
- Tube of Brew Group Grease

PRODUCT OVERVIEW

Familiarize yourself with the main parts of your Philips 2200 Series Espresso Machine.



Figure 1: Front view of the Philips 2200 Series Fully Automatic Espresso Machine, showcasing its sleek black design, integrated LatteGo milk system, and user-friendly touch display.



Figure 2: Side view of the espresso machine, highlighting the transparent water tank on the right side, which allows for easy monitoring of water levels.



Figure 3: Product dimensions: 10 inches (D) x 15 inches (W) x 17 inches (H), providing a compact footprint suitable for various kitchen countertops.



Intuitive touch display

Easy one-touch control

Figure 4: The intuitive touch display allows for easy one-touch control, enabling users to select their preferred coffee variety and customize settings with simplicity.



Classic milk frother

For milk froth and foamy hot milk

Figure 5: The LatteGo Milk System effortlessly tops your coffee with a silky-smooth layer of milk froth, perfect for cappuccinos and lattes. It's designed for easy attachment and cleaning.



AquaClean filter

Clear and purified water

Figure 6: The AquaClean filter ensures clear and purified water for your coffee, reducing the need for frequent descaling and extending the machine's lifespan for up to 5000 cups.

SETUP

Follow these steps for the initial setup of your espresso machine:

1. **Unpack the Machine:** Carefully remove all components from the packaging.
2. **Rinse Water Tank:** Remove the water tank and rinse it thoroughly with fresh water.
3. **Install AquaClean Filter:** If using, install the AquaClean filter into the water tank as per the filter instructions. Fill the tank with fresh water and place it back into the machine.
4. **Fill Bean Hopper:** Open the lid of the bean hopper and fill it with fresh coffee beans.
5. **Plug In:** Plug the machine into a grounded wall outlet.
6. **First Use Rinse Cycle:** The machine will guide you through a first-use rinse cycle. Follow the on-screen instructions to complete this process, which primes the system and cleans internal circuits.

OPERATING INSTRUCTIONS

Your Philips 2200 Series machine makes it easy to brew your favorite coffee varieties.

Brewing Espresso, Coffee, and Cappuccino

- **Select Your Drink:** Use the intuitive touch display to select your desired coffee variety: Espresso, Coffee, or Cappuccino.
- **My Coffee Choice Menu:** Adjust the strength and quantity of your beverage using the 'My Coffee Choice' menu. You can choose from three different settings to suit your preferences. The Aroma Extract system intelligently strikes the optimum balance between brewing temperature (90-98°C) and aroma extraction.
- **Brew:** Place a cup under the dispensing spout and press the start button. The machine will automatically grind the beans and brew your coffee.

Using the LatteGo Milk System

- **Attach LatteGo Carafe:** Fill the LatteGo carafe with milk and attach it to the machine.
- **Select Milk-Based Drink:** Choose a milk-based drink like Cappuccino from the touch display.
- **Enjoy:** The LatteGo system will automatically froth and dispense milk directly into your cup, followed by the coffee.

MAINTENANCE

Regular cleaning and maintenance ensure optimal performance and longevity of your machine.

- **Daily Cleaning:** Empty and rinse the drip tray and coffee grounds container daily. The LatteGo milk system is also designed for quick rinsing under the tap.
- **Brew Group Cleaning:** The brew group should be rinsed under the tap weekly. Refer to the full manual for detailed instructions on removing and reinserting the brew group.
- **AquaClean Filter:** Replace the AquaClean filter when prompted by the machine. This filter helps prevent limescale buildup, reducing the need for descaling for up to 5000 cups.
- **Descaling:** Even with the AquaClean filter, occasional descaling may be necessary. The machine will indicate when descaling is required. Follow the on-screen instructions for the descaling procedure.

TROUBLESHOOTING

Here are some common issues and their solutions:

Problem	Possible Cause	Solution
No coffee is dispensed	Water tank empty; Air in the system; Coffee spout clogged.	Fill water tank; Dispense hot water to remove air; Clean coffee spout.
Coffee is too watery	Grind setting too coarse; Not enough coffee grounds.	Adjust grinder to a finer setting; Increase coffee strength setting.
Milk frother not frothing	LatteGo carafe not clean; Milk type unsuitable.	Clean LatteGo carafe thoroughly; Use fresh, cold milk (dairy or plant-based suitable for frothing).
Machine displays error code	Specific internal issue.	Refer to the full user manual for specific error code meanings and solutions, or contact customer support.

SPECIFICATIONS

Feature	Detail
Brand	Philips Kitchen Appliances

Feature	Detail
Model Name	EP2230/14
Color	Black
Product Dimensions	10"D x 15"W x 17"H
Coffee Maker Type	Espresso Machine
Operation Mode	Fully Automatic
Special Feature	LatteGo Milk Frother, Programmable
Filter Type	Reusable (AquaClean)
Human Interface Input	Touchscreen
Item Weight	21.1 pounds
Manufacturer	PHILIPS

WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included in your product packaging or visit the official Philips Kitchen Appliances website. You can also find additional support resources, FAQs, and contact information there.

For the full user manual in PDF format, please visit:

<https://manuals.plus/m/e491706239dead8a154763edf3d0caca41396f3f6ac3feebd5cf4ebe397ec040>