

## Respekta PANTRY100SV

# Respekta Levin Mini Kitchen Instruction Manual

Model: PANTRY100SV

## INTRODUCTION

---

Thank you for choosing the Respekta Levin Mini Kitchen. This compact kitchen unit is designed to provide essential cooking and storage facilities in small spaces such as offices, student apartments, or single-room dwellings. This manual provides important information regarding the safe assembly, operation, and maintenance of your new mini kitchen. Please read these instructions carefully before installation and use, and keep them for future reference.

## IMPORTANT SAFETY WARNINGS

---

**WARNING:** Failure to follow these safety instructions could result in fire, electric shock, or personal injury.

- Read the assembly instructions thoroughly before beginning installation.
- Always use appropriate protective equipment (e.g., gloves, safety glasses) during assembly to prevent injuries.
- Ensure the mini kitchen is installed in a secure and stable area to minimize the risk of tipping or overturning.
- Use the pantry only for its intended purpose.
- Keep flammable objects away from the hob and sink area to reduce the risk of burns or damage.
- Ensure proper electrical connections are made by a qualified professional if required.
- Do not overload electrical outlets.
- Keep children and pets away from the appliance during operation.

## SETUP AND ASSEMBLY

---

The Respekta Levin Mini Kitchen requires assembly. Detailed assembly instructions and all necessary fastening materials are included with your purchase.

### Unpacking

- Carefully unpack all components and check against the parts list provided in the assembly manual.
- Report any missing or damaged parts immediately to your retailer.
- Keep packaging materials away from children.

## Placement

- Choose a level, stable surface for installation.
- Ensure adequate ventilation around the refrigerator unit.
- The mini kitchen can be assembled with the sink and hob unit on either the left or right side, depending on your preference and space requirements.
- Maintain a safe distance from walls and other furniture to allow for proper air circulation and access.

## Assembly Steps

Follow the step-by-step instructions provided in the separate assembly manual. Ensure all screws and fasteners are tightened securely. Do not overtighten.



Image 1: The Respekta Levin Mini Kitchen, fully assembled, featuring a compact design with a sink, hob, and refrigerator unit.

## OPERATING INSTRUCTIONS

---

### Refrigerator with Freezer Compartment

- **Initial Use:** After installation, allow the refrigerator to stand upright for at least 4 hours before plugging it in. This allows the refrigerant to settle.
- **Temperature Control:** The refrigerator features an adjustable thermostat. Turn the dial to your desired

setting. A higher number typically indicates a colder temperature.

- **Freezer Compartment:** The integrated freezer compartment is suitable for short-term storage of frozen foods. Do not store carbonated beverages in the freezer.
- **Energy Efficiency:** This refrigerator has an energy efficiency class F. To optimize energy consumption, avoid frequent door openings and ensure the door seal is clean and intact.

## Stainless Steel Hob



*Image 2: A detailed view of the integrated stainless steel hob with two cooking plates and the adjacent sink unit.*

- **Powering On:** The hob features two cooking plates of different sizes. Each plate has a dedicated control knob.
- **Heat Settings:** Turn the control knob clockwise to select one of the six available heat levels. Start with a lower setting and increase as needed.
- **Safety:** Always use cookware appropriate for electric hobs. Do not leave cooking unattended. After use, ensure the control knobs are turned to the "off" position. The hob surface will remain hot for some time after use.

## Sink Unit

- **Usage:** The stainless steel sink includes a drainer area, providing ample space for washing dishes.
- **Sieve Basket Valve:** The sink is equipped with a 90mm sieve basket valve to prevent food particles from entering the drain. Regularly clean the sieve basket.
- **Water Connection:** Ensure the sink is properly connected to a water supply and drainage system by a qualified plumber.

## CARE AND MAINTENANCE

---

### General Cleaning

- Always disconnect the appliance from the power supply before cleaning.
- Wipe down all surfaces with a damp cloth. For stubborn stains, use a mild detergent.
- Avoid abrasive cleaners, scouring pads, or harsh chemicals, as these can damage surfaces.
- Ensure all surfaces are thoroughly dried after cleaning.

### Refrigerator Maintenance

- **Defrosting:** Defrost the freezer compartment regularly to maintain efficiency. Turn off the refrigerator and remove all food items before defrosting.

- **Door Seals:** Periodically check and clean the door seals to ensure a tight closure and prevent energy loss.

## Hob and Sink Maintenance

- Clean the hob surface after each use once it has cooled down.
- For stainless steel surfaces, use a specialized stainless steel cleaner to maintain its luster and prevent streaks.
- Regularly clean the sink and the sieve basket valve to prevent blockages and maintain hygiene.

## TROUBLESHOOTING GUIDE

Before contacting customer service, please refer to the following common issues and solutions:

Problem	Possible Cause	Solution
Refrigerator not cooling	Power outage; Plug not inserted; Thermostat set too high; Door not closed properly.	Check power supply; Ensure plug is fully inserted; Adjust thermostat to a colder setting; Close door firmly and check seal.
Hob not heating	No power; Control knob not set correctly; Overheating protection activated.	Check power supply; Ensure knob is turned to a heat setting; Allow hob to cool down, then try again.
Water not draining from sink	Sieve basket clogged; Drain pipe blockage.	Clean the sieve basket; Check and clear any blockages in the drain pipe.
Unusual noises from refrigerator	Appliance not level; Objects touching the back; Normal operating sounds.	Ensure the appliance is level; Move objects away from the back; Some gurgling or humming sounds are normal.

If the problem persists after attempting these solutions, please contact customer support.

## TECHNICAL SPECIFICATIONS

<b>Brand</b>	Respekta
<b>Model</b>	PANTRY100SV (Levin)
<b>Type</b>	Mini Kitchen / Pantry Unit
<b>Overall Dimensions (W x D x H)</b>	100 cm x 60 cm x 87 cm (Worktop height)
<b>Product Dimensions (D x B x H)</b>	60D x 100B x 200H centimeters (This might refer to a full cabinet set, please verify with product packaging if different from worktop height)
<b>Material</b>	Engineered Wood (Cabinet), Stainless Steel (Hob, Sink, Handles)
<b>Color</b>	White

<b>Refrigerator</b>	Energy Efficiency Class: F Dimensions (H x W x D): 81.5 cm x 49.5 cm x 55 cm Weight: 31 kg Integrated freezer compartment
<b>Hob</b>	Type: Stainless Steel Electric Hob Cooking Plates: 2 (different sizes) Heat Levels: 6 per plate
<b>Sink</b>	Material: Stainless Steel Features: Drainer area, 90mm sieve basket valve
<b>Item Weight</b>	24 Kilograms
<b>Assembly Required</b>	Yes (Fastening materials included)
<b>Installation Type</b>	Freestanding, Floor Mounting

## WARRANTY INFORMATION

---

The Respekta Levin Mini Kitchen comes with a **2-year manufacturer's warranty**. This warranty covers defects in materials and workmanship under normal use. Please retain your proof of purchase for warranty claims. The warranty does not cover damage caused by improper installation, misuse, neglect, or unauthorized repairs. For detailed warranty terms and conditions, please refer to the documentation provided with your product or contact Respekta customer service.

## CUSTOMER SUPPORT

---

If you have any questions, require assistance with assembly, or encounter issues not covered in the troubleshooting guide, please contact Respekta customer support.

- **Website:** Visit the official Respekta website for FAQs and contact information.
- **Email:** Refer to your product packaging or the Respekta website for customer service email addresses.
- **Phone:** Contact numbers can be found on the Respekta website or in your product documentation.

When contacting support, please have your model number (PANTRY100SV) and proof of purchase ready.