

KYOCERA 701KC DIGNO Keitai 2

Kyocera 701KC DIGNO Keitai 2 User Manual

Model: 701KC

1. INTRODUCTION

This manual provides essential information for the safe and efficient use of your Kyocera 701KC DIGNO Keitai 2 mobile phone. Please read this manual thoroughly before using your device to ensure proper operation and to prevent damage. Keep this manual for future reference.

2. SAFETY INFORMATION

Always observe the following precautions to avoid injury or damage to your device.

- **Water Resistance:** The device is designed to be water-resistant, but it is not waterproof. Avoid submerging it in water or exposing it to high-pressure water. Ensure all covers are securely closed.
- **Battery Safety:** Use only Kyocera-approved batteries and chargers. Do not disassemble, puncture, or short-circuit the battery. Dispose of batteries properly.
- **Driving Safety:** Do not use your phone while driving. If you must use it, pull over to a safe location.
- **Medical Devices:** Maintain a safe distance between your phone and medical devices such as pacemakers. Consult your physician and medical device manufacturer for specific guidelines.
- **Hearing Protection:** Avoid prolonged exposure to high volume levels to prevent hearing damage.

3. PACKAGE CONTENTS

Verify that your package contains the following items:

- Kyocera 701KC DIGNO Keitai 2 Handset
- Battery Pack
- User Manual (this document)
- Charger (may be sold separately depending on region)

4. DEVICE LAYOUT

Familiarize yourself with the physical components of your Kyocera 701KC DIGNO Keitai 2.



Figure 4.1: Front View of the Kyocera 701KC DIGNO Keitai 2. This image shows the phone in its open, flip configuration, displaying the main screen and the physical keypad below it. The screen appears to be active, showing a menu or home screen. The earpiece is visible at the top of the screen.



Figure 4.2: Back View of the Kyocera 701KC DIGNO Keitai 2. This image displays the rear casing of the phone. The camera lens and an LED flash are visible near the top. A speaker grille is also present. The surface shows some texture or wear.

4.1. Front Panel (Open)

- **Display Screen:** Main interface for viewing information and interacting with the device.
- **Earpiece:** For listening during calls.
- **Keypad:** Numeric keys, navigation keys, and function keys for input.

4.2. Rear Panel

- **Camera Lens:** For taking photos and videos.
- **LED Flash:** Provides illumination for the camera.
- **Loudspeaker:** For hands-free calls, alerts, and media playback.

5. SETUP

Follow these steps to prepare your phone for first use.

5.1. Inserting the SIM Card

1. Power off the device and remove the back cover.
2. Locate the SIM card slot.
3. Insert the SIM card with the gold contacts facing down, ensuring it clicks into place.
4. Replace the back cover.

5.2. Inserting the Battery

1. With the back cover removed, align the battery contacts with the terminals inside the battery compartment.
2. Gently press the battery into place until it is secure.
3. Replace the back cover.

5.3. Charging the Battery

1. Connect the charger to the charging port on your phone.
2. Plug the charger into a power outlet.
3. The charging indicator will illuminate. Charge the phone fully before first use.

5.4. Powering On/Off

- **To Power On:** Press and hold the Power/End key until the screen lights up.
- **To Power Off:** Press and hold the Power/End key, then select 'Power Off' from the options on the screen.

6. OPERATING YOUR PHONE

Learn the basic functions to use your Kyocera 701KC DIGNO Keitai 2.

6.1. Making and Receiving Calls

- **Making a Call:** Enter the phone number using the keypad and press the Call key.
- **Answering a Call:** When the phone rings, press the Call key.

- **Ending a Call:** Press the End key.

6.2. Sending and Receiving Messages

- **Sending a Message:** Navigate to 'Messages' from the main menu, select 'New Message', enter the recipient's number and your message, then send.
- **Receiving a Message:** New messages will appear as a notification on the screen. Select the notification or go to 'Messages' to read.

6.3. Using the Camera

1. From the main menu, select 'Camera'.
2. Frame your shot using the display screen.
3. Press the dedicated camera key or the center navigation key to take a photo.

6.4. Basic Menu Navigation

- Use the navigation keys (up, down, left, right) to scroll through menu options.
- Press the center navigation key or 'Select' soft key to confirm a selection.
- Press the 'Back' or 'Clear' soft key to return to the previous screen.

7. MAINTENANCE

Proper care will extend the life of your device.

7.1. Cleaning the Device

- Wipe the phone with a soft, damp cloth.
- Do not use harsh chemicals, cleaning solvents, or strong detergents.
- Ensure all ports are dry before charging.

7.2. Battery Care

- Avoid exposing the battery to extreme temperatures.
- Do not leave the battery completely discharged for extended periods.
- If the battery is removable, ensure it is properly seated.

7.3. Storage

- Store the device in a cool, dry place away from direct sunlight.
- If storing for a long period, charge the battery to about 50% before storage.

8. TROUBLESHOOTING

Refer to this section for solutions to common issues.

Problem	Possible Solution

Problem	Possible Solution
Phone won't turn on	Ensure the battery is charged. Check if the battery is properly inserted.
Cannot make or receive calls	Check if the SIM card is correctly inserted. Verify network signal strength. Contact your service provider.
Screen is unresponsive	Restart the phone. Ensure the screen is clean and dry.
Battery drains quickly	Reduce screen brightness. Close unused applications. Limit background data usage.
Cannot hear caller / Caller cannot hear me	Adjust call volume. Ensure microphone and earpiece are not obstructed.

9. SPECIFICATIONS

Key technical specifications for the Kyocera 701KC DIGNO Keitai 2.

Feature	Detail
Model Name	701KC
Brand	KYOCERA
Operating System	Non-Android/iOS (Feature Phone OS)
Display Type	LCD
Resolution	240 x 320 pixels
Dimensions (approx.)	13.7 x 6.4 x 2.9 cm
Weight (approx.)	140 g
Wireless Carrier	Softbank

10. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the documentation provided at the time of purchase or visit the official Kyocera website. Keep your proof of purchase for warranty claims.

If you encounter issues not covered in this manual, please contact Kyocera customer service or your service provider for assistance.

