

Cosori C267-2ST

Cosori CP267-FD Stainless Steel Dehydrator Trays Instruction Manual

Model: C267-2ST

INTRODUCTION

This manual provides instructions for the proper use and care of your Cosori CP267-FD Stainless Steel Dehydrator Trays. These trays are designed as an accessory for the Cosori CP267-FD Food Dehydrator, offering a durable and food-safe alternative or addition to your dehydrating setup.

PRODUCT OVERVIEW

The Cosori Stainless Steel Dehydrator Trays are crafted from food-grade 304 stainless steel, ensuring durability and safety for various food items. They are designed to be compatible exclusively with the Cosori CP267-FD Food Dehydrator.

Fit for Cosori Dehydrator

The stainless steel trays only suitable for Cosori **CP267-FD**
6 trays food dehydrator.



Image: A single stainless steel dehydrator tray showing its dimensions (approximately 12 inches by 13 inches) and a "Food Grade" label, indicating its safe material composition.

- **Material:** Food Grade 304 Stainless Steel
- **Dimensions:** Approximately 14.29 inches (Depth) x 13.43 inches (Width)
- **Compatibility:** Exclusively with Cosori CP267-FD Food Dehydrator
- **Quantity:** 2 trays per pack (Model C267-2ST)
- **Features:** BPA-Free, Dishwasher Safe

SETUP

1. **Unpacking:** Carefully remove the stainless steel trays from their packaging. Inspect for any damage during transit.
2. **Initial Cleaning:** Before first use, wash the trays thoroughly with warm, soapy water. Rinse completely and dry with a soft cloth or allow to air dry. This removes any manufacturing residues.
3. **Placement:** Slide the clean trays into the designated slots within your Cosori CP267-FD Food Dehydrator. Ensure they are seated securely and evenly.

Various Choices

The stainless steel trays are dishwasher-safe, ideal for crafting delicious snacks like jerky, apple chips, lemon rolls, and more.



Image: A Cosori food dehydrator with its door open, revealing multiple stainless steel trays loaded with different types of food, such as dried fruits and jerky.

OPERATING INSTRUCTIONS

These stainless steel trays function identically to the original trays in your Cosori CP267-FD Food Dehydrator. For detailed operating instructions regarding temperature, time settings, and food preparation, please refer to your main Cosori CP267-FD Food Dehydrator instruction manual.

- **Food Placement:** Arrange food items in a single layer on each tray, ensuring adequate space between pieces for optimal air circulation. Avoid overcrowding the trays.
- **Tray Insertion:** Carefully slide the loaded trays into the dehydrator. Ensure they are level and do not obstruct the dehydrator's fan or heating element.
- **Rotation (Optional):** While the Cosori CP267-FD dehydrator features a rear-mounted fan for even drying, you may choose to rotate trays periodically for extremely dense loads or personal preference.

A Variety of Uses

This dehydrator is as versatile as your creativity.



Image: A collage showcasing a variety of dehydrated foods, such as dried apples, beef jerky, and herbs, demonstrating the versatility of the dehydrator trays.

MAINTENANCE AND CLEANING

Proper cleaning and maintenance will extend the life of your stainless steel dehydrator trays.

- **After Each Use:** Remove any food debris from the trays.
- **Washing:** The stainless steel trays are dishwasher safe. For hand washing, use warm, soapy water and a non-abrasive sponge or brush. For stubborn, dried-on food, you may soak the trays in warm water for a short period before scrubbing.
- **Drying:** Ensure trays are completely dry before storing to prevent water spots or mineral buildup.
- **Storage:** Store trays in a clean, dry place.

TROUBLESHOOTING

If you encounter any issues with your stainless steel dehydrator trays, consider the following:

- **Trays do not fit:** Ensure your dehydrator is the Cosori CP267-FD model. These trays are specifically designed for this model and may not fit other dehydrators.
- **Food sticking to trays:** For very sticky foods, you may lightly spray the trays with cooking oil or use parchment paper (ensure it is food-safe and heat-resistant for dehydrator use).
- **Difficult to clean:** Soak trays in warm, soapy water for 15-30 minutes to loosen dried food particles before scrubbing. A soft brush can help clean the mesh.

SPECIFICATIONS

Feature	Detail
Brand	Cosori
Model Number (Trays)	C267-2ST
Compatible Dehydrator	Cosori CP267-FD
Material	Food Grade 304 Stainless Steel
Color	Silver
Product Dimensions (each tray)	14.29 inches (D) x 13.43 inches (W)
Number of Trays Included	2
Special Features	BPA-Free, Dishwasher Safe

WARRANTY AND SUPPORT

For warranty information and customer support regarding your Cosori CP267-FD Stainless Steel Dehydrator Trays, please refer to the warranty section of your main Cosori CP267-FD Food Dehydrator manual or visit the official Cosori website. You can also contact Cosori customer service directly for assistance.

Cosori Official Website: [Visit the Cosori Store on Amazon](#)