

CaDA C83001W

CaDA I.BOT Code Robot Instruction Manual

Model: C83001W | Brand: CaDA

1. INTRODUCTION

This manual provides comprehensive instructions for the assembly, operation, and maintenance of your CaDA I.BOT Code Robot (Model C83001W). The I.BOT is a remote-controlled robot construction set consisting of 434 pieces, designed to stimulate imagination and develop hand-eye coordination. Once assembled, the robot can be controlled via an included remote control or a dedicated mobile application, featuring movable limbs and LED-illuminated eyes.



Figure 1.1: CaDA I.BOT Code Robot and its packaging. This image shows the assembled robot alongside its product box, highlighting its design and the "Dual Mode Control" feature.

2. IMPORTANT SAFETY INFORMATION

- **Age Recommendation:** This product is suitable for children aged 6 years and up. Adult supervision is recommended during assembly and initial operation.
- **Small Parts Warning:** The set contains small parts which may pose a choking hazard for children under 3 years of age. Keep all components out of reach of infants and toddlers.
- **Battery Safety:**
 - Requires 2 x AA batteries (not included).
 - Do not mix old and new batteries.
 - Do not mix alkaline, standard (carbon-zinc), or rechargeable (nickel-cadmium) batteries.
 - Insert batteries with correct polarity (+ and -).
 - Remove exhausted batteries promptly.

- Do not short-circuit battery terminals.
- **Electrical Components:** Handle the robot's electrical components with care. Do not expose to water or extreme temperatures.
- **Moving Parts:** Keep fingers, hair, and loose clothing away from moving parts (e.g., tracks, limbs) during operation to prevent entanglement or injury.

3. PACKAGE CONTENTS

Before beginning assembly, please verify that all components are present. The CaDA I.BOT Code Robot set includes:

- 434 x Building Block Pieces
- 1 x Remote Control Unit
- 1 x Instruction Manual (this document)
- Electronic components (motors, LED eyes, control board) integrated within specific blocks.

Note: Batteries (2 x AA) are not included and must be purchased separately.

4. SETUP AND ASSEMBLY

Follow the step-by-step instructions provided in the included pictorial guide to assemble your I.BOT robot. Assembly typically takes several hours depending on experience.

4.1 Assembly Instructions

1. **Unpack Components:** Carefully open the packaging and sort the building blocks by type or color to facilitate assembly.
2. **Follow Pictorial Guide:** Refer to the separate, detailed assembly booklet. Each step illustrates the required pieces and their placement. Pay close attention to the orientation of specialized parts and electronic components.
3. **Connect Electronic Parts:** Ensure all wires for motors and LED eyes are securely connected to the main control unit as indicated in the assembly guide. Incorrect connections may prevent the robot from functioning.
4. **Verify Connections:** Before completing the final steps, double-check all connections and ensure no wires are pinched.

4.2 Battery Installation

The I.BOT robot requires 2 x AA batteries for operation. The battery compartment is typically located on the main body of the robot or the remote control unit.

1. Locate the battery compartment on the robot (refer to the assembly guide for exact location).
2. Using a small screwdriver (if required), open the battery compartment cover.
3. Insert 2 x AA batteries, ensuring correct polarity (+/-) as marked inside the compartment.
4. Replace the battery compartment cover and secure it.
5. Repeat the process for the remote control unit if it also requires batteries (usually 2 x AAA, but check the remote itself).



Figure 4.1: Front view of the assembled CaDA I.BOT Code Robot. This image displays the robot's front, showing its LED eyes, track system, and movable arms.

5. OPERATING THE I.BOT ROBOT

The I.BOT robot offers dual control modes: via the included remote control or a dedicated mobile application.

5.1 Remote Control Operation

- Power On:** Ensure batteries are installed in both the robot and the remote control. Turn on the robot using the power switch (usually located near the battery compartment). Turn on the remote control.
- Pairing:** The robot and remote control should automatically pair. If not, refer to the remote control's specific instructions for pairing mode.

3. **Movement:** Use the joysticks or directional buttons on the remote control to move the robot forward, backward, left, and right.
4. **Limb Control:** Dedicated buttons on the remote control will operate the robot's movable limbs and other functions, such as activating the LED eyes.

5.2 Mobile App Control

1. **Download App:** Search for the "CaDA I.BOT" or "CaDA Robot" app on your device's app store (iOS App Store or Google Play Store).
2. **Install and Open:** Install the app and open it.
3. **Bluetooth Connection:** Ensure Bluetooth is enabled on your mobile device. Turn on the I.BOT robot. Within the app, select the option to connect to a new device. Select "I.BOT C83001W" from the list of available devices.
4. **Control Interface:** Once connected, the app will display a control interface. This typically includes virtual joysticks for movement, buttons for limb control, and options for programming simple sequences.
5. **Programming (if applicable):** The app may offer basic coding or sequence programming features. Refer to the app's in-app help or tutorials for detailed instructions on these advanced functions.



Figure 5.1: Rear view of the assembled CaDA I.BOT Code Robot. This image shows the robot from behind, detailing its track mechanism

and the back of its head unit.

6. MAINTENANCE

6.1 Cleaning

- Wipe the robot and remote control with a soft, dry cloth.
- Do not use harsh chemicals, abrasive cleaners, or water directly on the electronic components.
- Periodically check the tracks for any debris or hair that might impede movement.

6.2 Storage

- When not in use for extended periods, remove batteries from both the robot and the remote control to prevent leakage.
- Store the robot in a cool, dry place, away from direct sunlight and extreme temperatures.
- Keep the robot and its components in their original packaging or a suitable storage container to prevent loss of parts.

7. TROUBLESHOOTING

| Problem | Possible Cause | Solution |
|---|---|--|
| Robot does not turn on. | Batteries are dead or incorrectly inserted. Power switch is off. Loose connection of internal wiring. | Replace batteries with new ones, ensuring correct polarity. Turn the power switch to the "ON" position. Carefully check internal wiring connections as per assembly guide. |
| Robot does not respond to remote control. | Remote control batteries are dead. Robot and remote are not paired. Interference. | Replace remote control batteries. Ensure both devices are on and attempt re-pairing (refer to remote instructions). Move to an area with less electronic interference. |
| Robot moves slowly or erratically. | Low robot battery power. Obstruction in tracks or gears. Loose motor connection. | Replace robot batteries. Inspect tracks and gears for debris and remove any obstructions. Check motor wiring connections. |
| LED eyes do not light up. | Loose LED wiring. LEDs are faulty. | Check the wiring connections for the LED eyes as per the assembly guide. If wiring is correct, contact customer support for replacement parts. |

8. SPECIFICATIONS

| | |
|--------------|---------|
| Model Number | C83001W |
| Brand | CaDA |

| | |
|---------------------------------------|---|
| Number of Pieces | 434 |
| Recommended Age | 6 years and up |
| Material Type | Plastic |
| Batteries Required | Yes (2 x AA for robot, check remote for its battery type) |
| Batteries Included | No |
| Control Type | Remote Control, Mobile App |
| Product Dimensions (assembled) | Approximately 21.6 x 15.2 cm |
| Educational Objective(s) | Concentration, Construction, Fantasy development |

9. WARRANTY AND SUPPORT

CaDA products are manufactured to high quality standards. While specific warranty details are not provided in this manual, please retain your proof of purchase for any potential warranty claims.

9.1 Customer Support

For technical assistance, missing parts, or any inquiries regarding your CaDA I.BOT Code Robot, please contact the manufacturer or your retailer's customer service. When contacting support, please have your product model number (C83001W) and purchase information ready.

You may find additional support resources, FAQs, and contact information on the official CaDA website (if available, search online for "CaDA official website").

© 2024 CaDA. All rights reserved. Information in this manual is subject to change without notice.

Related Documents

| | |
|---|--|
|  | <p>CaDA C51049W Defender Building Set - Assembly Instructions</p> <p>Detailed assembly instructions for the CaDA C51049W Defender building set, featuring a police robot and vehicle. Includes information on functions like arm rotation, head rotation, and music control.</p> |
|  | <p>CaDA Master Mechanical Safe Building Set Instructions</p> <p>Detailed instructions for assembling the CaDA Master Mechanical Safe building block set. Learn how to construct and understand the mechanics of this intricate model.</p> |



[CaDA 2008 Citroën C4 WRC Building Block Model Assembly Instructions](#)

Assembly instructions for the CaDA 2008 Citroën C4 WRC building block model (C51078). This guide details the construction of the remote control rally car replica by DOUBLEEAGLE INDUSTRY (CHINA) LIMITED.



[CaDA Adventure C61006W RC Car Building Blocks - Detailed Overview](#)

Explore the CaDA Adventure C61006W, a detailed 1941-piece remote control car building block set. This model features advanced mechanics like independent motors, realistic suspension, and 2.4GHz radio control. Find building instructions at doubleeagle.cc.