

[Manuals.plus](#) /

› [Hatteker](#) /

› Hatteker Electric Shaver 4-in-1 User Manual

Hatteker RSCX-9608

Hatteker Electric Shaver 4-in-1 User Manual

Model: RSCX-9608

PRODUCT OVERVIEW

The Hatteker Electric Shaver is a versatile 4-in-1 grooming kit designed for men. It includes an electric rotary razor, a facial cleaning brush, a beard trimmer, and a nose trimmer, providing a comprehensive solution for various grooming needs. The device is 100% waterproof, allowing for both wet and dry shaving, and features a USB fast rechargeable battery with an upgraded LED display for convenience.



Figure 1: The Hatteker 4-in-1 Electric Shaver, showcasing its main unit and various interchangeable heads for shaving, trimming, and cleansing.

SAFETY INFORMATION

- Always use the beard trimmer first on long beard hair to avoid discomfort or pulling.
- Do not submerge the shaver in water for extended periods.
- Be cautious when handling and changing attachments.
- Do not use the shaver while charging, even if it's waterproof.
- Keep out of reach of children.

WHAT'S INCLUDED

Your Hattaker Electric Shaver kit comes with the following components:

- Electric Shaver Main Body
- Rotary Shaver Head
- Beard Trimmer Head with Guide Comb
- Nose Trimmer Head
- Facial Cleaning Brush Head
- USB Charging Cable
- Cleaning Brush
- Shaver Cap
- Facial Brush Cap
- Storage Bag
- User Manual



Figure 2: All accessories included with your Hatteker Electric Shaver, neatly arranged.

Unboxing and Overview Video

Video 1: A detailed look at the Hatteker 4-in-1 shaver, including unboxing and a demonstration of its various functions and accessories.

SETUP

Initial Charging

Before first use, fully charge the shaver. Connect the USB charging cable to the shaver and a compatible USB power source (e.g., wall adapter, computer USB port). The LED display will show the charging progress. A full charge takes approximately 1.5 hours and provides up to 60 minutes of shaving time.



Figure 3: The Hatteker shaver being charged via its USB cable, indicating its battery status on the LED display.

Attaching and Detaching Heads

To change heads, gently pull the currently attached head upwards to remove it. Align the desired attachment head with the main body and push it down until it clicks securely into place.

Head Attachment Demonstration Video

Video 2: A demonstration of how to easily attach and detach the various grooming heads, including the shaver and clipper attachments.

OPERATING INSTRUCTIONS

Press the power button to turn the shaver ON or OFF. The LED display will show the battery percentage and other indicators.

1. Rotary Shaver Head

For a close and comfortable shave, attach the rotary shaver head. It can be used for both wet and dry shaving. For wet shaving, apply shaving foam or gel to your face. Move the shaver in small circular motions across your skin. For dry shaving, ensure your skin is clean and dry before use.

IDEAL FOR BUSINESS



Figure 4: Illustration of using the Hattaker shaver for both dry and wet shaving, highlighting its waterproof design.

2. Beard Trimmer Head

Attach the beard trimmer head for precise trimming and styling of beards and sideburns. Use the included guide comb for desired hair length. Move the trimmer against the direction of hair growth for best results.

3. Nose Trimmer Head

Gently insert the nose trimmer head into your nostril or ear canal. Move it slowly to trim unwanted hair. Do not insert too deeply.

4. Facial Cleaning Brush Head

Attach the facial cleaning brush head. Apply your favorite facial cleanser to the brush or your face. Gently move the brush in circular motions across your face to cleanse and exfoliate your skin.

4-in-1



1
Shaving



2
Sideburns
styling



3
Face
Cleansing



4
Nose Hair
Trimming



Figure 5: A visual guide to the four distinct functions: shaving, sideburns styling, face cleansing, and nose hair trimming.



Figure 6: Examples of the shaver in use for various grooming tasks, including shaving, trimming, and facial cleansing.

CHARGING THE DEVICE

The Hatterker shaver is equipped with a USB fast rechargeable battery. When the battery is low, the LED display will indicate a low battery warning. Connect the USB cable to the shaver and a power source. The LED display will show the charging percentage. The device features charging protection to prevent overcharging.

- Charging Time: Approximately 1.5 hours for a full charge.
- Operating Time: Up to 60 minutes on a full charge (approximately 20 shaves).
- LED Display Indicators: Charge Indicator, Battery Capacity, Low Battery Indicator, Cleaning Indicator, Transport Lock Indicator.

MAINTENANCE AND CLEANING

Due to its 100% waterproof design, cleaning the Hatterker shaver is simple and convenient. After each use, especially with shaving foam or gel, rinse the shaver head under running water. You can also open the shaver head to rinse the internal blades thoroughly.



Figure 7: The waterproof design allows for easy cleaning of the shaver head under running water.

TROUBLESHOOTING

- **Shaver not turning on:** Ensure the device is fully charged. Check the USB cable and power source.
- **Reduced performance:** Clean the shaver head thoroughly. Long hair may clog the blades; use the beard trimmer first for longer hair.
- **Irritation after shaving:** Ensure blades are clean. Consider using shaving foam or gel for wet shaving.
- **LED display issues:** If the display is not functioning correctly, try fully charging the device. If issues persist, contact customer service.

SPECIFICATIONS

Feature	Detail
---------	--------

Brand	Hatteker
Model Name	RSCX-9608
Item Model Number	AU-960804
Power Source	Battery Powered
Special Feature	Rechargeable, Battery Indicator
Recommended Uses	Beard, Ear, Nose Hair, Face
Wattage	5 watts
Batteries Required	1 AAA batteries (for internal components, not user replaceable)
Waterproof	Yes, 100% waterproof for wet/dry use and easy cleaning

WARRANTY AND SUPPORT

Hatteker offers a 1-year guarantee for this electric shaver. If you encounter any issues or are not satisfied with your product, please contact Hatteker Customer Service for assistance. They are committed to resolving any concerns you may have. For support, refer to the contact information provided on the product packaging or the official Hatteker website.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question