

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal FV5736 Easygliss Steam Iron User Manual

Tefal FV5736

Tefal FV5736 Easygliss Steam Iron User Manual

Model: FV5736

INTRODUCTION

This manual provides essential instructions for the safe and efficient use of your Tefal FV5736 Easygliss Steam Iron. Please read all instructions carefully before first use and retain this manual for future reference.

IMPORTANT SAFETY INSTRUCTIONS

- Always plug the iron into a grounded electrical outlet.
- Do not leave the iron unattended while it is switched on or connected to the mains.
- Keep the iron and its cord out of reach of children.
- Do not immerse the iron in water or other liquids.
- Unplug the iron before filling with water, cleaning, or after each use.
- Do not operate the iron with a damaged cord or plug.
- Use the iron only for its intended purpose.
- The soleplate can become extremely hot and cause burns. Avoid direct contact.
- Before delivery, a random quality check is performed, which may result in residual water in the tank. This confirms the unit has been tested and meets quality control requirements.

PRODUCT OVERVIEW

The Tefal FV5736 Easygliss Steam Iron features a Durilium Airglide soleplate for optimal glide and enhanced steam power. It offers 2500W for rapid heating, continuous steam output, and a powerful steam boost.



Image 1: Top-down view of the Tefal FV5736 Easygliss Steam Iron, showcasing its blue and white design, water tank, and control dial.

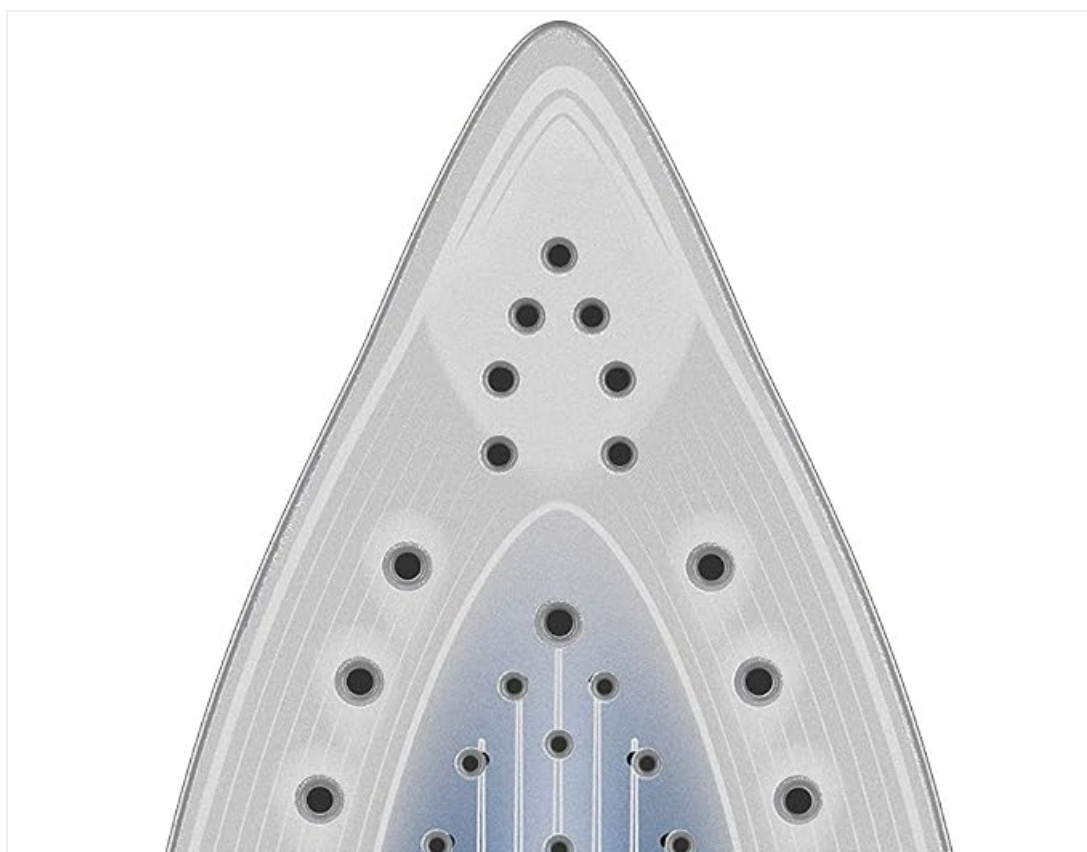




Image 2: Underside view of the Tefal FV5736 Easygliss Steam Iron, highlighting the Durilium Airglide soleplate with its numerous steam vents for efficient steam distribution.



Image 3: Angled view of the Tefal FV5736 Easygliss Steam Iron, showing the side profile and the smooth Durilium Airglide soleplate.

SETUP

1. Before First Use

1. Remove any stickers or protective covers from the soleplate.
2. Ensure the iron is unplugged.
3. Fill the water tank (see "Filling the Water Tank" below).
4. Heat the iron to the maximum temperature setting and iron an old piece of fabric for a few minutes to remove any manufacturing residues.

2. Filling the Water Tank

1. Ensure the iron is unplugged from the power outlet.
2. Open the XL filling opening of the water tank.
3. Fill the tank with tap water up to the 'MAX' level indicator. Do not overfill.
4. Close the filling opening securely.

Note: For optimal performance and to prolong the life of your iron, it is recommended to use tap water. If your tap water is very hard, mix it with an equal amount of distilled water. Do not use 100% distilled water or demineralized water as this can cause the iron to spit.

OPERATING INSTRUCTIONS

1. Powering On and Temperature Setting

1. Place the iron on its heel on a stable, heat-resistant surface.
2. Plug the power cord into a grounded electrical outlet.
3. Turn the temperature control dial to the desired setting according to the fabric type. The iron heats up quickly due to its 2500W power.
4. The indicator light will illuminate while the iron is heating and turn off when the selected temperature is reached.

2. Steam Ironing

- Ensure the water tank is filled.
- Set the temperature to a steam-compatible setting (usually indicated on the dial).
- Once the iron reaches the set temperature, adjust the steam control to the desired steam output. The continuous steam output is up to 45 g/min.
- For stubborn creases, press the steam boost button for an extra shot of steam (up to 220 g/min).



Image 4: The Tefal FV5736 Easygliss Steam Iron in use, emitting a powerful burst of steam, demonstrating its pressing effect capability.

3. Dry Ironing

- Ensure the water tank is empty or the steam control is set to the 'no steam' position.
- Set the temperature according to the fabric type.
- Proceed with ironing as usual.

4. Vertical Steaming

- Hang the garment on a hanger.
- Set the iron to a high temperature setting.
- Hold the iron vertically a few centimeters away from the fabric and press the steam boost button repeatedly.
- This function is suitable for removing creases from hanging clothes, curtains, etc.

5. Spray Function

- Press the spray button to moisten stubborn creases.
- Ensure the water tank contains water.

6. Eco Function

The Eco function helps to reduce energy consumption while still providing effective ironing results. Refer to the iron's controls for activating this feature.

7. Automatic Shut-off

For safety, the iron is equipped with an automatic shut-off feature. If left motionless horizontally for a certain period (e.g., 30 seconds) or vertically (e.g., 8 minutes), it will automatically turn off. The indicator light will flash to signal this. To restart, simply move the iron.

MAINTENANCE AND CARE

1. Cleaning the Soleplate

- After each use, allow the iron to cool completely.
- Wipe the soleplate with a damp cloth. Do not use abrasive cleaners or metallic scouring pads.
- For stubborn stains, use a specialized soleplate cleaning stick (available separately).

2. Anti-Drip System

The anti-drip system prevents water from dripping onto your fabrics when ironing at low temperatures. If you notice dripping, ensure the iron has reached the correct temperature for steam ironing.

3. Anti-Calc System (Self-Cleaning)

The integrated anti-calc system helps to reduce limescale build-up and ensures long-lasting steam performance. For optimal maintenance, perform the self-cleaning process regularly (e.g., once a month, depending on water hardness).

1. Fill the water tank to the MAX level.
2. Set the steam control to 'no steam' and the temperature to maximum.
3. Plug in the iron and wait for the indicator light to go out.
4. Unplug the iron and hold it horizontally over a sink.
5. Press and hold the self-clean button (if available, otherwise refer to specific model instructions for anti-calc procedure). Shake the iron gently to allow water and scale to flush out through the soleplate.
6. Once the water tank is empty, plug the iron back in and let it heat up to dry the soleplate.
7. Unplug and store the iron once cooled.

4. Storage

- Always unplug the iron and allow it to cool completely before storing.
- Empty the water tank after each use to prevent limescale build-up.
- Store the iron vertically on its heel in a safe, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Iron does not heat up.	Not plugged in; power outlet faulty; automatic shut-off activated.	Check power connection; try another outlet; move the iron to reactivate.
No steam or insufficient steam.	Water tank empty; temperature too low for steam; steam control set to 'no steam'; limescale build-up.	Fill water tank; set higher temperature; adjust steam control; perform anti-calc cleaning.
Water drips from the soleplate.	Temperature too low for steam; iron tilted too much.	Increase temperature; ensure iron is horizontal during steam use.
White flakes or brown stains on clothes.	Limescale in the water tank/steam chamber; residues on soleplate.	Perform anti-calc cleaning; clean soleplate.

SPECIFICATIONS

- **Model:** FV5736
- **Brand:** Tefal
- **Power:** 2500 Watts
- **Voltage:** 240 Volts
- **Continuous Steam Output:** Up to 45 g/min
- **Steam Boost (Pressing Effect):** Up to 220 g/min
- **Water Tank Capacity:** 270 ml
- **Soleplate Material:** Durilium Airglide
- **Dimensions (L x W x H):** 30 x 14.5 x 15 cm
- **Weight:** 1.6 Kilograms
- **Special Features:** Automatic Shut-off, Anti-Drip System, Anti-Calc System, Spray Button, Eco Function, Precision Tip
- **Country of Origin:** France

WARRANTY AND SUPPORT

Tefal products are designed for durability and ease of repair. This product is covered by a manufacturer's warranty. For specific warranty terms and conditions, please refer to the documentation included with your purchase or visit the official Tefal website.

For technical assistance, spare parts, or repair services, please contact Tefal customer support. Tefal offers repair services for 15 years at a fair price, with a network of 6200 recognized repair workshops worldwide.



Image 5: Logo indicating Tefal's commitment to repairability for 15 years, highlighting their global network of repair workshops.

You can find more information and support on the official [Tefal Brand Store](#).

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07X49HXY9>

More documents and user manuals: <https://manuals.plus/>