

[Manuals.plus](#) /

› [TEANAGOO](#) /

› TEANAGOO MA-01 Japanese Matcha Ceremony Accessory User Manual

## TEANAGOO EMA-01

# TEANAGOO MA-01 Japanese Matcha Ceremony Accessory User Manual

Model: EMA-01 | Brand: TEANAGOO

## 1. PRODUCT OVERVIEW

The TEANAGOO MA-01 Japanese Matcha Ceremony Accessory set provides essential tools for preparing traditional matcha tea. This 4-piece set is designed to enhance your matcha experience, ensuring proper preparation and longevity of your tools.



**Figure 1.1:** The complete TEANAGOO MA-01 Matcha Ceremony Accessory Set, including the bamboo whisk (Chasen), traditional scoop (Chashaku), tea spoon, and porcelain whisk holder.

### Set Components:

- **Matcha Whisk (Chasen):** A 100-prong bamboo whisk designed to create a smooth, frothy matcha.
- **Traditional Scoop (Chashaku):** A bamboo scoop for precise measurement of matcha powder.
- **Tea Spoon:** A bamboo spoon for stirring or measuring larger quantities of matcha powder.
- **Porcelain Whisk Holder:** A ceramic stand to maintain the whisk's shape and promote proper drying.

## 2. SETUP AND INITIAL USE

Before the first use, it is important to properly prepare your matcha accessories.

### 2.1 Unpacking and Inspection

- Carefully remove all components from the packaging.
- Inspect each item for any signs of damage. If any component is damaged, contact customer support.

## 2.2 Initial Cleaning

Wash all bamboo components (whisk, scoop, spoon) with warm water only. Do not use soap, as it can be absorbed by the bamboo and affect the taste of your matcha. The porcelain whisk holder can be washed with mild soap and water.

- For the bamboo whisk, gently rinse the prongs under warm water.
- Place the whisk on its porcelain holder immediately after rinsing to allow it to air dry and maintain its shape.
- Wipe the bamboo scoop and spoon dry with a clean cloth.



**Figure 2.1:** Illustration of a matcha whisk before and after use, demonstrating the importance of proper whisking technique and the use of the whisk holder to maintain its shape.

## 3. OPERATION: PREPARING MATCHA TEA

Follow these steps to prepare a traditional cup of matcha using your TEANAGOO accessories:

1. **Sift Matcha:** Use the bamboo tea spoon to measure 1-2 scoops (approximately 1-2 grams) of matcha powder into a matcha bowl. Sifting the powder through a fine-mesh sieve is recommended to prevent clumps.
2. **Add Water:** Heat fresh water to approximately 175°F (80°C). Pour about 2-3 ounces (60-90 ml) of hot water into the bowl with the matcha powder.
3. **Whisk:** Hold the matcha whisk firmly and whisk the mixture in a rapid 'W' or 'M' motion. Ensure the whisk does not scrape the bottom of the bowl forcefully. Continue whisking for about 15-30 seconds until a smooth, bright green liquid with a fine layer of foam on top is achieved.
4. **Serve:** Your matcha is now ready to drink. Enjoy immediately.



**Figure 3.1:** Close-up of the 100-prong bamboo whisk, highlighting its natural bamboo material, eco-friendly design, and additive-free composition, essential for a healthy matcha preparation.

## 4. MAINTENANCE AND CARE

Proper care will extend the life of your matcha accessories.

## 4.1 Cleaning

- **Matcha Whisk:** After each use, rinse the whisk thoroughly under warm running water. Gently rub the prongs to remove any matcha residue. **Do not use soap or put in a dishwasher.**
- **Scoop and Spoon:** Rinse with warm water and wipe dry immediately.
- **Whisk Holder:** Can be washed with mild soap and water, then air dried.

## 4.2 Storage

- Always store the matcha whisk on its porcelain holder after cleaning. This helps maintain its original shape and prevents mold by allowing it to dry completely.
- Store bamboo tools in a dry, well-ventilated area away from direct sunlight or extreme temperatures.

### 【BEFORE USE】



### 【AFTER USE】



## PERFECT MATCHA IN SECONDS



**Don't push tines to bowl bottom during use**



**"W" Shaped Stirring for Easier Whipping**



**Maintain by Placing on Chasen Stand After Use**

**Figure 4.1:** The whisk holder provides sturdy support, preventing damage, extending lifespan, keeping the whisk dry to prevent mold and bacteria, and maintaining its shape for better foam generation.

## 4.3 Whisk Lifespan

Like any natural tool, the bamboo whisk has a lifespan. Its shape may naturally change, and bamboo strands may

gradually break over time. This is normal wear and tear.

- For heavy users, it is recommended to replace the whisk every 2-3 months.
- For lighter usage, replacement every 8-12 months is suggested.

## 5. TROUBLESHOOTING


### 5.1 Whisk Losing Shape

If your whisk prongs are losing their original curved shape, ensure you are consistently using the porcelain whisk holder after each cleaning. The holder is designed to help the prongs dry in their correct form.

### 5.2 Matcha Not Frothing Well

- **Water Temperature:** Ensure your water is at the correct temperature (around 175°F / 80°C). Water that is too hot can burn the matcha, while water that is too cool may not allow for proper frothing.
- **Whisking Technique:** Practice a rapid 'W' or 'M' motion, ensuring you are whisking vigorously enough to incorporate air.
- **Matcha Quality:** Higher quality ceremonial grade matcha typically froths better.
- **Whisk Condition:** An old or damaged whisk may not froth effectively. Consider replacing it if it's past its recommended lifespan.

## 6. SPECIFICATIONS

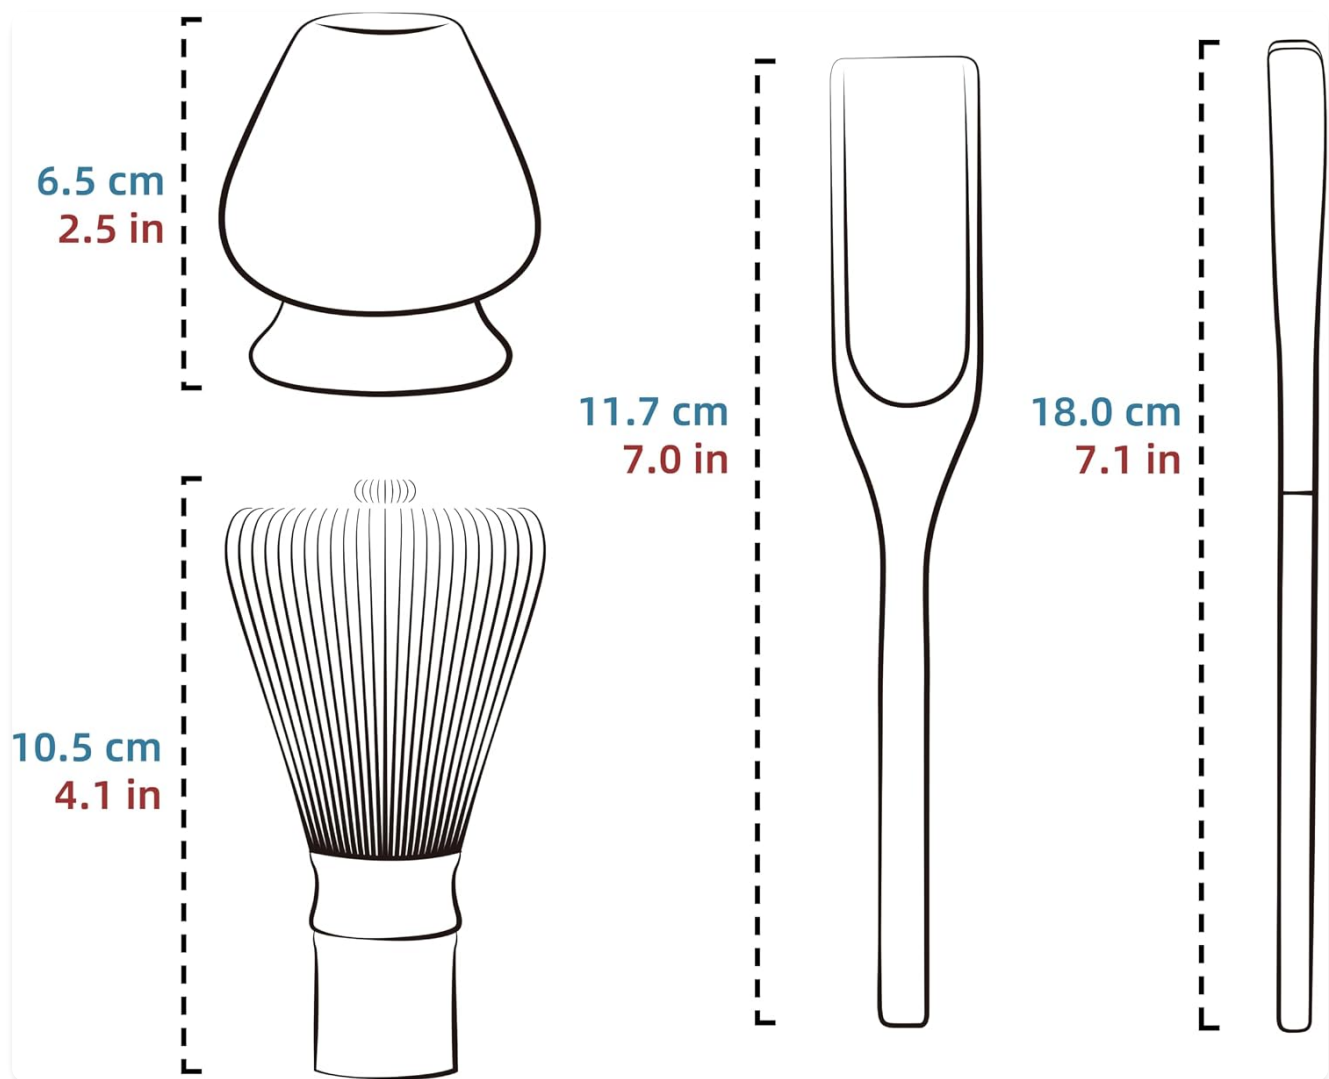

**Figure 6.1:** Detailed dimensions of the matcha whisk, whisk holder, and scoop/spoon for reference.

| Feature               | Detail                                      |
|-----------------------|---------------------------------------------|
| Brand                 | TEANAGOO                                    |
| Model Number          | EMA-01                                      |
| UPC                   | 740385182129                                |
| Head Material (Whisk) | Bamboo                                      |
| Whisk Prongs          | 100 Prongs                                  |
| Product Dimensions    | 2.76 x 2.76 x 7.48 inches (Overall package) |
| Item Weight           | 7.9 ounces                                  |
| Dishwasher Safe       | No (for bamboo components)                  |
| First Available Date  | September 28, 2019                          |

## 7. WARRANTY AND SUPPORT

For any questions regarding your TEANAGOO Matcha Ceremony Accessory set, please contact the manufacturer directly. Information regarding specific warranty terms and customer support can typically be found on the product packaging or the official TEANAGOO website.

© 2025 TEANAGOO. All rights reserved.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

#### Name

Anonymous

#### Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

#### Question

Example: How do I reset this device or fix this error?

#### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question