

[Manuals.plus](#) /

› [Tefal](#) /

› Tefal Raclette Colormanica 3-in-1 Grill and Crepe Maker Instruction Manual RE310401

Tefal RE310401

Tefal Raclette Colormanica 3-in-1 Grill and Crepe Maker Instruction Manual

Model: RE310401

INTRODUCTION

Thank you for choosing the Tefal Raclette Colormanica 3-in-1 appliance. This versatile device allows you to enjoy raclette, grilling, and crepe making, offering a fun and interactive dining experience. Please read this instruction manual carefully before first use to ensure safe and optimal operation of your appliance. Keep this manual for future reference.

The Tefal Raclette Colormanica features an Easy Plus non-stick coating for effortless food release and cleaning, and Thermo-Spot technology to indicate the ideal cooking temperature.

IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

- Read all instructions before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.

PRODUCT COMPONENTS

- Main heating unit with power cord
- Removable non-stick grill/crepe plate
- 8 individual raclette pans
- 8 spatulas (not explicitly listed but implied by raclette pans)

The image below illustrates the assembled appliance with its various functions in use.



This image displays the Tefal Raclette Colormania appliance in action, showcasing its versatile 3-in-1 functionality. The lower level holds eight individual raclette pans with melted cheese, while the upper non-stick plate is used for grilling vegetables and cooking a crepe. The appliance is designed for interactive dining experiences.

SETUP

1. **Unpacking:** Carefully remove all components from the packaging. Retain packaging for storage or disposal.
2. **Initial Cleaning:** Before first use, wash the removable grill/crepe plate and the raclette pans with warm, soapy water. Rinse thoroughly and dry completely. Wipe the main heating unit with a damp cloth.
3. **Assembly:** Place the main heating unit on a stable, heat-resistant, and dry surface. Position the removable grill/crepe plate securely on top of the heating element. Ensure it is properly seated.
4. **Power Connection:** Plug the power cord into a suitable electrical outlet (240V).

OPERATING INSTRUCTIONS

The Tefal Raclette Colormania offers three cooking functions: Raclette, Grill, and Crepe.

General Operation

- Ensure the appliance is properly assembled and plugged in.
- Turn on the appliance using the On/Off button.
- Allow the appliance to preheat. The Thermo-Spot indicator (a red dot on the grill plate) will turn solid red when the ideal cooking temperature is reached, indicating optimal preheating for perfect cooking results.

Raclette Function

Prepare your favorite raclette ingredients such as cheese, cooked potatoes, and cured meats.



Tefal Raclette Colormania 3-in-1 appliance next to a plate of raclette ingredients including potatoes, cured meats, and pickles, with a spatula lifting melted cheese.

1. Place a slice of raclette cheese or other desired ingredients into one of the individual raclette pans.
2. Slide the pan under the heating element.
3. Monitor the cheese until it is melted and bubbly to your preference.
4. Use the included spatulas to remove the melted cheese from the pan and serve it over potatoes or other accompaniments.



A detailed view of a classic raclette serving, featuring creamy melted cheese cascading over warm boiled potatoes. The dish is accompanied by various cured meats, fresh lettuce, and gherkins, highlighting the delicious outcome of the raclette function.

Grill Function

The top plate can be used for grilling various foods.



An image showcasing a vibrant selection of grilled vegetables, such as corn on the cob, zucchini slices, colorful bell peppers, red onions, and mushrooms. These vegetables are prepared on the appliance's grill plate, emphasizing its healthy cooking options.

1. Once the Thermo-Spot indicator is solid red, the grill plate is ready.
2. Lightly grease the grill surface if necessary (e.g., for delicate foods).
3. Place thinly sliced meats, vegetables, or other grillable items directly onto the hot plate.
4. Cook until desired doneness, turning as needed.

Crepe Function

The smooth section of the top plate is ideal for making crepes.



This image presents a stack of perfectly cooked crepes, demonstrating the crepe-making capability of the appliance. The crepes are light, thin, and golden, suggesting a delightful dessert or breakfast option.

1. Ensure the appliance is preheated (Thermo-Spot solid red).
2. Pour a small amount of crepe batter onto the smooth, circular section of the top plate.

- 3. Spread the batter evenly with a crepe spreader (not included) if desired.
- 4. Cook until the edges are golden and the surface is set, then flip and cook the other side.

CLEANING AND MAINTENANCE

Proper cleaning and maintenance will extend the life of your appliance.

- 1. **Unplug and Cool:** Always unplug the appliance from the power outlet and allow it to cool completely before cleaning.
- 2. **Cleaning the Grill Plate and Raclette Pans:** The removable grill plate and raclette pans are dishwasher safe. Alternatively, they can be washed by hand with warm, soapy water and a non-abrasive sponge. Rinse thoroughly and dry completely before storing.



This icon visually represents the dishwasher-safe feature of certain components of the appliance, indicating ease of cleaning and maintenance.

- 3. **Cleaning the Main Unit:** Wipe the main heating unit with a damp cloth. Do not immerse the main unit in water or any other liquid.
- 4. **Stubborn Residue:** For stubborn food residue on the non-stick surfaces, soak the plate and pans in warm, soapy water for a few minutes before cleaning. Do not use metal scouring pads or abrasive cleaners, as these can damage the non-stick coating.
- 5. **Storage:** Store the clean and dry appliance in a cool, dry place.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet malfunction; On/Off button not pressed.	Ensure the power cord is securely plugged into a working outlet. Press the On/Off button.
Food is not cooking evenly or quickly.	Appliance not fully preheated; too much food on the plate/pans.	Wait for the Thermo-Spot indicator to turn solid red. Do not overload the cooking surfaces.
Smoke or unusual odor during first use.	Normal for new appliances.	This is usually normal and will dissipate after a few uses. Ensure good ventilation. If it persists, unplug and contact support.
Food sticks to the non-stick coating.	Coating damaged; insufficient preheating; not enough oil/butter (for crepes).	Ensure the plate is clean and preheated. For crepes, lightly grease the surface. Avoid using metal utensils that can scratch the coating.

SPECIFICATIONS

Feature	Detail
Brand	Tefal
Model Number	RE310401
Color	Blue Steel
Product Dimensions (L x W x H)	35.5 x 45.5 x 13.5 cm
Power	1050 W
Voltage	240 Volts
Material	Metal
Special Feature	Non-stick coating
Item Weight	2.16 Kilograms
Included Components	Grill plate, 8 raclette pans
Country of Origin	France

WARRANTY AND SUPPORT

For information regarding the product warranty, please refer to the warranty card included with your appliance or visit the official Tefal website. Keep your proof of purchase for warranty claims.

If you encounter any issues not covered in the troubleshooting section or require further assistance, please contact Tefal customer support. Contact details can typically be found on the official Tefal website or in the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07X5F3DFR>

More documents and user manuals: <https://manuals.plus/>