

[Manuals.plus](#) /

> [Beyution](#) /

> User Manual for Beyution 845-058-03B03 Remote Control

## Beyution BE-ELE-MENT5-VPTAY-w/colorkey

# User Manual for Beyution 845-058-03B03 Remote Control

Model: BE-ELE-MENT5-VPTAY-w/colorkey

## 1. INTRODUCTION

---

This user manual provides detailed instructions for the operation and maintenance of your new Beyution 845-058-03B03 Replacement Remote Control. This remote is designed to be compatible with various Element Smart LED TV models. Please read this manual thoroughly before use to ensure proper functionality and to maximize your viewing experience.

## 2. PRODUCT FEATURES

---

- Direct replacement infrared remote control for Element Smart LED TVs.
- No programming required; functions upon battery insertion.
- Dedicated quick access buttons for popular streaming services like Vudu, Pandora, YouTube, and Netflix.
- Ergonomic design for comfortable handling.
- Compatible with a wide range of Element Smart LED TV models including E4SFC421, E4SFC551, E4SFC651, E4SW5518, ELSJ4016, ELSJ5017, E2SW3918, E2SW5018, E4SW6518, E4SFT551, ELSFS422, ELSJ5517, ELST4017, E4SJ5516H, E4ST4316H, ELEFJ322S, ELST3216H, ELST4316S, ELST5016S, E4SFC5017, ELSW3917BF.

## 3. PACKAGE CONTENTS

---

The package includes the following item:

- 1 x Beyution 845-058-03B03 Replacement Remote Control

*Note: Batteries are not included and must be purchased separately.*

## 4. SETUP

---

### 4.1 Battery Installation

To install batteries:

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery cover downwards to open the compartment.
3. Insert two (2) AAA alkaline batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery cover back into place until it clicks securely.





Image: Rear view of the remote control with the battery cover removed, revealing the battery slots. This illustrates where to insert the two AAA batteries.

## 4.2 Initial Use

Once batteries are installed, the remote control is ready for use. No additional programming or pairing is required. Point the remote directly at your Element Smart LED TV and begin operation.

## 5. OPERATING INSTRUCTIONS

---

This section details the functions of the various buttons on your remote control.





Image: Front view of the remote control, displaying the layout of all buttons, including power, mute, number pad, navigation, volume, channel, and dedicated app buttons.

## 5.1 Basic Functions

- **Power (●):** Turns the TV on or off.
- **Mute ( ):** Mutes or unmutes the TV audio.
- **Number Pad (0-9):** Directly enters channel numbers.
- **VOL (+/-):** Adjusts the volume level.
- **CH (▲/▼):** Changes the TV channel up or down.
- **OK:** Confirms selections in menus.
- **Navigation Arrows (▲ ▼ ◆):** Navigates through menus and options.

## 5.2 Special Functions

- **MENU:** Accesses the TV's main menu.
- **SOURCE:** Selects input sources (HDMI, AV, etc.).
- **RETURN:** Goes back to the previous screen or menu.

- **EXIT:** Exits the current menu or application.
- **VUDU / PANDORA / YOUTUBE / NETFLIX** Direct access buttons for respective streaming applications.
- **INFO:** Displays information about the current program or input.
- **FREEZE:** Pauses the current image on screen.
- **FAV:** Accesses favorite channels.
- **CH.LIST:** Displays the channel list.
- **P.MODE:** Cycles through picture modes.
- **S.MODE:** Cycles through sound modes.
- **V-CHIP:** Accesses V-Chip settings for parental controls.
- **CC:** Toggles Closed Captions on/off.
- **MTS:** Selects Multi-channel Television Sound options.
- **ASPECT:** Changes the screen aspect ratio.
- **SLEEP:** Sets the sleep timer.
- **AUTO:** Auto-adjusts picture settings (typically for VGA input).
- **HDMI / VGA / TV:** Direct input selection buttons.

## 6. MAINTENANCE

### 6.1 Battery Replacement

When the remote control's performance degrades or it stops responding, it is likely time to replace the batteries. Always use new, brand-name alkaline AAA batteries for optimal performance. Do not mix old and new batteries, or different types of batteries.

### 6.2 Cleaning

To clean the remote control, wipe it gently with a soft, dry cloth. Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

## 7. TROUBLESHOOTING

| Problem                              | Possible Cause / Solution                                                                                                                                                                                                                                                                                                                                                                                                                |
|--------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote control is not working.       | <ul style="list-style-type: none"> <li>• <b>Batteries are dead or inserted incorrectly:</b> Replace with BRAND NEW ALKALINE BATTERIES. Ensure correct polarity (+/-). Do not use rechargeable batteries.</li> <li>• <b>Obstruction:</b> Ensure nothing is blocking the infrared sensor on the TV or the front of the remote control.</li> <li>• <b>Out of range:</b> Move closer to the TV and ensure a direct line of sight.</li> </ul> |
| Specific buttons are not responding. | <ul style="list-style-type: none"> <li>• <b>Dirty contacts:</b> Clean the remote control as described in the Maintenance section.</li> <li>• <b>Remote damage:</b> If the remote has been dropped or damaged, internal components may be affected.</li> </ul>                                                                                                                                                                            |

| Problem                                         | Possible Cause / Solution                                                                                                                                                                                                                                                                                        |
|-------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Remote works for some functions but not others. | <ul style="list-style-type: none"><li>• <b>TV model incompatibility:</b> While this remote is broadly compatible, verify your specific Element TV model is listed in Section 2. If your TV model number is not listed, please contact the seller for assistance in finding the correct remote control.</li></ul> |

## 8. SPECIFICATIONS

| Attribute          | Detail                                        |
|--------------------|-----------------------------------------------|
| Model Number       | BE-ELE-MENT5-VPTAY-w/colorkey (845-058-03B03) |
| Brand              | Beyution                                      |
| Product Dimensions | 7 x 2 x 0.7 inches                            |
| Item Weight        | 2 ounces                                      |
| Batteries Required | 2 AAA batteries (not included)                |
| Compatible Devices | Element Smart LED Television                  |
| Color              | Black                                         |
| Special Feature    | Ergonomic                                     |

## 9. SUPPORT

For further assistance or if your specific TV model is not listed as compatible, please contact the seller or manufacturer for support. Providing your TV's model number will help in resolving any compatibility queries.

### ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

### Question

Example: How do I reset this device or fix this error?

### Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

---

Open the live page

<https://manuals.plus/asin/B07X5FTLRF>

More documents and user manuals: <https://manuals.plus/>