

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

[manuals.plus](#) /

› [SweHouse](#) /

› [SweHouse Kids Clubhouse Tent Instruction Manual](#)

SweHouse Swehouse-TH

SweHouse Kids Clubhouse Tent Instruction Manual

Model: Swehouse-TH

INTRODUCTION

Thank you for choosing the SweHouse Kids Clubhouse Tent. This manual provides essential information for the safe assembly, operation, and maintenance of your new play tent. Please read these instructions carefully before use and retain them for future reference.

SAFETY INFORMATION

WARNING: Keep away from fire!

- Adult supervision is recommended at all times when children are using the tent.
- Ensure all components are securely assembled before allowing children to play.
- Do not use the tent in strong winds or severe weather conditions.
- Regularly inspect the tent for any damage or wear. Discontinue use if damaged.
- This product is intended for children aged 36 months to 9 years.

WHAT'S IN THE BOX

Please verify that all components are present before beginning assembly:

- Kids Clubhouse Tent Fabric
- Accessory Kit (Poles, Connectors)
- Instruction Manual (this document)

ASSEMBLY INSTRUCTIONS

Assembly typically takes approximately 30 minutes. No tools are required.

1. **Step 1: Unpack Components**

Carefully remove all items from the packaging. Lay out the tent fabric and all poles and connectors on a clean, flat surface.



Image: Main view of the assembled SweHouse Kids Clubhouse Tent, showing its design and features.

2. **Step 2: Assemble the Frame**

Connect the poles using the provided connectors to form the base and roof structure. Ensure all connections are secure and stable. Refer to the diagram for the correct pole configuration.

Steady & Safe



Safe & Strong

*Reinforced
Triangular Corners*

Stays Put & No Slip

Image: Detailed view of the tent's construction, highlighting secure pole connections, reinforced corners, and the non-slip base for stability.

3. **Step 3: Drape the Tent Fabric**

Carefully drape the tent fabric over the assembled frame. Align the fabric with the frame, ensuring the door and window openings are correctly positioned.

4. **Step 4: Secure the Fabric**

Attach the fabric to the frame using the integrated fasteners (e.g., ties, Velcro straps) to ensure a snug and stable fit. Check that the fabric is taut and evenly distributed.

5. **Step 5: Final Check**

Before use, perform a final check to ensure all poles are firmly connected, the fabric is securely attached, and the tent is stable on a flat surface.

Product Size



Image: The assembled tent with its dimensions (38.6" L x 27.6" W x 42.5" H) shown, providing a visual reference for its size.

OPERATING INSTRUCTIONS

The SweHouse Kids Clubhouse Tent is designed for imaginative play, both indoors and outdoors.

- **Entry and Exit:** The tent features a roll-up door for easy access. Secure the door in the open position using the attached ties.
- **Ventilation:** Windows provide airflow and visibility.


Ventilated Playhouse

Front Entry and Side Windows for Airy Comfort



Image: The tent highlighting its ventilated design with a front entry and side windows, ensuring comfort during play.

- **Play Environment:** Encourage children to use the tent for various activities such as reading, playing with toys, or engaging in imaginative games.

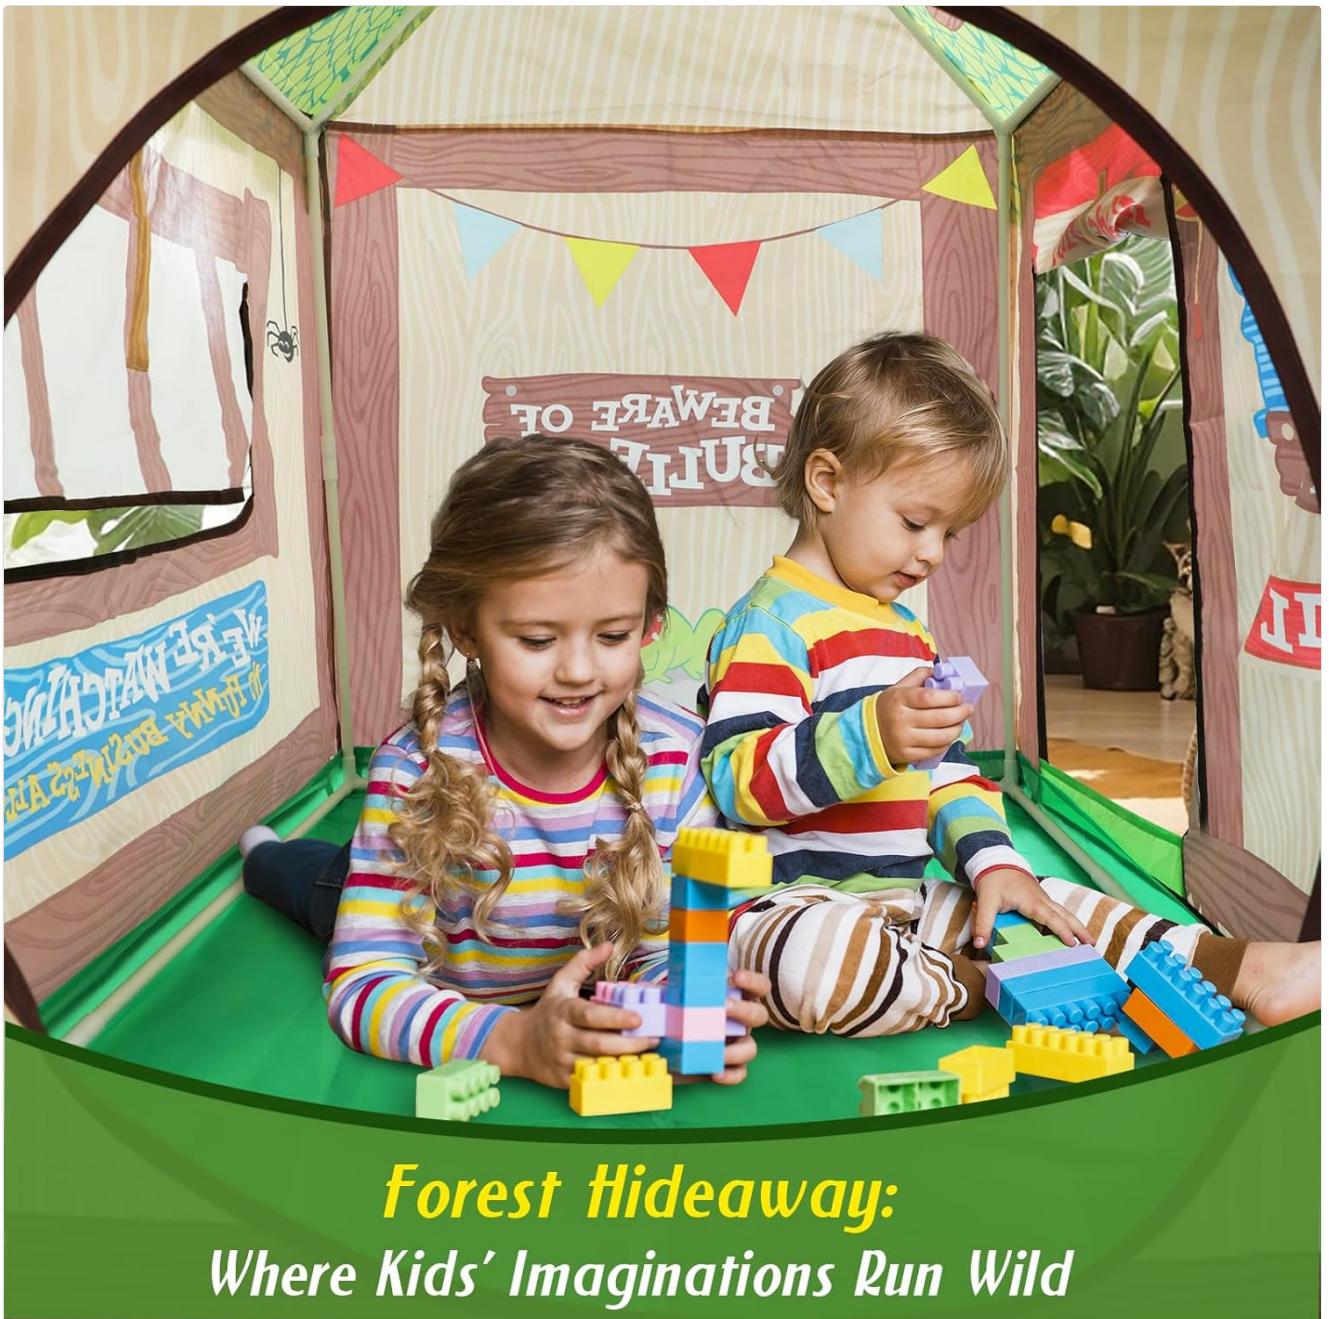

Forest Hideaway: Where Kids' Imaginations Run Wild

Image: Two children engaged in play with building blocks inside the tent, illustrating its use as a creative space.

- **Outdoor Use:** The tent is suitable for outdoor use in calm weather. Ensure it is placed on a flat, stable surface.

The Clubhouse: Where Family Fun Grows Create Memories Under the Sun with Family and Friends



Image: A family enjoying the tent outdoors, demonstrating its suitability for family activities in a natural setting.

MAINTENANCE

- **Cleaning:** Wipe the tent fabric with a damp cloth and mild soap if necessary. Do not machine wash or tumble dry. Allow to air dry completely before storage.
- **Storage:** When not in use, disassemble the tent and store all components in a cool, dry place away from direct sunlight to prevent fading and material degradation.
- **Inspection:** Periodically check poles for bends or cracks and connectors for damage. Ensure the fabric is free from tears or excessive wear.

TROUBLESHOOTING

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Tent is unstable or wobbly.	Poles not fully connected; uneven surface; fabric not taut.	Ensure all poles are securely inserted into connectors. Place the tent on a flat, level surface. Adjust fabric to be taut and secure all fasteners.
Poles bend or break easily.	Excessive force during assembly/disassembly; rough play; manufacturing defect.	Handle poles with care. Avoid leaning or pushing against the tent frame with excessive force. Contact customer support if poles appear defective.
Fabric tears or rips.	Sharp objects; excessive tension; manufacturing defect.	Keep sharp objects away from the tent. Ensure fabric is not overly stretched during assembly. For minor tears, repair kits may be available. Contact customer support for significant damage.

SPECIFICATIONS

- **Model Number:** Swehouse-TH
- **Product Dimensions (L x W x H):** 38.6 x 27.6 x 42.5 inches
- **Item Weight:** 2.25 pounds
- **Manufacturer Recommended Age:** 36 months - 9 years
- **Brand:** SweHouse
- **Manufacturer:** Dongguan SaiNuo Outdoor Products Co., Ltd

WARRANTY AND SUPPORT

For specific warranty details, please refer to the documentation included with your purchase or contact SweHouse customer service directly. SweHouse is committed to providing quality products and support.

For further assistance or to explore other SweHouse products, please visit the official SweHouse Store:

[SweHouse Store on Amazon](#)

