

[Manuals.plus](#) /

› [Beyution](#) /

› Beyution RM-YD047 Remote Control User Manual for Sony Bravia LCD LED TVs

Beyution RM-YD047

Beyution RM-YD047 Remote Control User Manual

Replacement Remote Control for Sony Bravia LCD LED TVs

INTRODUCTION

This manual provides instructions for the Beyution RM-YD047 replacement remote control. This remote is designed to function as a direct replacement for the original Sony Bravia RM-YD047 remote, offering compatibility with a wide range of Sony Bravia LCD LED TV models.

Compatible TV Models:

- KDL-32BX305, KDL-40BX405, KDL-32EX305, KDL-32EX306, KDL-32EX405, KDL-40EX405, KDL-40EX406, KDL-46EX405
- KDL-32EX605, KDL-40EX605, KDL-46EX605, KDL-52EX707, KDL-46EX707, KDL-46EX705, KDL-46EX607
- KDL-40EX707, KDL-40EX705, KDL-40EX607, KDL-32EX707, KDL-32EX705, KDL-32EX607
- KDL-32EX715, KDL-40EX715, KDL-46EX715, KDL-40EX505, KDL-46EX505, KDL-55EX505, KDL-60EX505

SETUP

Battery Installation

The RM-YD047 remote control requires two (2) AAA alkaline batteries for operation. Ensure you use new, non-rechargeable alkaline batteries for optimal performance.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or press the latch and lift to open.
3. Insert two AAA batteries, matching the positive (+) and negative (-) terminals correctly as indicated inside the compartment.
4. Replace the battery compartment cover by sliding it back into place until it clicks securely.

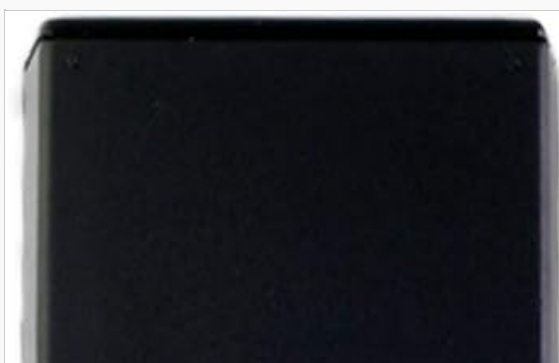




Image: Back of the remote control with the battery cover removed, showing the battery insertion slots.

OPERATING INSTRUCTIONS

This remote control operates using infrared (IR) technology. For proper function, ensure there is a clear line of sight between the remote's emitter and the TV's IR receiver.

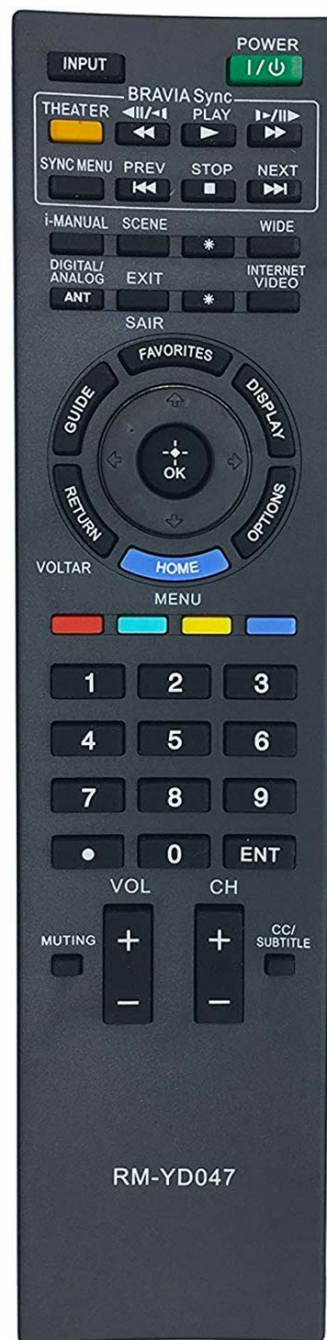


Image: Front view of the RM-YD047 remote control.

Basic Functions:

- **Power** (): Turns the TV on or off.
- **Input**: Cycles through available input sources (HDMI, AV, etc.).
- **Number Buttons (0-9)**: Selects channels directly.
- **VOL +/-**: Adjusts the volume level.
- **CH +/-**: Changes the TV channel.
- **Muting**: Mutes or unmutes the TV audio.
- **Guide**: Displays the electronic program guide (if available).
- **Home/Menu**: Accesses the TV's main menu or smart TV interface.

- **Navigation (Up/Down/Left/Right) & OK:** Navigates through menus and confirms selections.
- **Return/Back:** Returns to the previous screen or menu.
- **Options:** Displays context-sensitive options.

For specific advanced functions, refer to your Sony Bravia TV's original user manual, as button functionality may vary slightly depending on the TV model.

MAINTENANCE

Cleaning:

- Wipe the remote control with a soft, dry cloth.
- Do not use liquid cleaners, sprays, or abrasive materials, as these can damage the remote's surface or internal components.

Storage:

- Store the remote control in a cool, dry place away from direct sunlight and extreme temperatures.
- If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

TROUBLESHOOTING

- **Remote is not working:**
 - Ensure the TV is powered on.
 - Check the batteries. Replace them with new alkaline AAA batteries, ensuring correct polarity.
 - Verify there are no obstructions between the remote control and the TV's infrared sensor.
 - Point the remote directly at the TV's IR sensor.
- **Some buttons do not respond:**
 - This remote is a replacement and may not support all advanced functions of every specific Sony Bravia TV model. Refer to your TV's original manual for specific feature compatibility.
 - Ensure the batteries are not low.

SPECIFICATIONS

Feature	Detail
Model Number	RM-YD047
Brand	Beyution
Compatibility	Sony Bravia LCD LED TVs (specific models listed in Introduction)
Power Source	2 x AAA Alkaline Batteries (not included)
Product Dimensions	7 x 2 x 0.65 inches (approximate)
Item Weight	2 ounces (approximate, without batteries)
Connectivity Technology	Infrared (IR)

WARRANTY AND SUPPORT

This product is covered by a standard manufacturer's warranty. For specific warranty details, please refer to the product packaging or contact your retailer.

If you encounter any issues or require technical assistance, please contact the seller or manufacturer directly through the platform where the product was purchased. Provide your order number and a detailed description of the issue for efficient support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question

Open the live page

<https://manuals.plus/asin/B07X6C4R6T>

More documents and user manuals: <https://manuals.plus/>