

manuals.plus /

> [ELECTROPRIME](#) /

> [ELECTROPRIME 8GB Rechargeable USB LCD Digital Voice Recorder \(Model ASH20BEBUBEB26998\) User Manual](#)

ELECTROPRIME ASHA20BEBUBEB26998

ELECTROPRIME 8GB Rechargeable USB LCD Digital Voice Recorder (Model ASH20BEBUBEB26998) User Manual

INTRODUCTION

This manual provides comprehensive instructions for the proper use and maintenance of your ELECTROPRIME 8GB Rechargeable USB LCD Digital Voice Recorder, Model ASH20BEBUBEB26998. Please read this manual thoroughly before operating the device to ensure optimal performance and longevity. Keep this manual for future reference.

PRODUCT OVERVIEW

The ELECTROPRIME Digital Voice Recorder is a compact and versatile device designed for high-quality audio recording and MP3 playback. It features an LCD screen for easy navigation, 8GB of internal storage, and a rechargeable battery.



Figure 1: ELECTROPRIME Digital Voice Recorder with included accessories, including earphones, USB cable, and

telephone adapter.



Figure 2: Side view of the recorder, highlighting the USB port, headphone jack, microphone input, and power switch.



Figure 3: Front view of the recorder, displaying the LCD screen with recording information and control buttons.

SETUP

1. **Charging the Device:** Connect the recorder to a computer's USB port or a USB wall adapter using the provided USB cable. The LCD screen will indicate charging status. A full charge typically takes 2-3 hours.

2. **Powering On/Off:** Locate the ON/OFF switch on the side of the device. Slide it to the "ON" position to power on and to the "OFF" position to power off.
3. **Initial Setup:** Upon first power-on, you may need to set the date and time. Use the navigation buttons (REW, FF) and Play/Pause button to adjust and confirm settings.

OPERATING INSTRUCTIONS

Recording Audio

1. **Start Recording:** With the device powered on, press the **REC/STOP** button once. The LCD will display "REC" and a timer, indicating that recording has started.
2. **Pause Recording:** During recording, press the **PLAY/PAUSE** button to pause. Press it again to resume.
3. **Stop Recording:** Press the **REC/STOP** button again to stop recording. The recording will be saved automatically.

Playing Back Recordings

1. **Access Recordings:** In standby mode, use the **REW** or **FF** buttons to navigate through your saved recordings.
2. **Play/Pause:** Press the **PLAY/PAUSE** button to start playback of the selected recording. Press again to pause.
3. **Adjust Volume:** Use the volume control buttons (if present, typically on the side or via menu) to adjust playback volume.

Transferring Files to a Computer

1. **Connect:** Connect the recorder to your computer using the USB cable.
2. **Access Device:** The recorder will appear as a removable disk drive on your computer.
3. **Transfer:** Open the drive, locate your audio files (usually in a folder like "RECORD" or "VOICE"), and copy them to your computer.

Using as an MP3 Player

The device supports MP3 audio playback. Transfer MP3 files to the device's internal storage via USB connection. Use the **REW** and **FF** buttons to select tracks and **PLAY/PAUSE** to control playback.

MAINTENANCE

- **Cleaning:** Use a soft, dry cloth to clean the exterior of the device. Do not use liquid cleaners or solvents.
- **Battery Care:** To prolong battery life, avoid fully discharging the device frequently. Charge the device regularly, even if not in use for extended periods.
- **Storage:** Store the device in a cool, dry place away from direct sunlight, extreme temperatures, and high humidity.
- **Avoid Impact:** Protect the device from drops and impacts, which can damage internal components.

TROUBLESHOOTING

Problem	Possible Solution
Device does not power on.	Ensure the battery is charged. Connect to a USB power source and try again. Check the ON/OFF switch position.
Cannot record audio.	Check if the device has sufficient memory. Delete old files if necessary. Ensure the microphone is not obstructed.
Device not recognized by computer.	Try a different USB port or cable. Ensure the device is powered on when connected. Restart your computer.
Poor audio quality.	Ensure the recording environment is quiet. Keep the device close to the audio source. Check recording settings (if adjustable).

SPECIFICATIONS

- **Brand:** ELECTROPRIME
- **Model Number:** ASH20BEBUBEB26998
- **Memory Storage Capacity:** 8 GB
- **Audio Format:** MP3
- **Hardware Interface:** USB
- **Compatible Devices:** MP3 Player
- **Power Source:** Rechargeable Battery (USB charging)

WARRANTY AND SUPPORT

Specific warranty information for this product is not provided in the available documentation. For warranty claims or technical support, please contact your retailer or the manufacturer, ELECTROPRIME, directly. Retain your proof of purchase for any warranty-related inquiries.

For further assistance, please refer to the official ELECTROPRIME website or contact their customer service department.