

[Manuals.plus](#) /

› [Epson](#) /

› Epson Workforce WF-110 Wireless Color Mobile Printer User Manual

Epson WF-110 (C11CH25201)

Epson Workforce WF-110 Wireless Color Mobile Printer User Manual

Model: WF-110 (C11CH25201)

1. INTRODUCTION

This manual provides detailed instructions for the setup, operation, maintenance, and troubleshooting of your Epson Workforce WF-110 Wireless Color Mobile Printer. Please read this manual thoroughly before using the printer to ensure proper and safe operation.

The Epson Workforce WF-110 is a compact, lightweight mobile printer designed for on-the-go printing. It features wireless connectivity, a built-in rechargeable battery, and supports printing from various mobile devices and laptops.



Figure 1.1: Epson Workforce WF-110 Wireless Mobile Printer (Closed)

This image shows the Epson Workforce WF-110 printer in its closed, compact state, highlighting its portability. The printer is black with a textured finish and the Epson logo visible on the top.

2. WHAT'S IN THE BOX

Verify that all components are included in your package:

- WorkForce WF-110 printer
- Instruction booklets
- CD-ROM with drivers

- Power cord
- 4 Epson Ink cartridges (1x Black ink cartridge and 3x color ink cartridges: 1x Cyan, 1x Magenta, 1x Yellow)
- Replacement maintenance box

3. SETUP

3.1 Initial Charging

Before first use, fully charge the printer's built-in lithium-ion battery. Connect the power cord to the printer and a wall outlet. The charging indicator will show the charging status.

The printer can also be charged via USB connection to a computer or a compatible USB power adapter.

3.2 Installing Ink Cartridges

1. Open the printer cover to access the ink cartridge compartment.
2. Remove the ink cartridges from their packaging.
3. Insert each cartridge into its corresponding slot until it clicks into place. Ensure the colors match the labels.
4. Close the printer cover.



Figure 3.1: Printer Ready for Operation

This image displays the Epson WF-110 printer with its paper tray open, a stack of paper loaded, and a document partially printed and exiting the front. This illustrates the printer in an active state, ready for or in the process of printing.

4. CONNECTIVITY

4.1 Wi-Fi Connectivity

The WF-110 supports Wi-Fi 5 for wireless printing. To connect to a Wi-Fi network:

1. Turn on the printer.
2. Navigate to the Wi-Fi Setup menu on the printer's 1.4" color LCD screen.
3. Select your Wi-Fi network from the list and enter the password if prompted.
4. Confirm the connection.

4.2 Wi-Fi Direct

Wi-Fi Direct allows you to connect directly to the printer from your device without a router. This is useful for printing on the go.



Figure 4.1: Wireless Printing from a Smartphone

This image illustrates a smartphone wirelessly connected to the Epson WF-110 printer, demonstrating the ease of mobile printing. The phone screen shows a document ready for printing, with Wi-Fi signals indicating the connection.

4.3 USB Connection

You can also connect the printer to your computer using a USB cable for direct printing. Ensure the necessary drivers are installed from the provided CD-ROM or Epson's official website.

5. OPERATION

5.1 Loading Paper

1. Open the paper support and pull out the extension.
2. Slide the edge guides to the width of your paper.
3. Load paper print-side up into the rear paper feed slot. The maximum input sheet capacity is 20 sheets.



Figure 5.1: Paper Loading and Printing

This image shows the Epson WF-110 printer with its top cover open, revealing the paper input tray. A stack of white paper is loaded, and a printed document is partially ejected from the front, demonstrating the paper path during operation.

5.2 Printing Documents

Once connected and paper is loaded, you can print from your compatible device (laptop, PC, smartphone, tablet). Select the Epson WF-110 as your printer in your application's print dialog. Adjust print settings as needed (e.g., color, black and white, paper type).

The printer supports various print media, including glossy photo paper, and offers a maximum color print resolution of 5760 x 1440 dpi.

5.3 Control Panel Overview

The printer features a 1.4" color LCD screen and an intuitive control panel for easy setup and operation. Use the navigation buttons to access menus and settings.



Figure 5.2: Control Panel and LCD Screen

This close-up image highlights the control panel of the Epson WF-110, featuring the 1.4-inch color LCD screen displaying menu options and ink levels. The power button and navigation controls are clearly visible, indicating user interaction points.

6. MAINTENANCE

6.1 Replacing Ink Cartridges

When an ink cartridge is low or empty, a notification will appear on the LCD screen. Replace cartridges as needed. Use only genuine Epson-brand cartridges.

6.2 Print Head Cleaning

If print quality declines (e.g., lines or missing colors), perform a print head cleaning from the printer's maintenance menu. This process uses a small amount of ink.

6.3 Replacing the Maintenance Box

The printer has a replaceable maintenance box that collects excess ink during cleaning cycles. When the box is full, the printer will prompt you to replace it. Refer to the instruction booklets for detailed replacement steps.

7. TROUBLESHOOTING

7.1 Common Issues and Solutions

- **Printer Not Responding:** Ensure the printer is powered on and connected to your device (Wi-Fi or USB). Check for error messages on the LCD screen.
- **Poor Print Quality:** Perform a print head cleaning. Check ink levels and replace any low or empty cartridges. Ensure you are using the correct paper type for your print settings.
- **Paper Jams:** Carefully remove any jammed paper from the paper feed and output trays. Refer to the instruction booklets for specific jam clearance procedures.
- **Wi-Fi Connection Issues:** Verify your Wi-Fi network is active and the password is correct. Try restarting both the printer and your router.
- **Printer Freezes:** If the printer becomes unresponsive, press and hold the power button along with the cancel button simultaneously for approximately one minute to perform a hard reset.

8. SPECIFICATIONS

Feature	Specification
Model Name	WF-110
Product Dimensions	9.1"D x 12.2"W x 8.5"H
Item Weight	4.6 pounds
Printing Technology	Inkjet
Printer Output	Color
Connectivity Technology	Wi-Fi, USB
Maximum Print Speed (Monochrome)	6.7 ppm
Maximum Print Speed (Color)	3.8 ppm
Maximum Color Print Resolution	5760 x 1440 dpi
Maximum Black and White Print Resolution	5760 dpi
Max Input Sheet Capacity	20 sheets
Power Consumption	14 watts (On-mode)
Control Method	Voice, Buttons
Included Components	Printer, instruction booklets, CD-ROM, power cord, 4 ink cartridges, maintenance box

9. WARRANTY AND SUPPORT

9.1 Warranty Information

The Epson Workforce WF-110 printer comes with a limited warranty. For specific terms and conditions, please refer to the warranty documentation included with your product or visit the official Epson support website.

Note that the Epson printing system is designed to be used exclusively with Epson Genuine Cartridges. Use of non-genuine ink could cause damage not covered under the printer's limited warranty.

9.2 Customer Support

For technical assistance, driver downloads, or further information, please visit the official Epson support website or contact their customer service. The official user manual in PDF format is also available for download from Epson's support pages.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07X6WFH4B>

More documents and user manuals: <https://manuals.plus/>