



[Manuals.plus](#) /

› [Beurer](#) /

› Beurer HD71 Heated Electric Blanket Instruction Manual

Beurer HD71

Beurer HD71 Heated Electric Blanket Instruction Manual

Model: HD71

1. INTRODUCTION

The Beurer HD71 Heated Electric Blanket provides warmth and comfort. This blanket is crafted from soft fleece fabric, designed to be breathable and skin-friendly. It features multiple temperature settings and an automatic shut-off function for safety and convenience. This manual provides essential information for the safe and effective use, maintenance, and care of your HD71 Heated Electric Blanket.



Image: The Beurer HD71 Heated Electric Blanket, showcasing its soft texture and integrated control unit.

2. IMPORTANT SAFETY INFORMATION

Please read all safety instructions carefully before using the Beurer HD71 Heated Electric Blanket. Failure to follow these instructions may result in electric shock, fire, or injury.

- **Always remove the plug from the socket and Control Connector from Blanket Connector before cleaning the blanket.** Otherwise, there is a risk of electric shock.
- Do not use the blanket if it is folded, creased, or bunched up, as this can cause overheating.
- Do not insert pins or other sharp objects into the blanket.
- Do not use the blanket on infants, children, incapacitated persons, or persons insensitive to heat.
- Keep the control unit and power cord away from water or other liquids.
- Regularly inspect the blanket for any signs of wear or damage. If damaged, discontinue use immediately and contact customer support.
- The blanket is equipped with the Beurer Safety System (BSS) for overheating protection.

3. SETUP

3.1 Unpacking

- Carefully remove the electric blanket and its components from the packaging.
- Retain the packaging for future storage or transport.

3.2 Connecting the Control Unit

- Ensure the blanket is laid flat and unfolded.
- Locate the connector on the blanket.
- Firmly insert the control unit's connector into the blanket's connector until it clicks into place.
- Plug the power cord into a suitable electrical outlet.



Image: The control unit of the Beurer HD71, showing the power button and indicator lights for 4 temperature settings.

4. OPERATING INSTRUCTIONS

4.1 Power On/Off

- To turn on the blanket, press the power button on the control unit.
- To turn off the blanket, press the power button again until all indicator lights are off.

4.2 Temperature Settings

- The HD71 offers 4 temperature settings.
- Use the temperature adjustment buttons on the control unit to cycle through the settings (Warm, Low, Medium, High).
- The current setting will be indicated by illuminated lights on the control unit.

4.3 Automatic Shut-off

- For safety and energy efficiency, the blanket features an automatic shut-off function.
- The blanket will automatically turn off after approximately 2 hours of continuous use.
- To restart the blanket after auto shut-off, simply press the power button.



Image: The control unit indicating the 2-hour automatic shutdown feature.

4.4 Product Overview Video

Your browser does not support the video tag.

Video: An official overview of the Beurer HD71 Heated Electric Blanket, demonstrating its features and ease of use.

5. MAINTENANCE

5.1 Cleaning Instructions

- Before cleaning, always ensure the blanket is unplugged from the wall outlet and the control unit is detached from the blanket.
- The blanket is machine washable. Wash at a maximum temperature of 86°F (30°C) on a gentle cycle.
- Do not dry clean, bleach, or iron the electric blanket.
- Tumble dry on low heat or line dry. Ensure the blanket is completely dry before reattaching the control unit and using it.



Image: The removable control unit, highlighting the blanket's machine washable design.

5.2 Storage

- When not in use, store the blanket in a cool, dry place.
- Avoid folding the blanket tightly or placing heavy objects on it, which could damage the internal heating elements.

6. TROUBLESHOOTING

If your Beurer HD71 Heated Electric Blanket is not functioning as expected, please refer to the following common issues and solutions:

- **Blanket is not heating:**
 - Ensure the power cord is securely plugged into both the blanket and the wall outlet.
 - Check if the wall outlet is functional by plugging in another appliance.
 - Verify that the control unit is turned on and a temperature setting is selected.
- **Indicator lights are flashing or not working:**
 - This may indicate an internal fault or an issue with the connection. Try unplugging the blanket from the wall and detaching the control unit, then reconnecting everything securely.
 - If the issue persists, contact customer support.
- **Blanket feels too hot or not warm enough:**
 - Adjust the temperature setting on the control unit to your desired warmth level.
 - Allow a few minutes for the blanket to reach the selected temperature.

If you continue to experience problems, please contact Beurer customer support for assistance.

7. SPECIFICATIONS

Feature	Specification
Model Name	HD71
Brand	Beurer
Product Dimensions	50"L x 60"W
Material	Microplush, Fleece
Fabric Type	60% Cotton, 40% Polyester
Color	Grey
Temperature Settings	4
Automatic Shut-off	After 2 hours
Care Instructions	Machine Washable (detach control unit, wash at 86°F)
Included Components	Control Unit
Item Weight	1 Pound

Feature	Specification
Safety Feature	Overheating Protection (BSS)
UPC	850003500195

8. WARRANTY & SUPPORT

8.1 Warranty Information

The Beurer HD71 Heated Electric Blanket comes with a **Limited Lifetime Warranty**. This warranty covers defects in materials and workmanship under normal use.

8.2 Customer Support

For warranty claims, product assistance, or any questions regarding your Beurer HD71 Heated Electric Blanket, please contact our support team:

- **Phone:** 1-800-536-0366
- **Email:** info@beurer.com
- **Website:** Visit www.beurer.com to join our Warranty club and for additional product information.