

Tefal EY3018

Tefal Easy Fry Compact Digital Air Fryer

Model: EY3018

User Manual

1. PRODUCT OVERVIEW

The Tefal Easy Fry Compact Digital Air Fryer allows you to enjoy healthy fried foods using a very compact appliance. It is ideal for one or two servings, making it perfect for small households. Prepare a wide variety of ingredients with delicious results using little to no oil. Excellent cooking results are effortless, allowing you to grill, roast, and bake your favorite dishes in no time. With dishwasher-safe parts, cleaning is quick and easy.

Key Features:

- **Healthy Frying:** Enjoy delicious food with little to no oil.
- **Ultra-Compact Design:** Perfect for small households, serving up to two portions (1.6 L capacity).
- **Six Automatic Programs:** Pre-set options for fries, grill, snacks, chicken, fish, and cake.
- **Digital Display with Touch Interface:** Easy and intuitive control.
- **Adjustable Thermostat:** Temperature control from 80°C to 200°C.
- **Integrated Timer:** Up to 30 minutes with automatic shut-off.
- **Dishwasher-Safe Parts:** Removable parts, including the grill rack in the basket, are easy to clean.



Figure 1: The Tefal Easy Fry Compact Digital Air Fryer, showcasing its sleek black design and a removable basket filled with crispy fries.

2. IMPORTANT SAFETY INSTRUCTIONS

Please read all instructions carefully before using your Tefal Easy Fry Compact Digital Air Fryer. Failure to follow these instructions may result in electric shock, fire, or serious injury.

- Always place the appliance on a stable, heat-resistant surface, away from walls or other appliances, to allow for proper air circulation.
- Do not immerse the appliance, cord, or plug in water or any other liquid.
- Keep children and pets away from the appliance during operation.
- Do not block the air inlet or outlet vents.
- Unplug the appliance from the outlet when not in use and before cleaning.
- Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged in any manner.
- The surfaces may become hot during use. Do not touch hot surfaces. Use handles or knobs.
- Do not use accessories or attachments not recommended by the manufacturer.
- This appliance is for household use only. Do not use outdoors.

3. SETUP AND FIRST USE

Unpacking:

1. Carefully remove the air fryer and all accessories from the packaging.
2. Remove any packaging materials, stickers, or labels.
3. Check that all parts are present and undamaged.

Before First Use:

1. Clean the basket and grill rack thoroughly with hot water, dish soap, and a non-abrasive sponge.
2. Wipe the inside and outside of the appliance with a damp cloth.
3. Ensure all parts are completely dry before use.

Placement:

Place the air fryer on a stable, level, and heat-resistant surface. Ensure there is at least 10 cm (4 inches) of free space on the back and sides, and 10 cm (4 inches) above the appliance to allow for proper air circulation.



Figure 2: Product dimensions for proper placement and storage. The air fryer measures approximately 20.5 cm in width and 29.6 cm in height.

4. OPERATING INSTRUCTIONS

General Operation:

1. Plug the appliance into a grounded wall outlet.
2. Carefully pull the basket out of the air fryer.
3. Place the ingredients in the basket. Do not exceed the MAX fill line.
4. Slide the basket back into the air fryer.
5. Press the power button to turn on the appliance.
6. Select a pre-set program or manually set the temperature and time using the digital touch interface.
7. Press the start button to begin cooking.
8. Some ingredients may require shaking halfway through the cooking time. Pull out the basket, shake it, and slide it back in. The timer will pause automatically.
9. When the cooking time is complete, the appliance will beep. Carefully pull out the basket and empty the contents.



Figure 3: The intuitive digital touch interface for selecting programs and adjusting settings.

Pre-set Programs:

The Tefal Easy Fry Compact Digital Air Fryer features six pre-set programs for common dishes:

- **Fries:** Optimized for crispy French fries.
- **Grill:** Ideal for grilling meats and vegetables.
- **Snacks:** Perfect for quick bites and appetizers.
- **Chicken:** For perfectly cooked chicken pieces.
- **Fish:** Gentle cooking for delicate fish.
- **Cake:** For baking small cakes and desserts.



Figure 4: Examples of dishes that can be prepared using the air fryer's versatile cooking functions.

5. CLEANING AND MAINTENANCE

Regular cleaning ensures optimal performance and extends the lifespan of your air fryer.

Cleaning After Each Use:

1. Unplug the air fryer and allow it to cool down completely before cleaning.
2. Remove the basket and grill rack.
3. The basket and grill rack are dishwasher-safe. Alternatively, wash them with hot water, dish soap, and a non-abrasive sponge.
4. Wipe the exterior of the appliance with a damp cloth. Never use abrasive cleaners or scouring pads.
5. Clean the heating element with a cleaning brush to remove any food residue.

6. Ensure all parts are completely dry before storing or using again.

Storage:

Store the air fryer in a cool, dry place. Ensure the power cord is neatly wrapped and not kinked.

6. TROUBLESHOOTING

If you encounter issues with your Tefal Easy Fry Compact Digital Air Fryer, please refer to the following common problems and solutions:

Problem	Possible Cause	Solution
Air fryer does not turn on.	Appliance not plugged in; power outlet not working.	Ensure the power cord is securely plugged into a working outlet. Check the circuit breaker.
Food is not cooked evenly.	Too much food in the basket; food not shaken.	Do not overfill the basket. Shake the basket halfway through cooking for even results.
White smoke coming from the appliance.	Grease residue from previous use; fatty ingredients.	Clean the basket and heating element thoroughly. For fatty ingredients, absorb excess oil before cooking.
Fries are not crispy.	Not enough oil; wrong potato type; temperature too low.	Ensure potatoes are dry before adding a small amount of oil. Use fresh potatoes suitable for frying. Increase temperature if needed.

If the problem persists, please contact customer support.

7. SPECIFICATIONS

Brand:	Tefal
Model:	EY3018
Color:	Black
Product Dimensions (L x W x H):	20.5 x 20.5 x 29.6 cm
Capacity:	1.6 Liters
Power:	1400 W
Voltage:	120 Volts
Material:	Aluminum, Plastic
Special Features:	Temperature Control
Product Weight:	2.8 kg

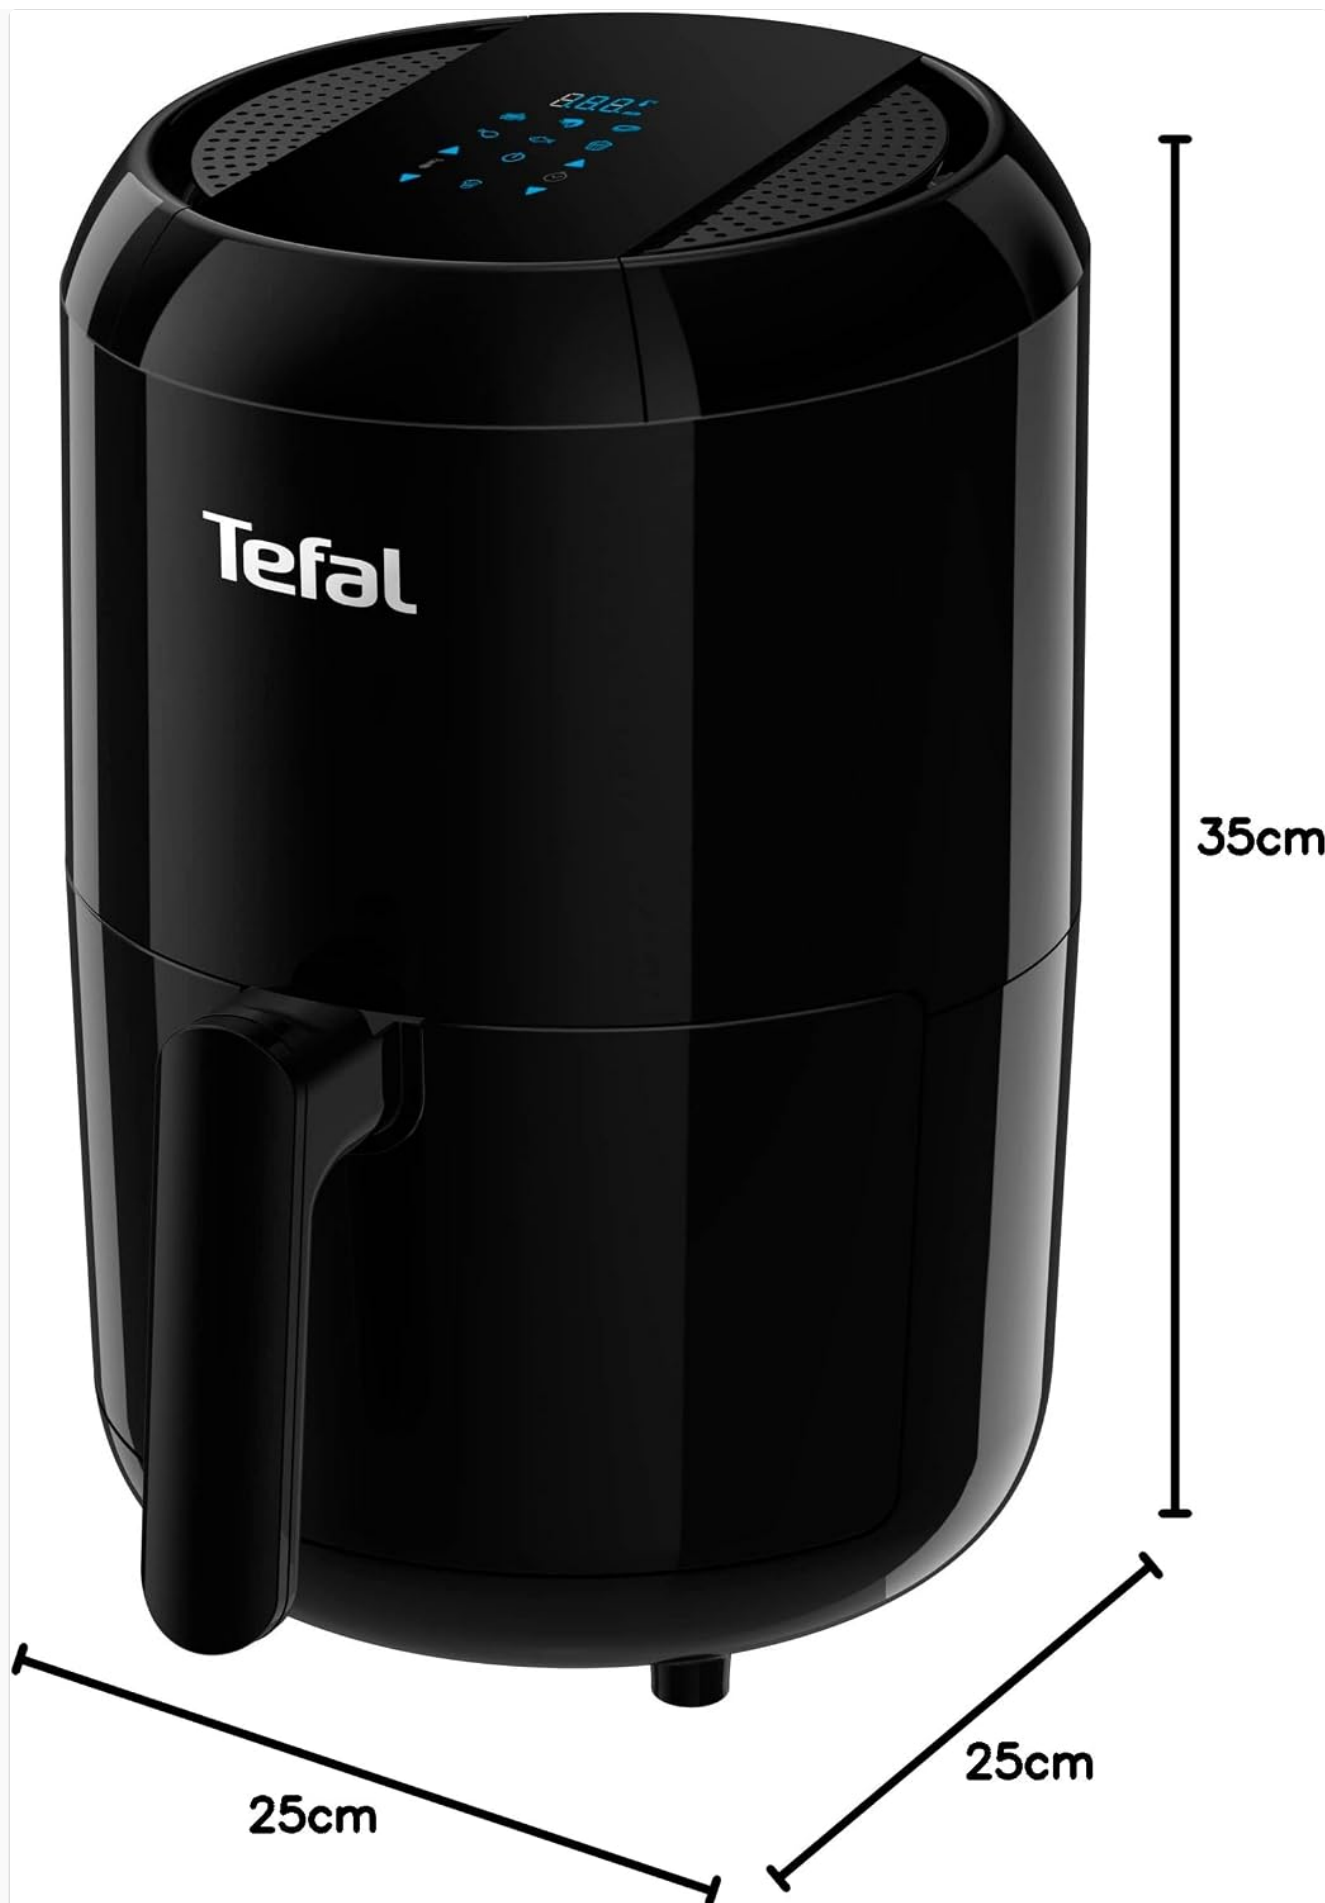


Figure 5: Alternative product dimensions, providing a different perspective on the appliance's size.

8. WARRANTY AND SUPPORT

Tefal products are manufactured to high quality standards. This product comes with a standard manufacturer's warranty. Please refer to the warranty card included in your product packaging for specific terms and conditions, including warranty period and coverage.

Customer Support:

For technical assistance, troubleshooting beyond this manual, or warranty claims, please contact Tefal customer support. Contact information can typically be found on the Tefal official website or on the product packaging. You can also visit the official Tefal store on Amazon for more information: [Tefal Amazon Store](#)

© 2025 Tefal. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Email

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Details

Submit question