

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [xingzhihua](#) /

› [xingzhihua LTV-914 Universal Remote Control for LG TVs \(Models AKB73715679, AKB73715634\)](#)

xingzhihua LTV-914

xingzhihua LTV-914 Universal Remote Control for LG TVs

Instruction Manual

1. PRODUCT OVERVIEW

The xingzhihua LTV-914 is a pre-programmed universal remote control designed for use with various LG Smart 3D TV models, including AKB73715679 and AKB73715634. This remote provides essential functions for controlling your television without the need for complex setup or programming.

Key Features:

- Pre-programmed for immediate use.
- Compatible with specific LG TV models (e.g., AKB73715679, AKB73715634).
- No setup required; simply insert batteries.



Figure 1: Front view of the xingzhihua LTV-914 Universal Remote Control. This image displays the full layout of buttons, including power, number pad, navigation, volume, channel, and smart TV functions.

2. SETUP AND BATTERY INSTALLATION

The LTV-914 remote control requires two AAA batteries (not included) for operation. No programming or pairing is necessary; the remote is ready to use once batteries are installed.

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards to open it.
3. Insert two AAA batteries, ensuring the positive (+) and negative (-) terminals align correctly with the markings inside the compartment.
4. Slide the battery compartment cover back into place until it clicks securely.



Figure 2: Battery compartment of the LTV-914 remote control. This image shows the remote with the battery cover removed, revealing the slots for two AAA batteries and their polarity markings.

3. OPERATING INSTRUCTIONS

Point the remote control directly at your LG TV. Ensure there are no obstructions between the remote and the TV's infrared receiver.

Basic Functions:

- **Power (●):** Turns the TV on or off.
- **Input:** Selects video input sources (HDMI, AV, etc.).
- **Number Pad (0-9):** Direct channel selection.

- **Volume (+/-):** Adjusts the sound level.
- **Channel (CH +/-):** Changes TV channels.
- **Mute:** Silences the TV audio.
- **Navigation (Up, Down, Left, Right, OK):** Navigates menus and confirms selections.
- **Back:** Returns to the previous screen or menu.
- **Exit:** Exits the current menu or application.
- **Smart:** Accesses Smart TV features (if supported by your TV model).
- **Settings:** Opens the TV's settings menu.

Note: Specific button functionalities may vary slightly depending on your LG TV model and its firmware.

4. COMPATIBILITY INFORMATION

This remote control is designed to be compatible with a range of LG TV models, including those that originally used remote models AKB73715679 and AKB73715634. While it offers basic functionality for many LG Smart 3D TVs, please be aware of the following:

- **Functional Deviations:** Due to variations in TV display settings and software, some advanced functions or specific buttons may not operate identically across all compatible LG TV models.
- **Not Fully Universal:** This remote is not a truly universal remote that works with all TV brands or all LG models. It is pre-programmed for specific LG TV series.
- **Verification:** Before purchase, it is recommended to compare the button layout and model numbers (e.g., AKB73715679, AKB73715634) with your original remote control to ensure optimal compatibility.

5. MAINTENANCE

- **Cleaning:** To clean the remote, gently wipe it with a soft, dry cloth. Do not use liquid cleaners or abrasive materials.
- **Battery Replacement:** Replace batteries when the remote's response becomes sluggish or stops working. Always replace both batteries at the same time with new AAA batteries. Do not mix old and new batteries, or different types of batteries.
- **Storage:** If the remote will not be used for an extended period, remove the batteries to prevent leakage and potential damage.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Remote not working.	Dead or incorrectly inserted batteries.	Replace batteries with new AAA batteries, ensuring correct polarity.
Remote works intermittently.	Weak batteries; obstruction between remote and TV.	Replace batteries. Ensure a clear line of sight to the TV's IR receiver.
Certain buttons do not function.	TV model incompatibility for specific advanced functions.	This remote provides basic functions. Some advanced features may not be supported by all compatible LG TV models. Verify compatibility with your original remote's functions.

7. SPECIFICATIONS

- **Model:** LTV-914
- **Brand:** xingzhihua
- **Compatible Devices:** LG Televisions (specifically models using AKB73715679, AKB73715634 remotes)
- **Special Features:** Pre-programmed, Universal (for specified LG models)
- **Power Source:** 2 x AAA Batteries (not included)
- **UPC:** 738944977323

8. WARRANTY AND SUPPORT

For any questions or support regarding your xingzhihua LTV-914 remote control, please contact the seller or manufacturer directly. Information regarding specific warranty terms may be provided at the point of purchase.

Note: Standard shipping typically takes 7-25 days for delivery. If you have not received your product within 25 days, please contact customer support.