

[Manuals.plus](#) /

› [BLACK+DECKER](#) /

› BLACK+DECKER WDC215WB Wet/Dry Lithium Dustbuster Instruction Manual

BLACK+DECKER WDC215WB

BLACK+DECKER WDC215WB Wet/Dry Lithium Dustbuster Instruction Manual

1. INTRODUCTION

Thank you for purchasing the BLACK+DECKER WDC215WB Wet/Dry Lithium Dustbuster. This cordless handheld vacuum is designed for convenient cleaning of both dry debris and spilled liquids. Its lightweight design and easy maintenance features make it an ideal tool for quick clean-ups around your home or vehicle. Please read this manual thoroughly before use to ensure safe and optimal performance.



2. IMPORTANT SAFETY INFORMATION

Always observe basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and personal injury.

- Do not use the appliance in wet conditions or immerse it in water, except for the washable components as instructed.
- Keep hair, loose clothing, fingers, and all parts of the body away from openings and moving parts.
- Do not pick up flammable or combustible materials, such as gasoline, or use in areas where they may be present.
- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Use only as described in this manual. Use only manufacturer's recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to a service center.
- Unplug the charger from the outlet when not in use and before cleaning.
- This appliance is for household use only.

3. PACKAGE CONTENTS

Verify that all items are present in the package:

- BLACK+DECKER WDC215WB Main Unit
- Crevice Nozzle
- Brush Nozzle
- Liquid Suction Rubber Pad
- Charging Stand/Charger



Image 2: Overview of the product features and included attachments.

4. PRODUCT OVERVIEW

Familiarize yourself with the main components of your Dustbuster:

- **Power Button:** Activates and deactivates the vacuum.
- **Dust Case:** Collects debris and liquids. Easily detachable for emptying and cleaning.
- **Filter:** Located inside the dust case, filters dust and particles. Washable.
- **Charging Port:** Connects to the charging stand.
- **Charging Indicator Lamp:** Illuminates during charging and turns off when fully charged.

そのほか機能



Image 3: Key features including lightweight design, ergonomic handle, charger, and dust collection capacity.

5. SETUP

5.1 Initial Charging

1. Place the Dustbuster onto the charging stand.
2. Plug the charging stand into a power outlet.
3. The charging indicator lamp will illuminate (typically red) to indicate charging.
4. Allow approximately 10 hours for a full charge. The lamp will turn off once charging is complete.

For optimal battery life, it is recommended to fully charge the unit before its first use.

5.2 Attaching Nozzles


Select the appropriate nozzle for your cleaning task:

- **Crevice Nozzle:** Ideal for reaching tight spaces like sofa gaps or car seats.
- **Brush Nozzle:** Suitable for vacuuming dust and debris from surfaces like keyboards or interior furnishings.
- **Liquid Suction Rubber Pad:** Use this attachment specifically for vacuuming liquids.

To attach a nozzle, simply push it firmly onto the suction opening until it clicks into place. To remove, pull it off.

3 種類のアタッチメント

用途や場所に合わせて使い分けるとさらに便利。

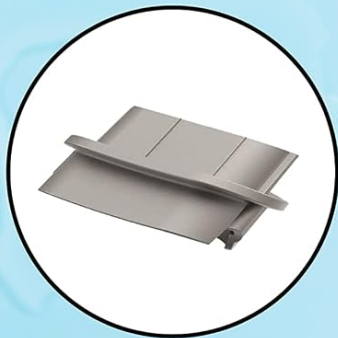

液体吸引用ラバーパッド

液体を吸い込むときに



先細ノズル

ソファや車内シートの隙間など
細かい部分を掃除するときに



ブラシノズル

パソコンやインテリアなどの
ちりやほこりを吸い込むときに

Image 4: The three included attachments: liquid suction rubber pad, crevice nozzle, and brush nozzle.

6. OPERATING INSTRUCTIONS

6.1 Powering On/Off

Press and hold the power button to activate the vacuum. Release the button to turn it off. The vacuum will only operate while the button is pressed.

簡単操作

ボタンを押すと吸引、離すと停止します。

充電時間

約 10 時間

連続使用可能時間

約 8 分



Image 5: Demonstrates simple operation, charging time, and continuous use time.

6.2 Dry Vacuuming

Attach the crevice or brush nozzle as needed. Point the suction opening towards the dry debris and press the power button. Move the vacuum slowly over the area to be cleaned.

6.3 Wet Vacuuming

Attach the liquid suction rubber pad. Point the suction opening towards the spilled liquid and press the power button. Ensure the vacuum is held at an angle that allows the liquid to enter the nozzle without tilting the unit excessively, which could cause liquid to spill back out or enter the motor. After wet vacuuming, immediately empty and clean the dust case and filter.

液体も吸い込み

普通のゴミはもちろん、液体も吸えて便利！



Image 6: Illustrates the capability to vacuum liquids, useful for spills, sink areas, and car interiors.

6.4 Continuous Use Time

The Dustbuster provides approximately 8 minutes of continuous use on a full charge. Recharge the unit when suction power decreases or after each use to ensure it's ready for the next task.

7. MAINTENANCE

Regular cleaning ensures optimal performance and extends the life of your Dustbuster.

7.1 Emptying the Dust Case

1. Ensure the vacuum is turned off.
2. Press the one-touch release button to detach the dust case from the main unit.
3. Empty the contents of the dust case into a waste bin.

7.2 Cleaning the Dust Case and Filter

Both the dust case and the filter are washable.

- 1. After emptying, separate the filter from the dust case.
- 2. Rinse both the dust case and the filter under running water until clean.
- 3. Allow both components to air dry completely before reassembling them and attaching them back to the main unit. Ensure they are completely dry to prevent mold or damage to the vacuum.



Image 7: Steps for easy maintenance, including one-touch dust case removal and washing the filter and dust case.

8. TROUBLESHOOTING

If you encounter issues with your Dustbuster, refer to the following common problems and solutions:

Problem	Possible Cause	Solution
---------	----------------	----------

Problem	Possible Cause	Solution
Vacuum does not turn on.	Battery is depleted.	Charge the unit for approximately 10 hours.
Reduced suction power.	Dust case is full or filter is clogged.	Empty the dust case and clean the filter. Ensure the filter is completely dry before reassembly.
Reduced suction power.	Nozzle or suction opening is blocked.	Remove the nozzle and check for any obstructions in the nozzle or the main unit's suction opening.
Short operating time.	Battery not fully charged or battery life has diminished.	Ensure the unit is fully charged (approx. 10 hours). If the issue persists after prolonged use, the battery may be reaching the end of its lifespan.
Charging indicator lamp does not light up.	Charger not properly connected or power outlet issue.	Check that the charging stand is securely plugged into a working power outlet and the Dustbuster is correctly seated on the stand.

9. SPECIFICATIONS

Feature	Detail
Model Number	WDC215WB
Power Source	Rechargeable (Battery Powered)
Battery Type	Lithium-ion
Battery Voltage	7.2V
Charging Time	Approx. 10 hours
Continuous Use Time	Approx. 8 minutes
Dust Collection Capacity	385 ml
Body Weight	Approx. 0.69 kg
Body Dimensions (W x D x H)	120 x 410 x 140 mm
Features	Wet/Dry capability, Lightweight
Filter Type	Cartridge
Recommended Use Location	Interior

10. WARRANTY AND SUPPORT

10.1 Warranty Information

This BLACK+DECKER WDC215WB Dustbuster comes with a **1-year warranty** from the date of purchase. Please retain your proof of purchase for warranty claims. The warranty covers defects in materials and workmanship under normal use. It does not cover damage resulting from misuse, abuse, accident, unauthorized repairs, or normal wear and tear.

10.2 Customer Support

For technical assistance, warranty service, or to order replacement parts, please contact BLACK+DECKER customer support. Refer to the official BLACK+DECKER website or your product packaging for the most current contact information in your region.

© 2026 BLACK+DECKER. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question