

[Manuals.plus](#) /

› [LELO](#) /

› LELO SORAYA 2 Rabbit Vibrator Instruction Manual

LELO SORAYA 2

LELO SORAYA 2 Rabbit Vibrator User Manual

Model: SORAYA 2

1. INTRODUCTION

The LELO SORAYA 2 is a sophisticated rabbit vibrator designed for enhanced clitoral and G-spot stimulation. Crafted with premium materials and advanced technology, it offers a range of pleasure settings in a waterproof design. This manual provides essential information for the safe and effective use, care, and maintenance of your device.



Image 1.1: The LELO SORAYA 2 Rabbit Vibrator.

2. WHAT'S IN THE BOX

Upon unboxing your LELO SORAYA 2, please ensure all components are present:

- SORAYA 2 G-spot and Clitoral Vibrator

- USB Charging Cable
- Satin Storage Pouch
- Instruction Manual
- Moisturizer Sachet (5 ml / 0.17 fl. oz.)
- Warranty Card

SORAYA™ 2

g-spot and clitoral vibrator



WARRANTY CARD

verifies product authenticity

MANUAL

how to use guide



MOISTURIZER SACHET

water-based lubricant
5 ml / 0.17 fl. oz.



CHARGING CORD

USB cable



SATIN POUCH

for storage

Image 2.1: Packaging contents of the LELO SORAYA 2.

3. PRODUCT FEATURES

The LELO SORAYA 2 incorporates several design elements for an optimized experience:

- **Sculpted Design:** Features a broader and thicker tip for enhanced surface sensations and a fully flexible external stimulator designed to adapt to various body types.
- **12 Pleasure Settings:** Offers a range of gradient levels, from gentle murmurs to satisfying pulses.

- **USB Rechargeable:** Provides extended power and duration for convenience.
- **Waterproof:** Suitable for use in baths or showers.
- **Whisper Quiet:** Engineered for discreet operation.
- **Luxurious Silicone:** Made from extra-soft, body-safe silicone for comfort.



Image 3.1: Key features of the LELO SORAYA 2.



Image 3.2: Summary of product features.

4. SETUP

4.1 Initial Charging

Before the first use, fully charge your SORAYA 2 for **2 hours**. Connect the USB charging cable to the device's charging port and plug the other end into a USB power source. The LED lights on the device will indicate the charging status.

5. OPERATING INSTRUCTIONS

Follow these steps to operate your LELO SORAYA 2:

1. **Unlock:** Press and hold the **+** and **-** buttons simultaneously for 3 seconds until the light turns on.
2. **Turn On:** Press the **+** button to turn on the device. The LED lights will blink to indicate the battery level.
3. **Increase Vibration:** Press the **+** button again to increase the vibration strength.
4. **Change Patterns:** Press the **()** button to switch between the 12 available vibration patterns.
5. **Reduce Vibration:** Press the **-** button to decrease the vibration strength.
6. **Turn Off:** Press and hold the **()** button to turn off the device.



How to use

BEFORE FIRST USE

charge your device for 2 hours

TO TURN IT ON

press the + button

THE LED LIGHTS WILL BLINK

to indicate the battery level

TO SWITCH BETWEEN 12 PLEASURE SETTINGS

press the () button

TO DECREASE OR INCREASE THE INTENSITY

use the + and the - buttons

TO TURN IT OFF

press and hold the () button

Image 5.1: Operational guide for the LELO SORAYA 2.

6. MAINTENANCE

6.1 Cleaning

To maintain hygiene and prolong the life of your device, clean it thoroughly after each use. Wash the SORAYA 2 with warm water and a toy cleaner or mild soap. Rinse thoroughly and pat dry with a lint-free cloth. Avoid using cleaners containing alcohol, petroleum, or acetone, as these can damage the silicone.

6.2 Storage

Store your SORAYA 2 in the provided satin pouch in a cool, dry place, away from direct sunlight and extreme temperatures. Ensure it is fully dry before storage. Avoid storing it with other toys made of different materials to prevent material degradation.

7. TROUBLESHOOTING

If you encounter any issues with your LELO SORAYA 2, please consider the following:

- **Device not turning on:** Ensure the device is fully charged. Refer to Section 4.1 for charging instructions. Confirm it is unlocked by holding + and - simultaneously for 3 seconds.
- **Weak vibrations:** The battery might be low. Recharge the device.
- **Buttons unresponsive:** Ensure the device is unlocked. If issues persist, try a full recharge cycle.

If problems continue, please refer to the warranty information in Section 9 or contact LELO customer support for assistance.

8. SPECIFICATIONS

Brand	LELO
Model Name	SORAYA 2
Item Model Number	5853
Material	ABS Plastic, Silicone
Color	Black
Product Dimensions	8.66 x 2.99 x 1.77 inches
Weight	6.4 ounces
Batteries	1 Lithium Polymer battery (included)
Waterproof	Yes

9. WARRANTY AND SUPPORT

LELO products are manufactured to the highest standards and come with a **1-year warranty** covering manufacturing defects. Additionally, LELO offers a **10-year quality guarantee**, providing a 50% discount on a new device in case of product failure outside the warranty period.

For warranty claims, technical support, or any inquiries, please visit the official LELO website or contact their customer service directly. Keep your warranty card and proof of purchase for any claims.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07X9VSFYP>

More documents and user manuals: <https://manuals.plus/>