

NIXON Dork Too

NIXON Dork Too Digital Watch Instruction Manual

Model: Dork Too

[Overview](#) [Setup](#) [Operation](#) [Introduction](#) [Product](#) [Maintenance](#) [Troubleshooting](#) [Specifications](#) [Warranty & Support](#)

1. INTRODUCTION

Thank you for choosing the NIXON Dork Too digital watch. This manual provides detailed instructions for the proper setup, operation, and maintenance of your new timepiece. Please read this manual thoroughly before using the watch to ensure optimal performance and longevity.

2. PRODUCT OVERVIEW

The NIXON Dork Too features a custom injection-molded stainless steel case with a stainless steel perforated speaker cover. It includes a digital module displaying time, date, and alarm functions, along with an EL backlight for visibility in low light conditions. The watch is equipped with a stainless steel link bracelet and a fold-over clasp with double push-button safety. A unique feature allows the time to be announced audibly by pressing a dedicated button. The device is powered by a rechargeable battery via USB.



Figure 2.1: Front view of the NIXON Dork Too digital watch, showcasing the rectangular face and speaker cover.



Figure 2.2: Side view of the NIXON Dork Too, illustrating the case depth and button placement.

3. SETUP

3.1 Charging the Battery

The NIXON Dork Too is equipped with a rechargeable battery. Before initial use, or when the battery is low, connect the provided charging cord to the watch and a compatible USB power source. A protective case is included for safe storage during charging.

- Locate the charging port on the watch.
- Connect the small end of the charging cord to the watch.
- Connect the USB end of the charging cord to a USB power adapter or computer port.
- The watch display will indicate charging status.
- Once fully charged, disconnect the charging cord.



Figure 3.1: The NIXON Dork Too connected to its USB charging cable.

3.2 Setting Time and Date

Refer to the specific button functions to enter the setting mode for time and date. Typically, a dedicated button (often labeled "MODE" or similar) is used to cycle through settings, and other buttons (e.g., "SET", "ADJUST") are used to change values.

1. Press and hold the **MODE** button until the time display begins to flash.
2. Press the **SET** button to advance the flashing digit (hours, minutes, year, month, day).
3. Use the **ADJUST** button to change the value of the flashing digit.
4. Repeat steps 2 and 3 until all desired settings are configured.
5. Press the **MODE** button again to exit the setting mode.

4. OPERATING INSTRUCTIONS

4.1 Displaying Time and Date

The digital module continuously displays the current time. Pressing the **MODE** button may cycle through different display modes, such as time, date, or alarm.

4.2 Time Announcement Feature

To hear the current time announced audibly, press the button located at the front of the watch case. The time will be spoken through the integrated speaker.

4.3 Using the EL Backlight

For improved visibility in low-light conditions, press the **LIGHT** button (or equivalent, typically on the side of the watch) to activate the EL backlight. The backlight will illuminate the display for a few seconds before automatically turning off.

4.4 Setting and Using the Alarm

To set the alarm:

1. Press the **MODE** button repeatedly until the alarm setting screen is displayed.
2. Use the **SET** and **ADJUST** buttons to set the desired alarm time.
3. Press **MODE** to confirm and exit.

To activate/deactivate the alarm, typically a short press of a specific button (e.g. **ALARM ON/OFF**) while in the alarm display mode will toggle its status. When the alarm sounds, press any button to silence it.

5. MAINTENANCE

5.1 Cleaning Your Watch

To maintain the appearance of your NIXON Dork Too, regularly clean the stainless steel case and band. Use a soft, damp cloth to wipe away dirt and smudges. Avoid using harsh chemicals or abrasive materials, as these can damage the finish.

- Wipe the watch with a soft, lint-free cloth.
- For stubborn dirt, slightly dampen the cloth with water.
- Ensure no moisture enters the speaker or button openings.
- Dry thoroughly with a clean, dry cloth.

5.2 Battery Care

To prolong battery life, avoid fully discharging the watch frequently. Charge the watch regularly and store it in a cool, dry place when not in use for extended periods.

6. TROUBLESHOOTING

Problem	Possible Cause	Solution
Watch not turning on/display blank	Low or depleted battery	Charge the watch using the provided USB cable.
Time announcement not working	Button not pressed correctly; low battery	Ensure the front button is pressed firmly. Check battery level and charge if necessary.
Display is dim or flickering	Low battery; environmental factors	Charge the watch. Ensure the watch is not exposed to extreme temperatures.
Buttons unresponsive	Temporary software glitch; moisture ingress	Try restarting the watch (if applicable, by holding a combination of buttons). Ensure the watch is dry.

If you encounter issues not listed here, or if the suggested solutions do not resolve the problem, please contact NIXON customer support.

7. SPECIFICATIONS

Model Name: Dork Too

Case Material: Stainless Steel

Band Material: Stainless Steel

Case Diameter: 34 Millimeters

Case Height: 44.7 mm

Case Width: 34.3 mm

Case Depth: 13 mm

Band Width: 20.9 mm

Clasp Type: Fold-over clasp with double push-button safety (Push Button Deployment Clasp)

Watch Movement Type: Japanese Quartz

Power Source: Battery Powered (Rechargeable via USB)

Embellishment Feature: Crystal (Edge to edge crystal window)

Shape: Rectangular

Age Range Description: Adult

Manufacturer: NIXON

8. WARRANTY AND SUPPORT

For information regarding warranty coverage, product registration, or technical support, please visit the official NIXON website or contact their customer service department. Keep your purchase receipt as proof of purchase for warranty claims.

NIXON Official Website: www.nixon.com

Contact information for support can typically be found on the official website under a "Support" or "Contact Us" section.