

MODONE Mijia Smart APP Control 20L Microwave Oven

Xiaomi Mijia Smart APP Control 20L Microwave Oven User Manual

Model: Mijia Smart APP Control 20L Microwave Oven | Brand: MODONE

1. IMPORTANT SAFETY INSTRUCTIONS

To ensure safe operation and prevent damage, please read all instructions carefully before using this appliance. Keep this manual for future reference.

- Do not attempt to operate this oven with the door open as this can result in harmful exposure to microwave energy.
- Do not place any object between the oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.
- Do not operate the oven if it is damaged. It is particularly important that the oven door closes properly and that there is no damage to the door (bent), hinges and latches (broken or loosened), or door seals and sealing surfaces.
- The oven should not be adjusted or repaired by anyone except properly qualified service personnel.
- Ensure the appliance is properly grounded.
- Do not heat liquids or other foods in sealed containers since they are liable to explode.
- Always use microwave-safe cookware.
- Supervise children closely when the microwave is in use.

2. PRODUCT OVERVIEW

The Xiaomi Mijia Smart APP Control 20L Microwave Oven is designed for efficient and convenient food heating and cooking. It features smart control capabilities via a mobile application and voice commands, a 20-liter capacity, and 700W high-power heating.



Image: Front view of the Xiaomi Mijia Smart APP Control 20L Microwave Oven in white, showcasing its minimalist design on a wooden countertop.

3. PRODUCT FEATURES

- **Remote Intelligent APP Control:** Manage and operate the microwave oven from your smartphone.
- **Xiaoi Voice Control:** Conveniently control the oven using voice commands.
- **Microcrystalline Plate Heating:** Ensures efficient and even heating of ingredients.
- **700W High Power Heating:** Provides rapid heating and uniform firepower for quick cooking.
- **Special Classification Thawing:** Optimized defrosting function to restore ingredients effectively.
- **Versatile Cooking:** Capable of both heating ingredients and cooking various dishes.
- **Enhanced Safety:** Features a 4-layer microwave barrier and 3 kinds of door lock protection switches.
- **Illumination Lamp:** Internal light allows clear visibility of the cavity state during operation.
- **Wide Angle Door Opening:** Facilitates easy placement and removal of food items.

Image: Internal diagram showing how microwave energy is finely tuned within the cavity to heat food efficiently and evenly.

Image: The microwave oven highlighting its built-in WiFi module, enabling smart features like APP and voice control for functions such as child lock.

Image: Illustration of the imported magnetron, a key component ensuring 700W high power for rapid and uniform heating efficiency.

4. SETUP

Follow these steps for initial setup of your microwave oven:

1. **Unpacking:** Carefully remove the microwave oven and all packing materials from the carton. Check for any damage.
2. **Placement:** Place the oven on a flat, stable surface that is strong enough to hold the oven and the food being cooked. Ensure there is adequate ventilation space around the oven (at least 10 cm at the back, 20 cm at the top, and 5 cm on each side).
3. **Power Connection:** Plug the power cord into a standard 220V, 50Hz grounded electrical outlet.
4. **Initial Cleaning:** Before first use, wipe the interior and exterior of the oven with a damp cloth.
5. **App Connection (Optional):** Download the Mijia APP from your device's app store. Follow the in-app instructions to connect your microwave oven for smart control features.

Image: A hand demonstrating the placement of a glass bowl filled with vegetables into the microwave oven, illustrating the ease of access to the cavity.

5. OPERATING INSTRUCTIONS

Basic Operation

1. Place food in a microwave-safe container inside the oven.
2. Close the oven door securely.
3. Use the control knob or buttons on the front panel to set the desired cooking time and power level.

- 4. Press the start button to begin cooking.
- 5. The oven will beep when cooking is complete. Carefully remove the food.

APP Control

The Mijia APP allows for advanced control and monitoring:

- **Remote Start/Stop:** Initiate or pause cooking cycles from your smartphone.
- **Recipe Selection:** Access a variety of pre-programmed recipes and cooking modes.
- **Custom Settings:** Adjust power levels and cooking times precisely.
- **Status Monitoring:** Check the current cooking status and remaining time.
- **Child Lock Activation:** Enable or disable the child lock feature for safety.

Defrosting

The special classification defrosting function helps thaw food evenly:

- 1. Place frozen food in a microwave-safe container.
- 2. Select the defrost function on the control panel or via the APP.
- 3. Enter the weight of the food or select the food type if prompted.
- 4. The oven will automatically calculate the defrosting time.
- 5. Turn or separate food items midway through defrosting for best results.

6. MAINTENANCE AND CLEANING

Regular cleaning and maintenance will prolong the life of your microwave oven.

- **Interior Cleaning:** Wipe the interior cavity, door seals, and door surfaces with a damp cloth after each use. For stubborn stains, use a mild detergent. Do not use abrasive cleaners or scouring pads.
- **Exterior Cleaning:** Clean the exterior surface with a soft, damp cloth. Avoid getting water into the ventilation openings.
- **Turntable Cleaning:** If applicable, remove the turntable and wash it with warm, soapy water. Rinse and dry thoroughly before placing it back in the oven.
- **Odor Removal:** To remove odors, combine a cup of water with a few slices of lemon or a tablespoon of vinegar in a microwave-safe bowl. Heat on high for 2-3 minutes, then let it sit in the oven for 5 minutes before wiping clean.
- **Power Off:** Always unplug the oven before cleaning or performing any maintenance.

7. TROUBLESHOOTING

If you encounter issues with your microwave oven, refer to the table below for common problems and solutions.

Problem	Possible Cause	Solution
Oven does not start	Power cord not plugged in; Door not closed properly; Fuse blown or circuit breaker tripped.	Ensure plug is firmly in outlet; Close door securely; Check household fuse/circuit breaker.
Food not heating	Incorrect cooking time/power level; Microwave-safe cookware not used.	Adjust time/power; Use appropriate cookware.

Problem	Possible Cause	Solution
Unusual noise during operation	Turntable not correctly placed; Food container touching oven walls.	Reposition turntable; Ensure food container is centered.
Oven light not working	Bulb needs replacement.	Contact qualified service personnel for bulb replacement.
APP connection issues	Wi-Fi signal weak; Incorrect network settings; App not updated.	Ensure strong Wi-Fi signal; Reconfigure network settings in app; Update app to latest version.

8. SPECIFICATIONS

Specification	Value
Brand	MODONE
Model	Mijia Smart APP Control 20L Microwave Oven
Capacity	20 litres
Rated Voltage	220V
Rated Frequency	50Hz
Rated Input Power	1150W
Output Power	700W
Frequency	2450MHz
Item Weight	12 kg 200 g
Product Dimensions (LxWxH)	50 x 40 x 36 Centimeters
Color	White
Special Feature	Special Defrost Feature, APP Control, Voice Control
Included Components	1 x Microwave Oven, 1 x User Manual

9. WARRANTY AND SUPPORT

For warranty information and customer support, please refer to the warranty card included with your product or contact the manufacturer's authorized service center. Keep your purchase receipt as proof of purchase for any warranty claims.

For technical assistance or service inquiries, please visit the official MODONE website or contact their customer service hotline.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question