

SanDisk SDSQUAR-064G-2PK


SanDisk 64GB X2 (128GB) MicroSDXC Ultra UHS-I Memory Card User Manual

Model: SDSQUAR-064G-2PK

Brand: SanDisk

1. INTRODUCTION

This manual provides essential information for the proper use, setup, operation, and maintenance of your SanDisk 64GB X2 (128GB) MicroSDXC Ultra UHS-I Memory Cards. These high-capacity memory cards are designed to expand the storage of your compatible electronic devices, enabling you to capture and store more photos, videos, music, and other data.

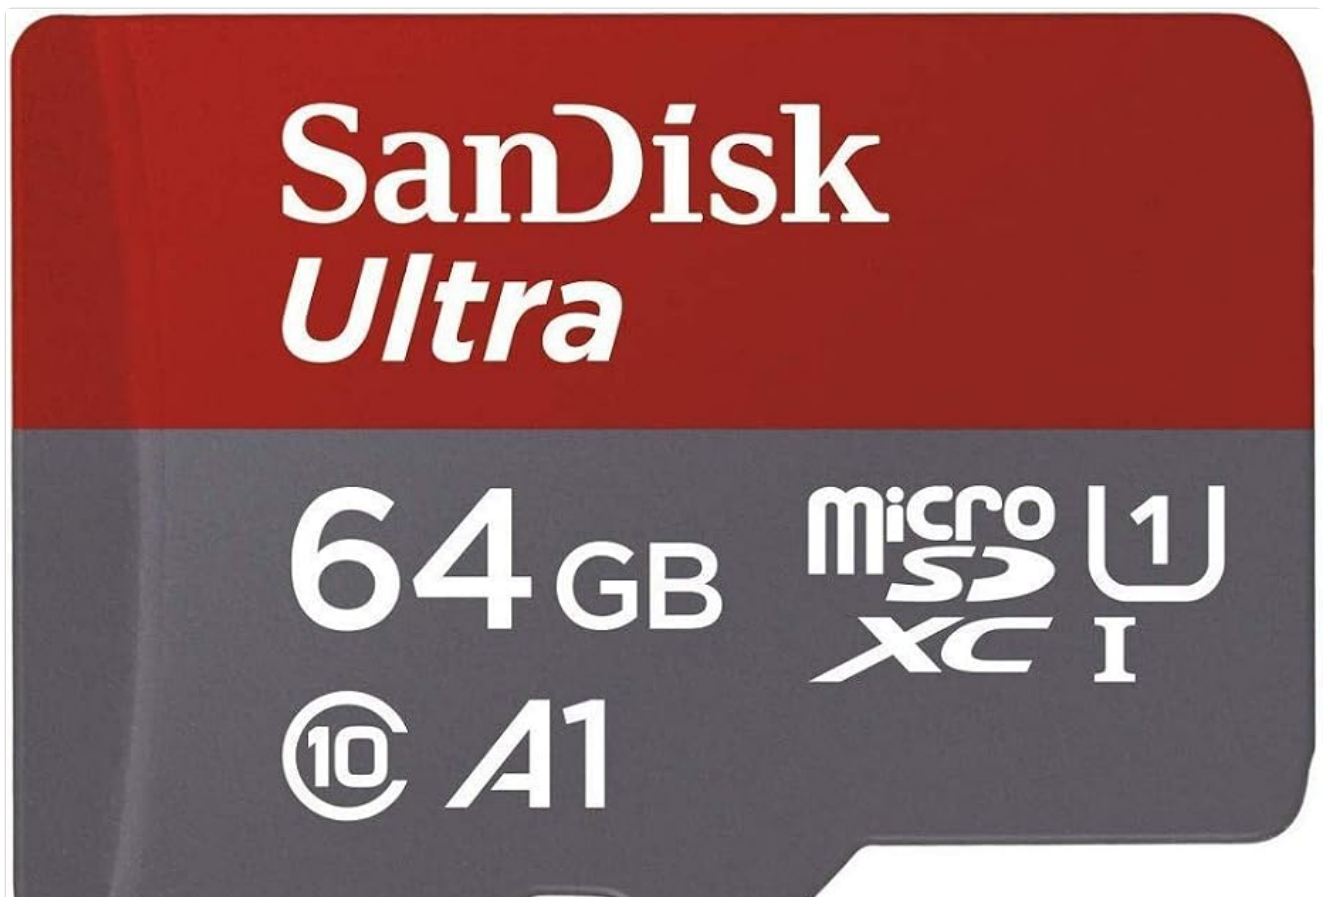



This image displays two SanDisk Ultra 64GB MicroSDXC UHS-I memory cards, each accompanied by a full-size SD adapter. The cards are red and grey, clearly showing the 'SanDisk Ultra' branding, '64GB' capacity, 'microSDXC' type, 'UHS-I' speed class, and 'Class 10' and 'A1' ratings.

2. SETUP

To begin using your SanDisk MicroSDXC Ultra memory card, follow these steps:

1. **Identify Compatible Slot:** Locate the microSD card slot on your device (e.g., smartphone, digital camera, security camera). Refer to your device's user manual for exact location and insertion instructions.
2. **Insert MicroSD Card:** Gently insert the SanDisk MicroSDXC card into the designated slot with the gold contacts facing down or as indicated by your device. Push until it clicks into place. Do not force the card.
3. **Using the SD Adapter:** If your device uses a standard SD card slot, insert the microSD card into the provided SD adapter first. Ensure the microSD card is fully seated in the adapter. Then, insert the adapter into your device's SD card slot.
4. **Formatting (Optional/Recommended):** For optimal performance and compatibility, it is often recommended to format the memory card using your device's internal formatting function. This will erase all data on the card, so ensure any important files are backed up beforehand.

3. OPERATING

Once installed, your SanDisk MicroSDXC Ultra memory card functions as expanded storage for your device. Here are common operations:

- **Storing Photos and Videos:** Set your camera or smartphone to save media directly to the microSD card. The Class 10 speed rating ensures smooth recording of Full HD video and rapid capture of high-resolution photos.
- **Transferring Files:** You can transfer files to and from the card using your device's file management system. For faster transfers to a computer, use a compatible card reader. The card supports read speeds up to 48 MB/s and write speeds between 10-48 MB/s.
- **Music and Apps:** Store large music libraries or install compatible applications directly onto the memory card to free up internal device storage.
- **Safe Removal:** Always safely eject the memory card from your device before physically removing it to prevent data corruption. This option is usually found in your device's settings or notification panel.

4. MAINTENANCE

Proper care will extend the life and reliability of your memory cards:

- **Handle with Care:** Avoid touching the gold contacts on the card. Keep the card clean and free from dust, dirt, and moisture.
- **Temperature and Environment:** Store and use the cards within recommended temperature ranges. Avoid extreme heat, cold, or direct sunlight.
- **Data Backup:** Regularly back up important data from your memory card to a computer or cloud storage to prevent data loss in case of card malfunction or accidental deletion.
- **Avoid Physical Stress:** Do not bend, drop, or apply excessive force to the memory card.

5. TROUBLESHOOTING

If you encounter issues with your SanDisk memory card, consider the following:

- **Card Not Recognized:**
 - Ensure the card is fully and correctly inserted into the device or adapter.
 - Restart your device.
 - Test the card in another compatible device to rule out a device-specific issue.
 - Clean the gold contacts gently with a soft, dry cloth.
- **Slow Performance:**
 - Ensure your device supports the card's speed class (UHS-I, Class 10).
 - The card might be nearly full; free up some space.
 - Reformat the card (after backing up data).
- **Data Corruption:**
 - Always safely eject the card before removal.
 - Avoid removing the card during data transfer or while the device is writing to it.
 - Use reliable data recovery software if data loss occurs (note: success is not guaranteed).

6. SPECIFICATIONS

Feature	Detail
Brand	SanDisk
Model Name	SDSQUAR-064G-2PK
Memory Storage Capacity	64 GB (per card, 128 GB total for 2-pack)
Flash Memory Type	Micro SD, Micro SDXC, SD (with adapter)
Read Speed	Up to 48 Megabytes Per Second
Write Speed	10-48 MB/s
Hardware Interface	microSDXC
Secure Digital Association Speed Class	Class 10, UHS-I, A1
Product Dimensions	2"L x 1"W (approximate for card)
Item Weight	0.02 Kilograms (0.704 ounces)
Compatible Devices	Smartphones, Digital Cameras, Security Cameras, etc.

7. WARRANTY AND SUPPORT

Your SanDisk MicroSDXC Ultra memory cards come with a **Limited Warranty**. For detailed warranty terms, conditions, and to register your product, please visit the official SanDisk website or refer to the warranty information included with your purchase.

For technical support, frequently asked questions, or further assistance, please visit the SanDisk support page online. Keep your proof of purchase for any warranty claims.

© 2025 SanDisk. All rights reserved.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question