

[Manuals.plus](#) /

› [Severin](#) /

› SEVERIN Spuma 700 Milk Frother User Manual

Severin SM 3586

SEVERIN Spuma 700 Milk Frother User Manual

Model: SM 3586 | Brand: Severin

PRODUCT OVERVIEW

The SEVERIN Spuma 700 is a versatile induction milk frother designed to create creamy milk foam for various coffee beverages, hot chocolate, and to heat milk. Its innovative induction process prevents milk from burning, ensuring easy cleaning. The appliance features an "Easy-Select" rotary dial for precise temperature control and comes with interchangeable accessories for frothing and heating.





Image: The SEVERIN Spuma 700 Milk Frother, showcasing its sleek design with a stainless steel jug and a black base featuring the control dial and an illuminated ring.

KEY FEATURES

- **Innovative Induction Technology:** Prevents milk from burning, ensuring easy cleaning of the jug.
- **Multifunctional Use:** Prepares creamy hot or cold milk foam, heats milk, and makes hot chocolate.
- **Adjustable Temperature:** "Easy-Select" dial allows temperature selection from 45°C to 65°C in 5°C increments, or cold frothing.
- **Generous Capacity:** Froths up to 350 ml of milk foam or heats up to 700 ml of milk (animal or plant-based).
- **Convenient Design:** Fine pouring spout for Latte Art, lid opening for adding ingredients during operation, and automatic shut-off after 2 minutes of inactivity.
- **Easy Maintenance:** The XXL stainless steel jug is dishwasher safe, and the motor base can be cleaned with a damp cloth.
- **Compact Storage:** Power cord can be stored in the base of the appliance.

SEVERIN

**Bec verseur fin pour
créer du Latte Art**

500 W



Réservoir XXL
pour 350 ml
de mousse
ou 700 ml de lait

**Fonction
de sélection facile
des programmes
par bouton rotatif**

Image: A visual breakdown of the Spuma 700's features, including its Latte Art spout, 500W power, large capacity, and user-friendly rotary dial.

SETUP

Before first use, carefully unpack all components and ensure no parts are missing or damaged. Keep packaging materials for future storage or transport.

Unpacking and Initial Cleaning

1. Remove the milk frother and all accessories from the packaging.
2. Wash the stainless steel jug, lid, and both stirring rings (frothing and heating) with warm soapy water. Rinse thoroughly and dry completely. The jug is dishwasher safe.
3. Wipe the motor base with a damp cloth. Do not immerse the motor base in water or any other liquid.
4. Ensure all parts are completely dry before assembly.

Assembly

1. Place the desired stirring ring (frothing or heating) onto the pin at the bottom of the stainless steel jug. Ensure it is securely seated.
2. Place the stainless steel jug onto the motor base. Ensure it is properly aligned and stable.
3. Place the clear lid securely on top of the jug.
4. Unwind the power cord from the storage compartment under the base and plug it into a suitable power outlet (230V).



Image: The Spuma 700 components laid out, including the base, jug, lid, and the two different stirring attachments for frothing and heating.

OPERATING INSTRUCTIONS

The SEVERIN Spuma 700 offers various functions for preparing milk-based beverages. Always ensure the jug is clean and dry before adding ingredients.

Frothing Milk (Hot or Cold)

1. Insert the **serrated stirring ring** into the jug.
2. Pour milk (animal or plant-based) into the jug. Do not exceed the maximum fill line for frothing (approx. 350 ml).
3. Place the lid on the jug.
4. Turn the "Easy-Select" rotary dial to your desired temperature (45°C, 50°C, 55°C, 60°C, 65°C) for hot foam, or select the cold setting for cold foam. The LED ring will illuminate red for hot programs and blue for cold.
5. Press the power button in the center of the dial to start the frothing process.
6. The appliance will automatically stop when the program is complete. Carefully remove the jug and pour the frothed

milk.

Heating Milk (without frothing)

1. Insert the **smooth stirring ring** into the jug.
2. Pour milk into the jug. Do not exceed the maximum fill line for heating (approx. 700 ml).
3. Place the lid on the jug.
4. Turn the "Easy-Select" rotary dial to your desired heating temperature (45°C, 50°C, 55°C, 60°C, 65°C). The LED ring will illuminate red.
5. Press the power button to start.
6. The appliance will automatically stop when the milk reaches the selected temperature.

Making Hot Chocolate

1. Insert the **smooth stirring ring** into the jug.
2. Pour milk into the jug (up to 700 ml).
3. Add chocolate powder, flakes, or small pieces of chocolate through the opening in the lid during the heating process.
4. Select your desired temperature using the "Easy-Select" dial.
5. Press the power button to start. The stirring ring will continuously mix the chocolate into the milk.
6. The appliance will stop automatically when ready.



Image: The Spuma 700 in action, showing the swirling motion of milk as it is frothed, ready for your favorite beverage.

MAINTENANCE AND CLEANING

Regular cleaning ensures optimal performance and extends the lifespan of your SEVERIN Spuma 700 Milk Frother. Always unplug the appliance from the power outlet before cleaning.

Cleaning the Stainless Steel Jug and Accessories

- Remove the stainless steel jug from the motor base.
- Remove the stirring ring and the lid.
- Wash the jug, lid, and stirring rings with warm soapy water immediately after use to prevent milk residue from drying.
- The stainless steel jug and stirring rings are dishwasher safe. The lid can also be washed in the dishwasher.
- For stubborn residue, soak the jug in warm soapy water for a few minutes before cleaning. Use a soft sponge or brush.
- Rinse all parts thoroughly and dry completely before reassembly or storage.

Cleaning the Motor Base

- Ensure the motor base is unplugged and cool.
- Wipe the exterior of the motor base with a soft, damp cloth.
- Do not use abrasive cleaners, scouring pads, or harsh chemicals, as these can damage the surface.
- Never immerse the motor base in water or any other liquid.
- Ensure the base is completely dry before plugging it back in or storing.

TROUBLESHOOTING

If you encounter issues with your SEVERIN Spuma 700 Milk Frother, please consult the following table before contacting customer support.

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in; power outlet faulty; appliance not properly assembled.	Check power cord connection; test outlet with another device; ensure jug is correctly seated on the base.
Milk is not frothing properly.	Incorrect stirring ring used; milk type or temperature unsuitable; too much or too little milk.	Ensure the serrated stirring ring is used for frothing. Use cold, fresh milk (dairy or suitable plant-based). Do not exceed the max fill line for frothing.
Milk burns or sticks to the bottom.	Incorrect stirring ring used for heating; jug not clean.	Ensure the smooth stirring ring is used for heating. Clean the jug thoroughly after each use. The induction technology is designed to prevent burning, but residue can still occur if not cleaned.
Appliance stops prematurely.	Overheating protection activated; automatic shut-off.	Allow the appliance to cool down. The unit has an automatic shut-off after 2 minutes of inactivity or when the program is complete.
Lid deteriorating (as per review).	Wear and tear; possible issue with dishwasher cleaning over time.	While the lid is stated as dishwasher safe, consider hand-washing the lid to prolong its lifespan if deterioration occurs. Ensure proper placement in the dishwasher to avoid excessive heat or pressure.

TECHNICAL SPECIFICATIONS

Brand	Severin
Model Number	SM 3586
Color	Stainless steel brushed / Matte black
Dimensions (L x W x H)	19.5 x 15.5 x 25 cm (7.68 x 6.1 x 9.84 inches)
Weight	1.61 kg (3.55 lbs)
Capacity	700 ml (max for heating), 350 ml (max for frothing)
Power	500 Watts
Voltage	230 Volts
Material	Stainless steel
Special Features	Individually adjustable temperature levels (45°C to 65°C), XXL capacity, induction technology.
Recommended Use	Commercial, Domestic
Care Instructions	Dishwasher safe (jug), wipe clean (motor base)

WARRANTY AND SUPPORT

SEVERIN products are manufactured to high quality standards and are designed for durability and ease of use. This product comes with a standard manufacturer's warranty, details of which can typically be found on the product packaging or the official SEVERIN website.

For technical support, warranty claims, or spare parts inquiries, please contact SEVERIN customer service through their official website or the retailer from whom you purchased the product. Please have your model number (SM 3586) and proof of purchase ready when contacting support.

You can visit the official Severin brand store for more information:[Severin Brand Store](#)

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question