

## xingzhihua RM-L1185

# xingzhihua RM-L1185 Remote Control User Manual

For Sony KDL-32R420A, KDL-40R470A, KDL-46R470 Televisions

## 1. INTRODUCTION

---

This manual provides essential information for the proper use and maintenance of your xingzhihua RM-L1185 replacement remote control. This remote is specifically designed to be compatible with various Sony TV models, including KDL-32R420A, KDL-40R470A, and KDL-46R470. It offers a convenient solution for replacing a lost or broken original remote.

Please read this manual thoroughly before operating the remote control to ensure optimal performance and longevity.

## 2. SETUP AND BATTERY INSTALLATION

---

The RM-L1185 remote control is pre-programmed and does not require any complex setup or pairing procedures. Simply insert the batteries, and it will be ready for use with your compatible Sony TV.

### 2.1 Battery Installation

1. Locate the battery compartment on the back of the remote control.
2. Slide the battery compartment cover downwards or in the direction indicated by the arrow to open it.
3. Insert two (2) AAA batteries (not included) into the compartment. Ensure the positive (+) and negative (-) terminals of the batteries align correctly with the markings inside the compartment. Incorrect battery orientation can prevent the remote from functioning.
4. Slide the battery compartment cover back into place until it clicks securely.

*Note: Always use new batteries and replace both batteries at the same time. Do not mix old and new batteries or different types of batteries.*



Figure 1: Back view of the RM-L1185 remote control, illustrating the battery compartment location.

### 3. OPERATING THE REMOTE CONTROL

---

Once batteries are installed, point the remote control directly at your Sony TV's infrared receiver. The remote provides standard functions for TV operation.

#### 3.1 Common Button Functions

- **POWER:** Turns the TV on or off.
- **CH +/-:** Changes channels up or down.
- **VOL +/-:** Adjusts the volume level.
- **MUTE:** Mutes or unmutes the TV sound.
- **INPUT/SOURCE:** Selects the input source (e.g., HDMI, AV).
- **MENU:** Accesses the TV's main menu.
- **NAVIGATION (Arrow buttons):** Moves the cursor within menus.
- **ENTER/OK:** Confirms a selection.
- **BACK/EXIT:** Returns to the previous screen or exits a menu.
- **NUMBER BUTTONS (0-9):** Directly enters channel numbers.



Figure 2: Front view of the RM-L1185 remote control, displaying the button layout.

## 4. MAINTENANCE

---

Proper care will extend the life of your remote control.

### 4.1 Cleaning

- Wipe the remote control with a soft, dry cloth.
- For stubborn dirt, slightly dampen the cloth with water or a mild cleaning solution, then wipe dry immediately.
- Do not use abrasive cleaners, alcohol, or solvents, as these can damage the remote's surface or internal components.

### 4.2 Battery Replacement

Replace batteries when the remote's response becomes sluggish or it stops working. Always replace both batteries simultaneously with new ones of the same type (AAA).

### 4.3 Storage

If the remote control will not be used for an extended period, remove the batteries to prevent leakage, which can damage the device.

## 5. TROUBLESHOOTING

---

If you encounter issues with your remote control, try the following solutions:

- **Remote not responding:**
  - Check if the batteries are inserted correctly with the correct polarity (+/-).
  - Replace the batteries with new ones.
  - Ensure there is a clear line of sight between the remote control and the TV's infrared receiver. Obstructions can block the signal.
  - Make sure you are within the effective operating range (typically up to 20 feet or 6 meters).

- **Specific buttons not working:**

- Clean the remote control, especially around the unresponsive buttons, to remove any dirt or debris that might be interfering with the contacts.
- If only certain buttons are affected after trying new batteries, the remote might be faulty.

- **TV not responding to any remote:**

- Ensure the TV is powered on and not in standby mode.
- Try using the physical buttons on the TV itself to confirm the TV is functioning correctly.
- Unplug the TV from the power outlet for a few minutes, then plug it back in to reset it.

*If these steps do not resolve the issue, please refer to the Warranty & Support section.*

## 6. SPECIFICATIONS

---

<b>Model Number</b>	RM-L1185
<b>Brand</b>	xingzhihua
<b>Compatible Devices</b>	Sony KDL-32R420A, KDL-40R470A, KDL-46R470 Televisions
<b>Power Source</b>	2 x AAA Batteries (not included)
<b>Color</b>	Black
<b>Special Feature</b>	Pre-programmed, no setup required

## 7. WARRANTY AND SUPPORT

---

For warranty information or technical support regarding your xingzhihua RM-L1185 remote control, please contact the seller or retailer from whom you purchased the product. They can provide details on return policies, warranty coverage, and assistance with product-specific issues.

Please retain your proof of purchase for any warranty claims.