

## Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

> [DEZIN](#) /

> [DEZIN Hot Pot Electric Upgraded \(Model DZ150\) - Instruction Manual](#)

## DEZIN DZ150

# DEZIN Hot Pot Electric Upgraded (Model DZ150) - Instruction Manual

Brand: DEZIN | Model: DZ150

## INTRODUCTION

This manual provides essential instructions for the safe and efficient operation of your DEZIN Hot Pot Electric Upgraded. Please read this manual thoroughly before first use and retain it for future reference. This versatile 1.5L electric pot is designed for various cooking tasks, including sautéing, boiling, and simmering, making it ideal for small kitchens, dorms, or travel.

## IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock, and injury to persons, including the following:

- Read all instructions carefully before use.
- Do not touch hot surfaces. Use handles or knobs.
- To protect against electrical shock, do not immerse cord, plugs, or the appliance in water or other liquid.
- Close supervision is necessary when any appliance is used by or near children.
- Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
- Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner.
- The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
- Do not use outdoors.
- Do not let cord hang over edge of table or counter, or touch hot surfaces.
- Do not place on or near a hot gas or electric burner, or in a heated oven.
- Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
- Always attach plug to appliance first, then plug cord into the wall outlet. To disconnect, turn any control to "off", then remove plug from wall outlet.
- Do not use appliance for other than intended use.
- This appliance is equipped with overheating protection and boil-dry protection for enhanced safety.

**WARNING:** The pot lid is made of glass. Handle with care to prevent breakage. Do not use if cracked or damaged.

## PRODUCT OVERVIEW

The DEZIN Hot Pot Electric Upgraded is designed for convenience and versatility. Familiarize yourself with its components:

- **Tempered Glass Lid:** Allows you to monitor cooking progress.
- **Non-Stick Coating:** Food-grade interior for easy cooking and cleaning.
- **Power Adjustable Switch:** Control cooking power (250W for low heat, 600W for high heat).
- **Ergonomic Handle:** Designed for comfortable and safe handling.
- **Detachable Power Cord:** For easy storage and portability.



Image: Exploded view illustrating the main components: Tempered Glass Lid, Non-stick Coating, and Power Adjustable Switch.

# Thoughtful Design



**BPA-free Non-stick Coating**



**Visible Glass Lid**



**Ergonomic Handle**



**Detachable Power Cord**

*Image: Detailed view of the hot pot's design features, including the BPA-free non-stick coating, visible glass lid, ergonomic handle, and detachable power cord.*

Your browser does not support the video tag.

*Video: Official product overview demonstrating the features and components of the DEZIN Hot Pot Electric.*

## SETUP AND FIRST USE

1. **Unpack:** Carefully remove all packaging materials and inspect the hot pot for any damage.
2. **Clean:** Before first use, wash the interior of the pot and the glass lid with warm, soapy water. Rinse thoroughly and dry completely. Do not immerse the main body of the hot pot in water.
3. **Placement:** Place the hot pot on a stable, heat-resistant, and dry surface. Ensure there is adequate ventilation around the appliance.
4. **Connect Power:** Insert the detachable power cord securely into the appliance's power inlet, then plug the other end into a standard 110V electrical outlet.

## OPERATING INSTRUCTIONS

The DEZIN Hot Pot Electric features a simple power adjustment dial for various cooking needs.

### Power Adjustment

- **OFF:** Turns the appliance off.
- **250W (Low Heat):** Ideal for simmering, keeping food warm, or gentle cooking like eggs and pancakes.
- **600W (High Heat):** Suitable for rapid boiling, sautéing, frying, and cooking dishes like steak or noodles.



Image: The power adjustment dial with settings for 250W (low heat) and 600W (high heat), indicating suitable dishes for each.

### General Cooking Steps

1. Add desired ingredients to the non-stick pot.
2. Place the glass lid on the pot if required for your recipe.
3. Turn the power adjustment dial to the desired setting (250W or 600W). The indicator light will illuminate.
4. Monitor your food as it cooks. Adjust the power setting as needed.

5. Once cooking is complete, turn the dial to "OFF" and unplug the appliance from the wall outlet.
6. Allow the hot pot to cool down before cleaning.

## Examples of Use

- **Sautéing:** Use the 600W setting to sauté vegetables, steak, or chicken. The non-stick surface requires minimal oil.
- **Boiling Noodles/Ramen:** Add water and noodles, set to 600W for rapid boiling. Reduce to 250W to simmer.
- **Cooking Eggs:** Use 250W for gentle cooking of eggs.
- **Soups/Oatmeal:** Prepare and simmer soups or oatmeal using the 250W setting.



Image: The hot pot in use for frying, highlighting its overheating and dry-boil protection features.

# FILL YOUR LIFE WITH YUMMY



Image: The hot pot prepared with ingredients for a meal, showcasing its versatility for different dishes.

## MAINTENANCE AND CLEANING

Proper cleaning ensures the longevity and performance of your DEZIN Hot Pot Electric.

1. **Unplug and Cool:** Always unplug the appliance and allow it to cool completely before cleaning.
2. **Interior Cleaning:** The non-stick interior can be easily wiped clean with a soft sponge or cloth and warm, soapy water. For stubborn food residue, soak the pot for a few minutes before cleaning.
3. **Exterior Cleaning:** Wipe the exterior of the pot with a damp cloth. Do not immerse the entire appliance in water or any other liquid.
4. **Lid Cleaning:** The glass lid can be washed with warm, soapy water and rinsed thoroughly.
5. **Drying:** Ensure all parts are completely dry before storing or next use.

**Note:** The DEZIN Hot Pot Electric is **NOT dishwasher safe**.

# HEALTHY NONSTICK

## Easy to Clean & Toxin-Free



Image: Demonstrating the easy cleaning process of the non-stick interior.

## TROUBLESHOOTING

Problem	Possible Cause	Solution
Appliance does not turn on.	Not plugged in, power outlet malfunction, or power cord not properly connected.	Ensure the power cord is securely plugged into both the appliance and a working wall outlet. Check the power outlet with another device.
Food is not heating or cooking slowly.	Incorrect power setting, insufficient liquid, or lid not properly sealed.	Ensure the dial is set to the appropriate power (600W for faster heating). Add sufficient liquid if boiling. Ensure the lid is properly placed.
Overheating or boil-dry protection activated.	Lack of liquid in the pot.	The appliance automatically shuts off to prevent damage. Add liquid and allow the unit to cool before restarting.

Problem	Possible Cause	Solution
Non-stick coating peeling.	Use of metal utensils or abrasive cleaning.	Always use silicone, wooden, or plastic utensils. Clean with a soft sponge. If peeling is significant, discontinue use and contact customer support.

## SPECIFICATIONS

---

- **Brand:** DEZIN
- **Model:** DZ150
- **Capacity:** 1.5 Liters
- **Material:** Non-Stick
- **Color:** Beige
- **Product Dimensions:** 4.01"D x 13.97"W x 7.27"H
- **Wattage:** 600 watts (Max)
- **Voltage:** 110 Volts
- **Item Weight:** 2.99 Pounds
- **Control Method:** Touch (Dial)
- **Operation Mode:** Automatic
- **Is Dishwasher Safe:** No
- **Special Feature:** Portable, Over-heating Protection, Boil Dry Protection

# 1.5L CAPACITY



Image: Illustrates the 1.5L capacity and key dimensions of the hot pot.

## WARRANTY AND SUPPORT

For warranty information or customer support, please refer to the product packaging or contact DEZIN customer service directly. Keep your purchase receipt as proof of purchase.

For additional information and products, visit the official DEZIN store: [DEZIN Store on Amazon](#).