



[Manuals.plus](#) /

> [Midea](#) /

> Midea MFCD11P2NBBW 11 Cu. Ft. Chest Freezer Instruction Manual

Midea MFCD11P2NBBW

Midea MFCD11P2NBBW 11 Cu. Ft. Chest Freezer Instruction Manual

Model: MFCD11P2NBBW

1. INTRODUCTION

This manual provides essential information for the safe and efficient operation of your Midea MFCD11P2NBBW 11 Cu. Ft. Chest Freezer. Please read these instructions thoroughly before installation and use, and retain them for future reference. This appliance is designed for freezing fresh food and storing frozen food.



Image 1.1: Front view of the Midea MFC11P2NBBW 11 Cu. Ft. Chest Freezer.

2. SAFETY INFORMATION

Always follow basic safety precautions when using electrical appliances to reduce the risk of fire, electric shock, and injury. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Ensure the power cord is not damaged. If damaged, it must be replaced by the manufacturer or a qualified service agent.
- Do not store explosive substances such as aerosol cans with a flammable propellant in this appliance.
- Unplug the appliance before cleaning or performing maintenance.
- Keep ventilation openings clear of obstruction.
- Do not use mechanical devices or other means to accelerate the defrosting process, other than those recommended by the manufacturer.
- Do not damage the refrigerant circuit.
- Do not use electrical appliances inside the food storage compartments of the appliance, unless they are of the type recommended by the manufacturer.

3. SETUP

3.1 Unpacking

Carefully remove all packaging materials, including tape and protective films. Dispose of packaging responsibly. Check the appliance for any shipping damage.

3.2 Placement

- Place the freezer on a firm, level surface that can support its weight when fully loaded.
- Allow adequate clearance around the freezer for proper ventilation (at least 10 cm on sides and back, 30 cm above).
- Avoid direct sunlight, heat sources (stoves, heaters), or damp environments.
- Ensure the ambient temperature is within the recommended operating range for the appliance.

3.3 Initial Cleaning

Before first use, clean the interior and exterior of the freezer with a soft cloth and mild detergent. Rinse with clean water and dry thoroughly.

3.4 Power Connection

Plug the freezer into a dedicated, grounded electrical outlet. Do not use extension cords or adapters. Allow the freezer to stand upright for at least 2-4 hours before plugging it in to allow refrigerants to settle.

3.5 Initial Cooling Period

After plugging in, allow the freezer to operate for 2-3 hours empty before loading food. This ensures the interior reaches the desired temperature.

4. OPERATING INSTRUCTIONS

Your Midea chest freezer offers versatile functionality and features for optimal food storage.

The infographic features the Midea logo in the top right corner. The main title is 'Sobre Nosotros'. Below it, a paragraph states: 'Por más de 40 años, Midea ha colaborado para mejorar la calidad de vida de las personas, mediante la experiencia, nuevas tecnologías, y la innovación continua.' To the right of this text is a stylized image of a modern building facade. Below the paragraph, another paragraph reads: 'Midea tiene su sede en el sur de China y hoy en día es el líder fabricante mundial de aire acondicionado y tiene la capacidad de ofrecer el mejor servicio a clientes alrededor del mundo.' To the left of a world map, there are three key statistics: '+\$40,5 B (USD) Ingresos globales anuales', '21 Fábricas de producción', and '+260 Centros logísticos en todo el mundo'. Below these, it says '+190 Países de operación'. The world map is highlighted in blue.

Midea

Sobre Nosotros

Por más de 40 años, Midea ha colaborado para mejorar la calidad de vida de las personas, mediante la experiencia, nuevas tecnologías, y la innovación continua.

Midea tiene su sede en el sur de China y hoy en día es el líder fabricante mundial de aire acondicionado y tiene la capacidad de ofrecer el mejor servicio a clientes alrededor del mundo.

+\$40,5 B (USD)
Ingresos globales anuales

21
Fábricas de producción

+260
Centros logísticos en todo el mundo

+190
Países de operación

Image 4.1: Key features including LED lighting, organizing basket, and security lock.

4.1 Temperature Control

The freezer features an adjustable temperature control dial. Turn the dial to select the desired temperature setting. Settings range from refrigeration (higher numbers, less cold) to deep freezing (lower numbers, colder). The 'SUPER' setting provides rapid freezing for newly added items.

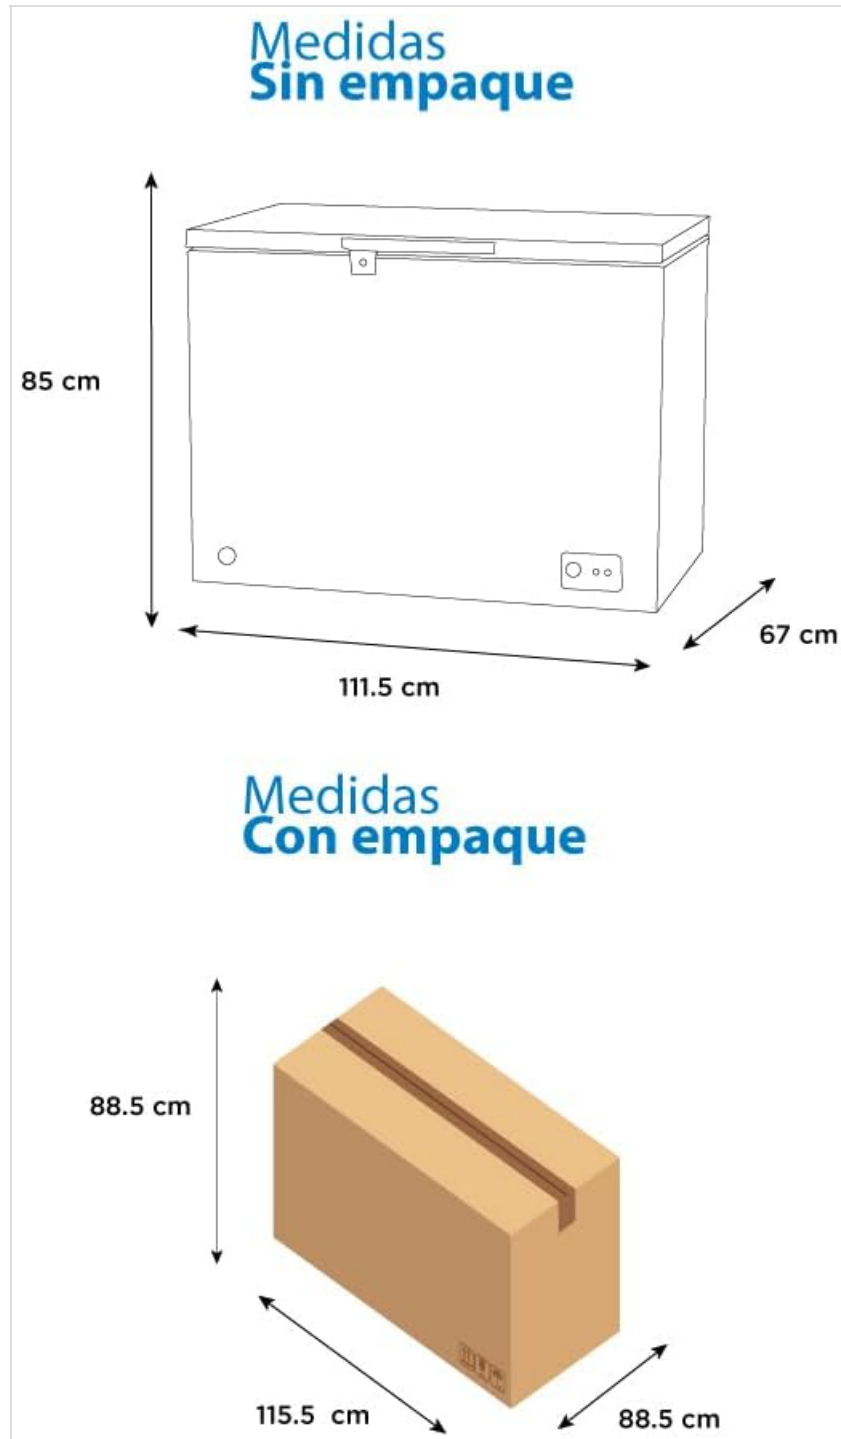


Image 4.2: Temperature control dial and indicator lights.

4.2 Dual Function: Refrigerate and Freeze

This appliance offers a dual function, allowing it to operate as either a refrigerator or a freezer. Adjust the temperature control dial to switch between modes. For refrigeration, select a higher temperature setting (e.g., 10°C for fruits and vegetables). For freezing, select a lower temperature setting (e.g., -24°C for frozen foods).

4.3 LED Lighting

The integrated LED lighting illuminates the interior, making it easier to locate items and saving energy

compared to traditional bulbs.



Puerta con llave de seguridad

Mantén a tu familia y hogar seguros gracias a la puerta con llave de seguridad. Puedes proteger a tus hijos de posibles accidentes y disfrutar de la tranquilidad de saber que tus alimentos están seguros.

Image 4.3: Interior view showing LED illumination.

4.4 Security Lock

The integrated handle includes a security lock to prevent unauthorized access, ensuring the safety of your stored items and preventing accidental opening.



Triple Cooling System

Mantén tus alimentos frescos por más tiempo: Con nuestro control ajustable, puedes elegir la temperatura perfecta para tus alimentos, desde 10°C para frutas y verduras, hasta -24°C para congelar tus alimentos favoritos.

Image 4.4: Close-up of the integrated handle with security lock.

4.5 XTREME SAVE Energy Efficiency

This freezer features XTREME SAVE technology, designed to provide up to 38.6% energy savings, contributing to lower electricity consumption.

5. MAINTENANCE

5.1 Cleaning

- **Exterior:** Clean the exterior surfaces with a soft cloth and mild detergent. Avoid abrasive cleaners or solvents.
- **Interior:** Clean the interior regularly to prevent odors. Use a solution of baking soda and warm water (1 tablespoon baking soda to 1 liter of water). Wipe dry thoroughly.
- **Door Gasket:** Clean the door gasket regularly to ensure a proper seal.

5.2 Defrosting

Defrost the freezer when the frost layer reaches approximately 0.5 cm (1/4 inch) thick. To defrost:

1. Unplug the freezer from the power outlet.
2. Remove all food items and store them in another freezer or cooler.
3. Open the drain plug (if available) and place a shallow pan or towel to collect water.

4. Leave the lid open to allow frost to melt naturally. Do not use sharp objects or heating devices to speed up defrosting.
5. Once defrosted, clean and dry the interior thoroughly.
6. Plug the freezer back in and allow it to cool for 2-3 hours before returning food.

5.3 Power Outage

In case of a power outage, keep the freezer lid closed to maintain the internal temperature for as long as possible. Avoid opening the lid unnecessarily.

6. TROUBLESHOOTING

Before contacting service, check the following common issues and solutions:

Problem	Possible Cause	Solution
Freezer does not operate	No power supply; Power cord unplugged; Circuit breaker tripped.	Check power outlet; Ensure cord is securely plugged in; Reset circuit breaker.
Temperature is not cold enough	Temperature control set too high; Door opened too frequently; Too much warm food added; Poor ventilation.	Adjust temperature control to a colder setting; Minimize door openings; Allow warm food to cool before placing in freezer; Ensure adequate clearance around freezer.
Excessive frost buildup	Door not sealed properly; High humidity; Frequent door openings.	Check and clean door gasket; Reduce frequency of door openings; Defrost as needed.
Unusual noises	Freezer not level; Objects vibrating against the unit; Normal operating sounds.	Ensure freezer is level; Remove any objects touching the unit; Gurgling or humming sounds are normal.

7. SPECIFICATIONS

Below are the technical specifications for the Midea MFCD11P2NBBW 11 Cu. Ft. Chest Freezer:

- **Model:** MFCD11P2NBBW
- **Brand:** Midea
- **Capacity:** 11 Cubic Feet
- **Color:** White
- **Installation Method:** Freestanding
- **Door Orientation:** Top
- **Voltage:** 240V
- **Product Weight:** 20 Kilograms
- **Included Items:** 1 unit

7.1 Dimensions



Luz LED

Gracias a la iluminación LED te ayudarán a ahorrar tiempo y energía, y te permitirán encontrar tus alimentos fácilmente.

Image 7.1: Diagram showing unpacked and packed dimensions.

- **Unpacked Dimensions (Depth x Width x Height):** 67 cm x 111.5 cm x 85 cm
- **Packed Dimensions (Approximate):** 88.5 cm (Height) x 115.5 cm (Width) x 88.5 cm (Depth)

8. WARRANTY AND SUPPORT

Please note that the product specifications indicate "No warranty" directly from the manufacturer. However, extended protection plans may be available for purchase separately.

8.1 Satisfaction Guarantee

Midea offers a satisfaction guarantee program. If you are not satisfied with the performance of your Midea product, registered in a timely manner, you may contact customer service within a maximum period of 60 days after the product is delivered to your home to request an exchange.



Image 8.1: Scan the QR code to consult the terms and conditions of the Midea Satisfaction Guarantee.

8.2 Customer Service

For further assistance, support, or to inquire about the satisfaction guarantee program, please refer to the contact information provided with your purchase documentation or visit the official Midea website.