

Manuals+

[Q & A](#) | [Deep Search](#) | [Upload](#)

manuals.plus /

› [Monzana](#) /

› [Monzana LED Desk Lamp with Alarm Clock, Temperature & Time Display, Calendar, Dimmable](#)

Monzana 107702

Monzana LED Desk Lamp Instruction Manual

Model: 107702

1. INTRODUCTION

Thank you for choosing the Monzana LED Desk Lamp. This versatile lamp is designed to provide optimal lighting for various activities while offering convenient features such as an alarm clock, temperature display, and calendar. Please read this manual carefully before use to ensure proper operation and maintenance.

Key Features:

- **Multifunctional Display:** Integrated display shows time, calendar, alarm, and temperature.
- **Dimmable Lighting:** 3-stage dimmer (30%, 70%, 100% brightness) for adjustable illumination.
- **Flexible Neck:** Easily adjust the lamp head to direct light precisely where needed.
- **Energy-Saving LED Technology:** Efficient 5-watt LED light source.
- **Stable Design:** Rubber-coated base with a leather look ensures non-slip placement and protects surfaces.

2. SAFETY INSTRUCTIONS

Please observe the following safety guidelines to prevent injury or damage to the product:

- **Indoor Use Only:** This product is intended for indoor use exclusively.
- **Choking Hazard:** Keep small parts and packaging materials away from children to prevent accidental ingestion.
- **Power Source:** Use only the provided power adapter or one with identical specifications.
- **Avoid Water:** Do not expose the lamp to water or high humidity.
- **Stable Placement:** Always place the lamp on a stable, flat surface to prevent it from tipping over.
- **Cleaning:** Disconnect from power before cleaning. Use a soft, dry cloth.

3. PACKAGE CONTENTS

Ensure all items are present in the package:

- Monzana LED Desk Lamp (Model 107702)
- Power Adapter
- User Manual

4. PRODUCT OVERVIEW

Familiarize yourself with the components and features of your Monzana LED Desk Lamp.



Figure 1: Overview of lamp features including light, clock, calendar, alarm, and thermometer icons.

LED Tischlampe

3 Helligkeitsstufen



Figure 2: Detailed view of the multifunctional display, indicating temperature, time, day, and date.

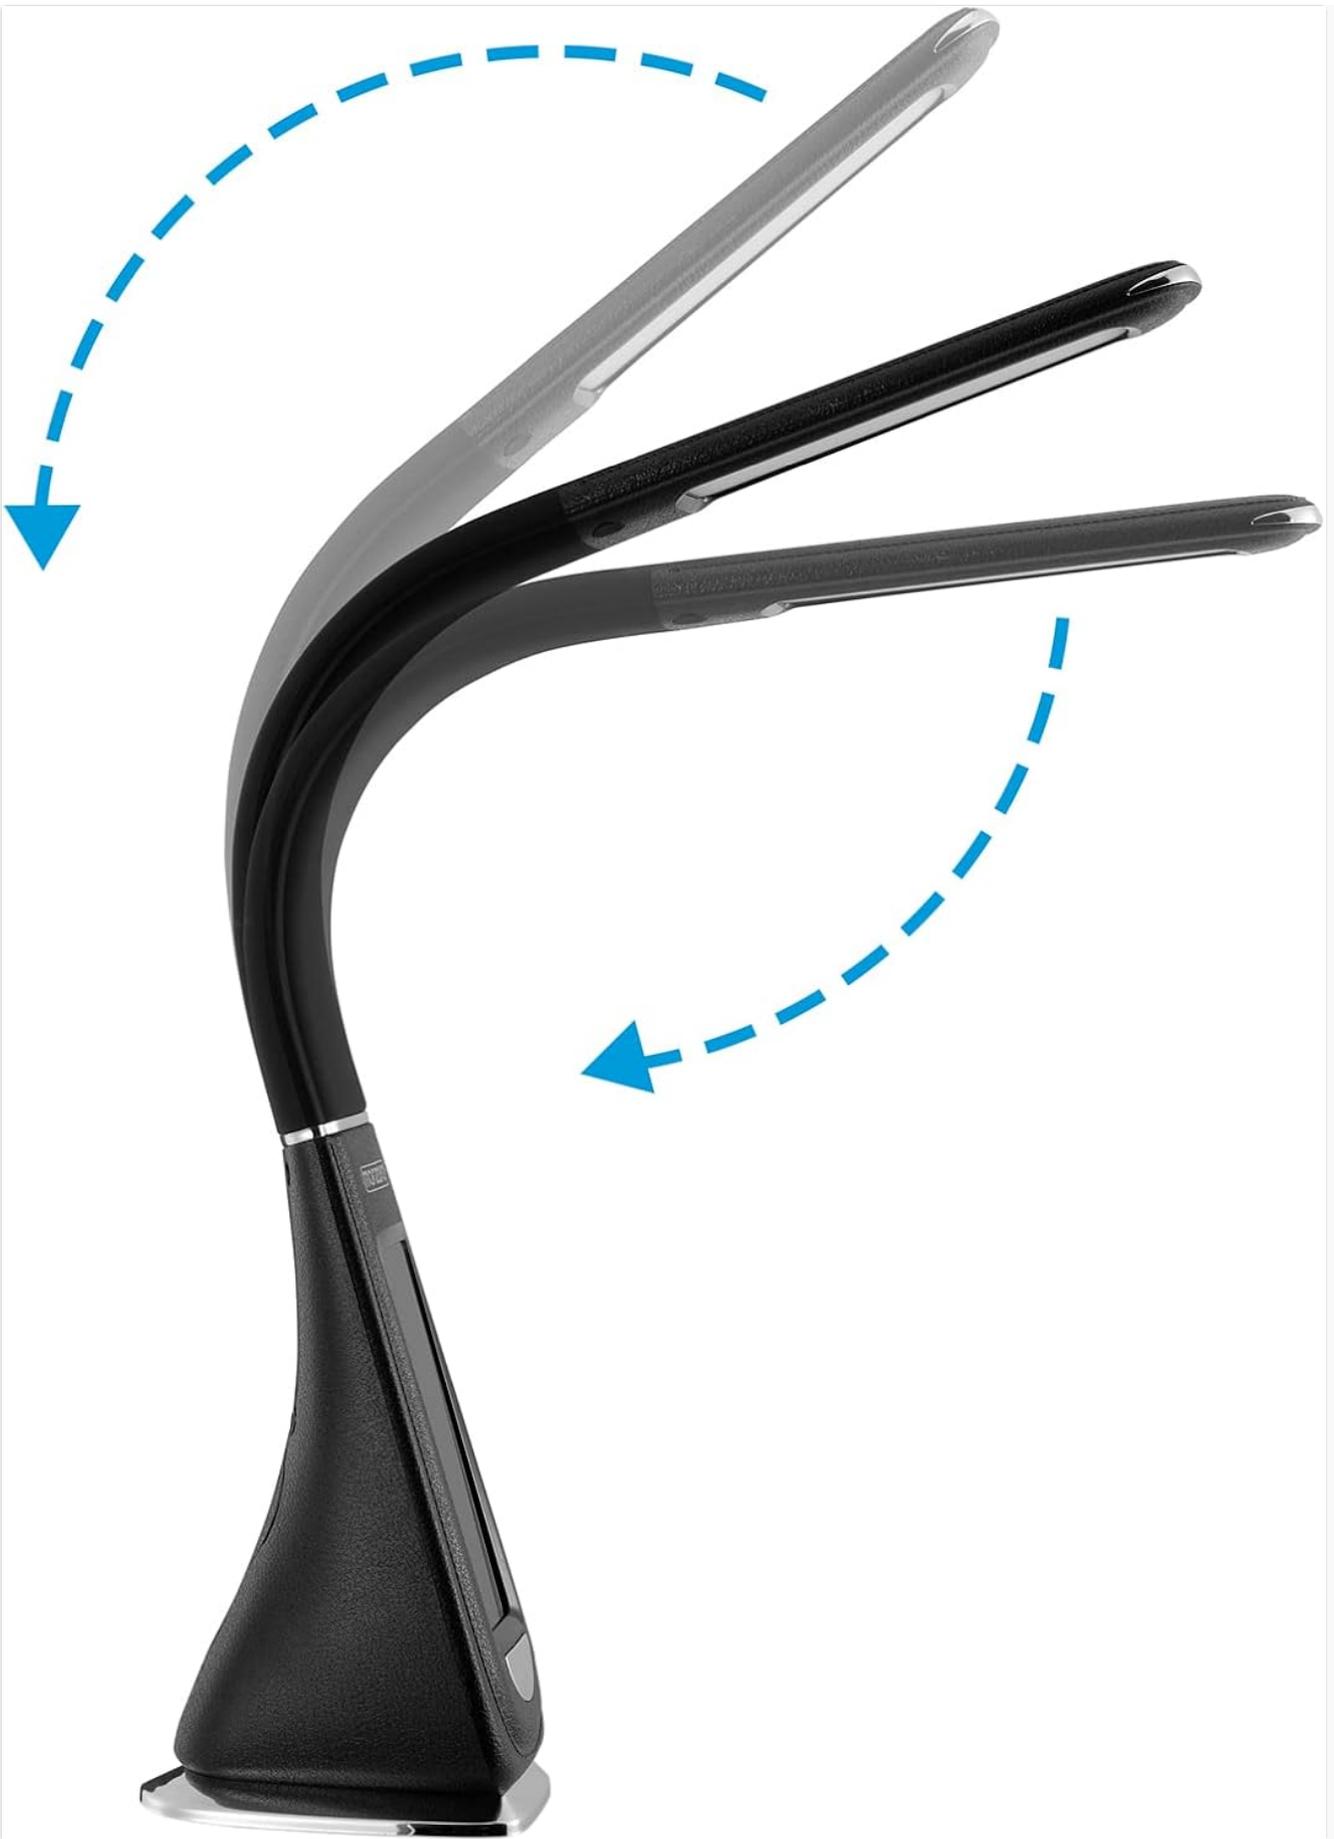


Figure 3: The flexible neck allows for multi-angle adjustment of the lamp head.

Components:

1. **LED Light Panel:** Provides illumination.

2. **Flexible Neck:** Allows for angle adjustment.
3. **Multifunctional Display:** Shows time, date, temperature, and alarm status.
4. **Touch Control Panel:** For power, brightness, and display settings.
5. **Power Port:** For connecting the power adapter.
6. **USB Charging Port:** For charging external devices.
7. **Stable Base:** Ensures stability and features a leather-look finish.

5. SETUP

Follow these steps to set up your Monzana LED Desk Lamp:

1. **Unpack:** Carefully remove all components from the packaging.
2. **Position:** Place the lamp on a stable, flat, and dry surface.
3. **Connect Power:** Insert the power adapter into the power port on the back of the lamp base, then plug the adapter into a suitable wall outlet.
4. **Initial Power On:** The lamp's display should light up, indicating it is ready for use.

6. OPERATING INSTRUCTIONS

6.1 Power On/Off and Brightness Adjustment



Figure 4: The lamp offers three distinct brightness levels for various tasks.

- **Power Button:** Touch the power symbol on the base to turn the lamp on or off.
- **Brightness Levels:** With the lamp on, repeatedly touch the brightness control symbol to cycle through the 3 brightness levels (30%, 70%, 100%).

6.2 Adjusting the Flexible Neck

The lamp features a flexible neck that allows you to adjust the angle of the light panel. Gently bend the neck to position the light as desired for reading, working, or other activities.

6.3 Setting Time, Date, Alarm, and Temperature Display

The multifunctional display shows time, date, temperature, and alarm settings. Specific buttons on the control panel are used for adjustment:

- **Mode Button (M):** Short press to cycle through display modes (e.g., time, date). Long press to enter setting mode for time and date.
- **Up/Down Buttons:** Use these buttons (if present, typically indicated by arrows or +/-) to adjust values when in setting mode.

- **Alarm Setting:** Look for an alarm clock icon on the control panel. Press and hold to set the alarm time.
- **Temperature Display:** The temperature is usually displayed automatically. No manual setting is required.

6.4 USB Charging

The lamp is equipped with a USB charging port to conveniently charge your electronic devices.

- Connect your device's USB charging cable to the USB port on the lamp base.
- Ensure the lamp is powered on for the USB charging port to function.

7. MAINTENANCE

To ensure the longevity and optimal performance of your Monzana LED Desk Lamp, follow these maintenance guidelines:

- **Cleaning:** Always unplug the lamp before cleaning. Use a soft, dry, lint-free cloth to wipe the surfaces. Do not use abrasive cleaners, solvents, or harsh chemicals.
- **Storage:** If storing the lamp for an extended period, ensure it is clean and dry. Store it in a cool, dry place away from direct sunlight.
- **Avoid Impact:** Protect the lamp from strong impacts or drops, which can damage internal components.

8. TROUBLESHOOTING

If you encounter issues with your Monzana LED Desk Lamp, refer to the following common problems and solutions:

| Problem | Possible Cause | Solution |
|--------------------------------|---|--|
| Lamp does not turn on. | No power supply. | Check if the power adapter is securely plugged into the lamp and the wall outlet. Ensure the outlet is functional. |
| Display is blank or incorrect. | Power interruption or incorrect settings. | Check power connection. Reset time/date settings if necessary (refer to section 6.3). |
| Brightness cannot be adjusted. | Faulty touch control. | Ensure your finger is making proper contact with the touch control. If the issue persists, contact customer support. |
| USB charging not working. | Lamp is off or cable is faulty. | Turn on the lamp. Check if the USB cable is properly connected and not damaged. Try a different USB cable or device. |

If the problem persists after trying these solutions, please contact Monzana customer support.

9. SPECIFICATIONS

Technical details of the Monzana LED Desk Lamp:

| Feature | Detail |
|------------------------|-----------------|
| Model | 107702 |
| Dimensions (L x W x H) | 6.5 x 9 x 50 cm |

| Feature | Detail |
|-------------------|--|
| Weight | 950 g |
| Power Consumption | 5 Watts |
| Light Type | LED |
| Brightness | 260 Lumens |
| Light Color | Neutral White (5000 Kelvin) |
| Dimmer | 3 Levels (30%, 70%, 100%) |
| Material | ABS, Rubber |
| Finish | Leather Look |
| Switch Style | Touch |
| Power Source | Corded |
| Special Features | Dimmable, Alarm Clock, Temperature Display, Calendar |

For more detailed energy information, please refer to the EU energy label:

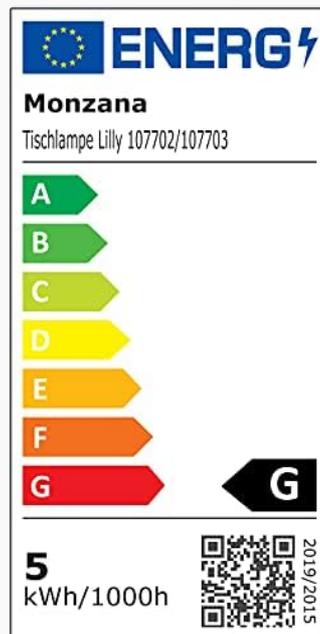


Figure 5: EU Energy Label. Click to view details on EPREL database.

10. WARRANTY AND SUPPORT

Monzana products are designed for quality and reliability. For warranty information or technical support, please refer to the documentation included with your purchase or visit the official Monzana website.

You can also visit the Monzana store on Amazon for more products and information: [Monzana Store](#)

