

Tchibo TCM Cube LED Alarm Clock

Tchibo TCM Cube LED Alarm Clock User Manual

Model: TCM Cube LED Alarm Clock

1. INTRODUCTION

Thank you for choosing the Tchibo TCM Cube LED Alarm Clock. This device combines a stylish wood-look design with practical digital features, including time, date, and indoor temperature display. This manual provides essential information for the safe and efficient use of your alarm clock.

2. SAFETY INFORMATION

- Keep the device away from water and high humidity.
- Do not expose the device to direct sunlight or extreme temperatures.
- Use only the provided USB cable or recommended batteries for power.
- Do not attempt to disassemble or repair the device yourself. Contact qualified personnel for service.
- Keep out of reach of children.

3. PACKAGE CONTENTS

Please check that all items are present and in good condition:

- Tchibo TCM Cube LED Alarm Clock
- USB Power Cable (approx. 1.8 m)
- User Manual (this document)

4. PRODUCT FEATURES

- Elegant wood-look design with digital LED display.
- Displays time, date, and indoor temperature.
- LED lighting with two selectable brightness levels, activated by touch function.
- Alarm function with snooze and repeat.
- Time display in 12-hour or 24-hour format.
- Temperature display in Celsius (°C) or Fahrenheit (°F).

- Power options: USB cable (included) or batteries (not included).
- Compact dimensions: approximately 6.5 x 6.5 x 6.5 cm.

5. SETUP

5.1 Powering the Device

The alarm clock can be powered by the included USB cable or by batteries (not included).

1. **USB Power:** Connect the small end of the USB cable to the power input port on the back of the alarm clock. Connect the larger end to a USB power adapter (e.g., phone charger, computer USB port) or a power bank.
2. **Battery Power:** Open the battery compartment cover on the back of the alarm clock. Insert the required number of batteries (e.g., AAA, check compartment for type) ensuring correct polarity (+/-). Close the cover securely. *Note: Batteries are not included.*



Image 1: Front view of the Tchibo TCM Cube LED Alarm Clock, displaying the time 6:36. The clock features a light wood-look finish with bright digital LED numbers.

5.2 Initial Settings

Upon first power-up, the display will illuminate. You may need to set the current time, date, and preferred temperature unit.

- Refer to the "Operating Instructions" section for detailed steps on setting time, date, and other preferences.

6. OPERATING INSTRUCTIONS

The alarm clock typically has control buttons on the back or bottom. These buttons are usually labeled for easy identification (e.g., SET, UP, DOWN, ALARM).

6.1 Setting Time and Date

1. Press and hold the **SET** button (or similar) to enter time setting mode. The hour digits will typically flash.
2. Use the **UP** and **DOWN** buttons to adjust the hour.
3. Press **SET** again to move to minute setting, then adjust with **UP/DOWN**.
4. Continue pressing **SET** to cycle through date settings (Year, Month, Day) and adjust each with **UP/DOWN**.
5. Press **SET** one last time or wait for a few seconds for the settings to be saved.

6.2 Setting Alarm

1. Press and hold the **ALARM** button (or similar) to enter alarm setting mode. The alarm hour digits will flash.
2. Use the **UP** and **DOWN** buttons to set the desired alarm hour.
3. Press **ALARM** again to move to minute setting, then adjust with **UP/DOWN**.
4. Press **ALARM** again to confirm and activate the alarm. An alarm icon (e.g., bell) will usually appear on the display.
5. To deactivate the alarm, press the **ALARM** button once. The alarm icon should disappear.

6.3 Snooze Function

When the alarm sounds, gently tap the top surface of the alarm clock (touch function) or press the designated **SNOOZE** button. The alarm will pause for a few minutes (typically 5-9 minutes) and then sound again. To turn off the alarm completely, press any other button or let it sound for its full duration.

6.4 Display Modes and Brightness

- **12/24-Hour Format:** In time display mode, press the **UP** button (or similar) to toggle between 12-hour (with AM/PM indicator) and 24-hour formats.
- **Temperature Unit:** In temperature display mode, press the **DOWN** button (or similar) to switch between Celsius (°C) and Fahrenheit (°F).
- **LED Brightness:** The alarm clock features two levels of LED lighting. Gently tap the top surface of the clock to cycle through brightness levels or activate the display if it's in power-saving mode.

7. MAINTENANCE

- **Cleaning:** Wipe the surface of the alarm clock with a soft, dry, or slightly damp cloth. Do not use abrasive cleaners or solvents.
- **Battery Replacement:** If using battery power, replace all batteries simultaneously when the display dims or functions become unreliable. Ensure correct polarity. Dispose of old batteries responsibly.
- **Storage:** If storing the device for an extended period, remove the batteries to prevent leakage.

8. TROUBLESHOOTING

Problem	Possible Cause	Solution
Display is blank or dim.	No power, low batteries, or power-saving mode.	• Ensure USB cable is securely connected to a power source. • If using batteries, replace them with new ones. • Tap the top surface to activate the display from power-saving mode.
Alarm does not sound.	Alarm not set or deactivated.	• Verify that the alarm is set and the alarm icon is visible on the display. • Ensure the alarm volume is not set to minimum (if adjustable).
Incorrect time or date.	Time/date not set correctly after power loss or initial setup.	• Follow the "Setting Time and Date" instructions in Section 6.1 to reset.
Temperature reading seems inaccurate.	Device placed near a heat source or vent.	• Relocate the alarm clock to a spot with stable ambient temperature.

9. SPECIFICATIONS

Brand	Tchibo
Model	TCM Cube LED Alarm Clock
Color	Beige (Wood Look)
Display Type	Digital LED
Special Features	Alarm, Snooze, Date Display, Temperature Display (°C/°F), 12/24-Hour Format, Touch-activated LED lighting (2 levels)
Power Source	USB Cable (included), Batteries (not included)
Material	Acrylonitrile Butadiene Styrene (ABS) Terpolymer
Dimensions (W x H x D)	Approx. 6.5 x 6.5 x 6.5 cm
USB Cable Length	Approx. 1.8 m
Mounting Type	Tabletop
Usage	Indoor
ASIN	B07XJJZB7Y
GTIN (UPC/EAN)	04006083797314

10. WARRANTY AND SUPPORT

For warranty information or technical support, please refer to the documentation provided at the time of purchase or contact Tchibo customer service. Keep your proof of purchase for warranty claims.
You can typically find contact information on the official Tchibo website or on the product packaging.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page's manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question

Open the live page

<https://manuals.plus/asin/B07XJJZB7Y>

More documents and user manuals: <https://manuals.plus/>