

[manuals.plus](#) /

› [MCombo](#) /

› [MCombo 10x30 Feet Outdoor Canopy Tent Wedding Party Waterproof Gazebo Pavilion with Removable Sidewalls 6053 \(White\) \(10'x30'-7pc / White\) User Manual](#)

MCombo 6053

MCombo 10x30 Feet Outdoor Canopy Tent User Manual

MODEL: 6053

1. Safety Information

Please read and understand all safety warnings before assembly and use. Failure to follow these instructions may result in injury or damage to the product.

- This canopy tent is designed for temporary use in garden and leisure events during good weather conditions. It is not intended for permanent installation.
- **Do NOT** leave the canopy up overnight, during rain, strong winds, or any other adverse weather conditions. The tent is meant for temporary use and can be damaged or cause damage in severe weather.
- To enhance stability, especially in light wind, the use of sandbags or heavier metal stakes is highly recommended. The provided stakes may not be sufficient in all conditions.
- The polyethylene fabric of this party tent is **NOT fireproof**. Keep the tent away from all sources of fire, open flames, heaters, and any other heat-generating appliances.
- Ensure the assembly area is clear of obstructions and hazards.

2. Product Overview

The MCombo 10x30 Feet Outdoor Canopy Tent is a versatile and spacious shelter designed for various outdoor events. It provides ample shade and protection from the elements, making it ideal for parties, weddings, family gatherings, and more.



Figure 2.1: Fully assembled MCombo 10x30 Feet Outdoor Canopy Tent.

- **Shade and Comfort:** The durable waterproof polyethylene canopy blocks up to 90% of UV sunlight, providing a comfortable shaded area.
- **Spacious Design:** With dimensions of 10x30 feet, this pavilion offers an extra-large space capable of accommodating approximately 50 people.
- **Removable Sidewalls:** The tent features removable sidewalls (90gm PE with UV protection) that can be easily detached for open-air exhibits, improved airflow, or to enjoy the sunshine. The top cover is 100gm PE.
- **Versatile Usage:** Perfect for wedding events, birthday parties, family gatherings, meetings, camping, and even as a temporary car shelter.



Figure 2.2: The canopy tent providing shade for an outdoor gathering.

3. Package Contents

Upon opening the package, please verify that all components listed below are present and undamaged. If any parts are missing or damaged, please contact MCombo customer service immediately.



Figure 3.1: Typical packaging of canopy tent components.

- Steel Frame Poles (various lengths and types for roof and legs)
- Connectors (for joining poles)
- Canopy Top Cover (100gm PE)
- Removable Sidewalls (90gm PE with UV protection, typically 7 pieces for this model)
- Ropes and Stakes (for securing the tent)
- Instruction Manual

4. Setup Instructions

Assembly of the MCombo canopy tent is straightforward. It is recommended to have at least two people for assembly to ensure stability and ease of construction. Organize all parts before beginning.



Figure 4.1: Assembled frame structure of the canopy tent.

1. **Prepare the Area:** Choose a flat, level surface for assembly, clear of any sharp objects or debris. Ensure adequate space for the 10x30 feet footprint.
2. **Unpack and Sort:** Lay out all poles and connectors. Group similar parts together to make identification easier. Refer to the included specific installation manual for part identification.
3. **Assemble the Roof Frame:** Begin by connecting the shorter poles and connectors to form the rectangular roof frame. Ensure all connections are secure.

4. **Attach Leg Poles:** Once the roof frame is complete, attach the longer leg poles to the corner and intermediate connectors. Gradually raise the structure, ensuring it remains steady.
5. **Drape the Canopy Top:** Carefully drape the main canopy top cover over the assembled frame. Ensure it is centered and evenly distributed.
6. **Secure the Canopy:** Fasten the canopy top to the frame using any integrated ties or fasteners. Ensure it is taut to prevent water pooling.
7. **Attach Sidewalls:** If desired, attach the sidewalls using the provided fasteners (e.g., Velcro, ties) along the perimeter of the tent. The sidewalls can be rolled up or removed as needed.
8. **Anchor the Tent:** Use the provided ropes and stakes to anchor the tent securely to the ground. For increased stability, especially in areas prone to wind, consider purchasing and using heavier-duty stakes or sandbags.



Figure 4.2: Detail of the high-quality, rustproof steel frame and connectors.

5. Operating the Canopy Tent

The MCombo canopy tent is designed for ease of use and adaptability for various outdoor scenarios.

- **Event Use:** Utilize the tent for providing shade and shelter during outdoor events such as weddings, birthday parties, or family gatherings.
- **Sidewall Management:** The removable sidewalls offer flexibility. Keep them attached for maximum shade and privacy, or remove them to create an open-air pavilion, allowing for better air circulation and an unobstructed view.
- **Temporary Shelter:** The tent can serve as a temporary shelter for vehicles or equipment, protecting them from sun and light rain.

PACKAGING



Figure 5.1: The waterproof polyethylene material ensures protection from light rain.

6. Maintenance

Proper maintenance will extend the lifespan of your canopy tent.

- **Cleaning:** Clean the polyethylene fabric with mild soap and water. Do not use harsh chemicals or abrasive cleaners, as they can damage the material. Rinse thoroughly and allow to air dry completely before storage.
- **Frame Care:** Inspect the steel frame periodically for any signs of rust or damage. Clean any dirt or debris from the poles and connectors.
- **Storage:** When not in use, disassemble the tent and store all components in a dry, cool place, away from direct sunlight and extreme temperatures. Ensure the fabric is completely dry to prevent mold and mildew.
- **Inspection:** Before each use, inspect all poles, connectors, and fabric for any tears, bends, or damage. Replace any damaged parts before assembly.

7. Troubleshooting

Here are solutions to common issues you might encounter:

Problem	Possible Cause	Solution
Tent is unstable or blows away easily.	Insufficient anchoring; light stakes.	Always use ropes and stakes. For added stability, use sandbags or heavier metal stakes (not included). Never use in high winds.
Canopy fabric tears during assembly.	Pipes are too long for the canopy; fabric stretched too tightly.	Ensure all pipes are correctly sized and fully inserted into connectors. Do not force the canopy onto the frame if it feels excessively tight. Some users have reported needing to adjust pipe lengths slightly. Contact customer service if fit is severely off.
Missing or bent parts upon arrival.	Shipping damage or packaging error.	Do not attempt to force bent parts. Contact MCombo customer service immediately with details and photos of the damaged/missing parts for replacement.
Water pooling on canopy top.	Canopy not taut or frame not level.	Ensure the frame is assembled on level ground. Re-adjust the canopy to be as taut as possible across the frame. Do not leave tent up during heavy rain.

8. Specifications

Detailed specifications for the MCombo 10x30 Feet Outdoor Canopy Tent:

Durable waterproof PE made



Figure 8.1: Approximate dimensions of the MCombo 10x30 Feet Canopy Tent.

Feature	Detail
Brand	MCombo
Model	6053
Product Dimensions	360 x 120 x 102 inches (30 x 10 x 8.5 feet)
Item Weight	52 Pounds
Material	Alloy Steel (Frame), Polyethylene (PE) (Canopy & Sidewalls)
Color	White
Water Resistance Level	Waterproof
Ultraviolet Light Protection	UPF 50+ (blocks up to 90% of UV sunlight)
Assembly Required	Yes

Feature	Detail
Recommended Uses	Party, Outdoor Activities

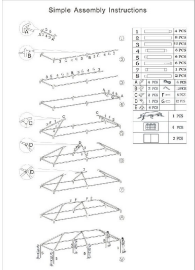 
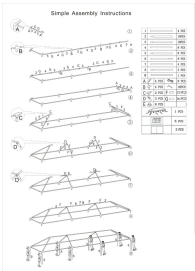 
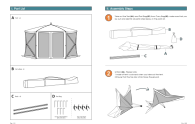 
9. Warranty and Support




For any questions regarding your MCombo 10x30 Feet Outdoor Canopy Tent, including parts, assembly, or troubleshooting not covered in this manual, please contact MCombo customer service.

Please refer to your purchase documentation or the MCombo official website for specific warranty terms and contact information.

MCombo Customer Service:
[Visit the MCombo Store on Amazon](#)

Related Documents - 6053

	<p>Mcombo 20 Ft. W x 10 Ft. D Steel Party Tent Canopy Assembly Instructions</p> <p>Detailed assembly instructions for the Mcombo 20 Ft. W x 10 Ft. D Steel Party Tent Canopy, including part identification and step-by-step guidance for setting up your canopy.</p>
	<p>MCombo Party Tent Assembly Instructions - Model ndck1021</p> <p>Step-by-step assembly instructions for the MCombo Party Tent (Model ndck1021, 6053-W1030w). Learn how to quickly and easily set up your party tent with clear diagrams and part lists.</p>
	<p>Mcombo Pop-Up Tent 6052-1024 Assembly Instructions</p> <p>Step-by-step guide to assembling the Mcombo Pop-Up Tent model 6052-1024, including a parts list and detailed instructions for setup.</p>

 OWNER'S MANUAL TELEVISION STAND <small>6377-TV325</small>	<p>MCombo 6377-TV325 Television Stand Owner's Manual and Assembly Instructions</p> <p>Comprehensive guide for the MCombo 6377-TV325 television stand, including product precautions, assembly steps, parts list, hardware details, warranty, and customer support information.</p>
	<p>Mcombo Oversized Kids Recliner Assembly Instructions and Product Guide</p> <p>Comprehensive guide to assembling and using the Mcombo Oversized Kids Recliner, including parts identification, safety warnings, and warranty details. Learn how to assemble, recline, and maintain your child's recliner.</p>
 OWNER'S MANUAL WINDOW AWNING	<p>MCombo Window Awning Owner's Manual</p> <p>Owner's manual for MCombo Window Awnings (models 6055-4040, 6055-4080, 6055-4012) providing safety guidelines, assembly instructions, return policy, customer support, and warranty information.</p>