

TRIXIE 201011

TRIXIE Double Branch New Premium Dog Leash User Manual

Model: 201011

1. INTRODUCTION

Thank you for choosing the TRIXIE Double Branch New Premium Dog Leash. This manual provides essential information for the proper use, care, and maintenance of your new leash. Designed for durability and versatility, this leash is ideal for walking one or two dogs, offering comfort and control.

This specific model is the X-Small size, featuring a pink flat strap, 2 meters in length and 10 mm in width.

2. PRODUCT FEATURES

- **Flat Strap Design:** Ensures comfort and durability.
- **Three Adjustment Positions:** Allows for versatile length adjustments to suit different walking needs or to accommodate two dogs.
- **Extra Hook:** Conveniently located for attaching an ID tag, waste bag dispenser, or a small flash light.
- **Durable Material:** Constructed from high-quality nylon for long-lasting use.
- **Secure Metal Hardware:** Features robust metal clasps and rings for reliable attachment.

3. SETUP AND INITIAL USE

The TRIXIE Double Branch New Premium Dog Leash is designed for straightforward use. Follow these steps for initial setup:

1. **Unpack the Leash:** Carefully remove the leash from its packaging.
2. **Inspect the Leash:** Before first use, check all components, including the strap, clasps, and rings, for any signs of damage or defects. Do not use if any part appears compromised.
3. **Attaching to Collar/Harness:**
 - For a single dog: Attach one of the main clasps to your dog's collar or harness D-ring.
 - For two dogs: Attach each of the two main clasps to the respective collars or harnesses of your dogs.
4. **Adjusting Length:** Utilize the three adjustment positions by moving the metal ring along the strap and re-clasping to achieve the desired length for walking or training.

5. **Using the Extra Hook:** The small extra hook can be used to attach an ID tag, a small waste bag dispenser, or a compact LED light for visibility.



Figure 1: Overview of the TRIXIE Double Branch New Premium Dog Leash, highlighting its flat strap and metal hardware.

4. OPERATING INSTRUCTIONS

Once properly set up, the TRIXIE Double Branch New Premium Dog Leash provides reliable control during walks.

- **Single Dog Use:** When walking one dog, you can use either branch or connect both ends to form a loop for a shorter, more controlled lead. The adjustment rings allow for varying lengths.
- **Two Dog Use:** Attach each branch to a separate dog's collar or harness. This design helps prevent tangling and allows for simultaneous walking of two dogs with a single handle point.
- **Maintaining Control:** Always maintain a firm but gentle grip on the leash. Be aware of your surroundings and your dog's behavior.
- **Safety First:** Never leave your dog unattended while attached to the leash. Ensure the leash is not chewed or damaged during use.

5. MAINTENANCE AND CARE

Proper care will extend the life of your TRIXIE Double Branch New Premium Dog Leash.

- **Cleaning:** The nylon strap can be hand-washed with mild soap and warm water. Rinse thoroughly and allow to air dry completely before re-use. Do not use harsh chemicals or bleach.
- **Metal Hardware:** Periodically check the metal clasps and rings for rust or corrosion. Clean with a damp cloth and dry immediately. If clasps become stiff, a small amount of silicone spray can be applied, avoiding contact with the fabric.
- **Storage:** Store the leash in a dry place away from direct sunlight when not in use.
- **Regular Inspection:** Routinely inspect the entire leash for signs of wear and tear, such as fraying, cuts, or weakened stitching on the strap, and bent or broken metal parts. Replace the leash immediately if any damage is found to ensure your pet's safety.

6. TROUBLESHOOTING

Most issues with the leash can be resolved with simple checks.

- **Leash Tangling (Two Dogs):** Ensure both dogs are walking at a similar pace and on the same side. Adjusting the leash length using the three positions can help manage the distance between dogs.
- **Clasp Sticking:** If a metal clasp becomes difficult to open or close, clean it thoroughly to remove any dirt or debris. A small amount of lubricant (e.g., silicone spray) can be applied to the moving parts, ensuring it does not get on the fabric.
- **Strap Fraying:** Fraying indicates wear. If fraying is significant or compromises the integrity of the leash, discontinue

use immediately and replace the product.

7. SPECIFICATIONS

Attribute	Detail
Brand	TRIXIE
Model Name	Trixie Double Branch New Premium
Item Model Number	201011
Color	pink
Size	X-Small (2 m / 10 mm)
Material	Nylon
Item Weight	3.17 ounces (0.09 Kilograms)
Product Dimensions (LxW)	78.74 inches x 0.39 inches (200 cm x 1 cm)
Number of Items	1
Manufacturer	Trixie
Date First Available	October 28, 2019

8. WARRANTY AND SUPPORT

TRIXIE products are manufactured to high quality standards. While specific warranty details are not provided in this manual, please retain your proof of purchase.

For any questions, concerns, or support regarding your TRIXIE Double Branch New Premium Dog Leash, please contact the manufacturer directly or the retailer from whom you purchased the product. Contact information can typically be found on the product packaging or the official TRIXIE website.

Always ensure you are purchasing genuine TRIXIE products from authorized sellers to guarantee product authenticity and eligibility for support.

ASK A QUESTION ABOUT THIS MANUAL

Ask about setup, troubleshooting, compatibility, parts, safety, or missing instructions. Manuals+ will review the question and use this page’s manual context to help answer it.

Name

Anonymous

Email

you@example.com

After a successful submission, we securely hash the supplied account or form email before sending it to Microsoft Advertising for conversion attribution. [Privacy details](#).

Question

Example: How do I reset this device or fix this error?

Details

Model number, symptoms, what you tried, or the section of the manual you are using.

Submit question